



BOLT
(x44)



GLIDE
(x4)




#10 CAM LOCK
(x44)




#10 SCREW CAP
(x8)



TOP TABLE (x1)

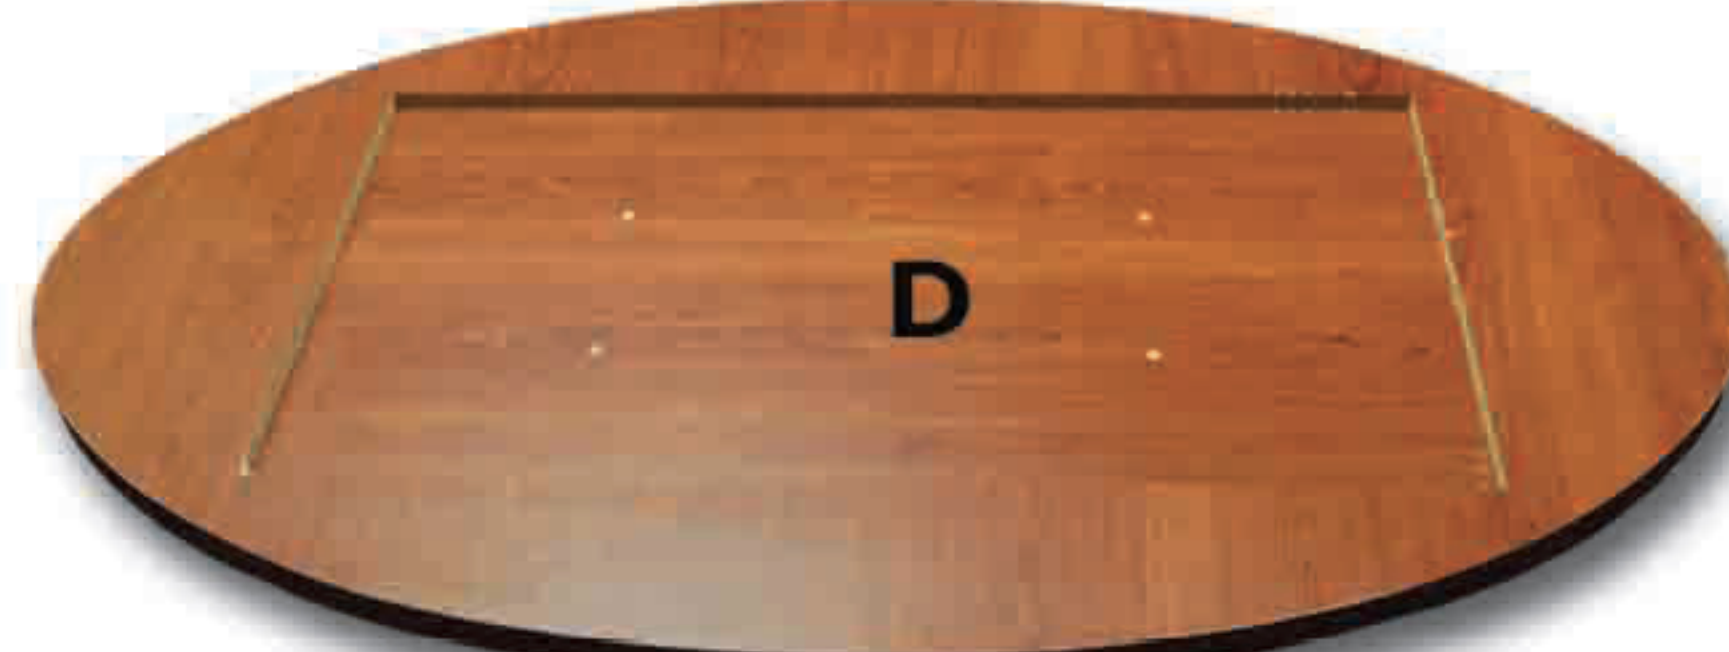


MIDDLE TABLE (x1)

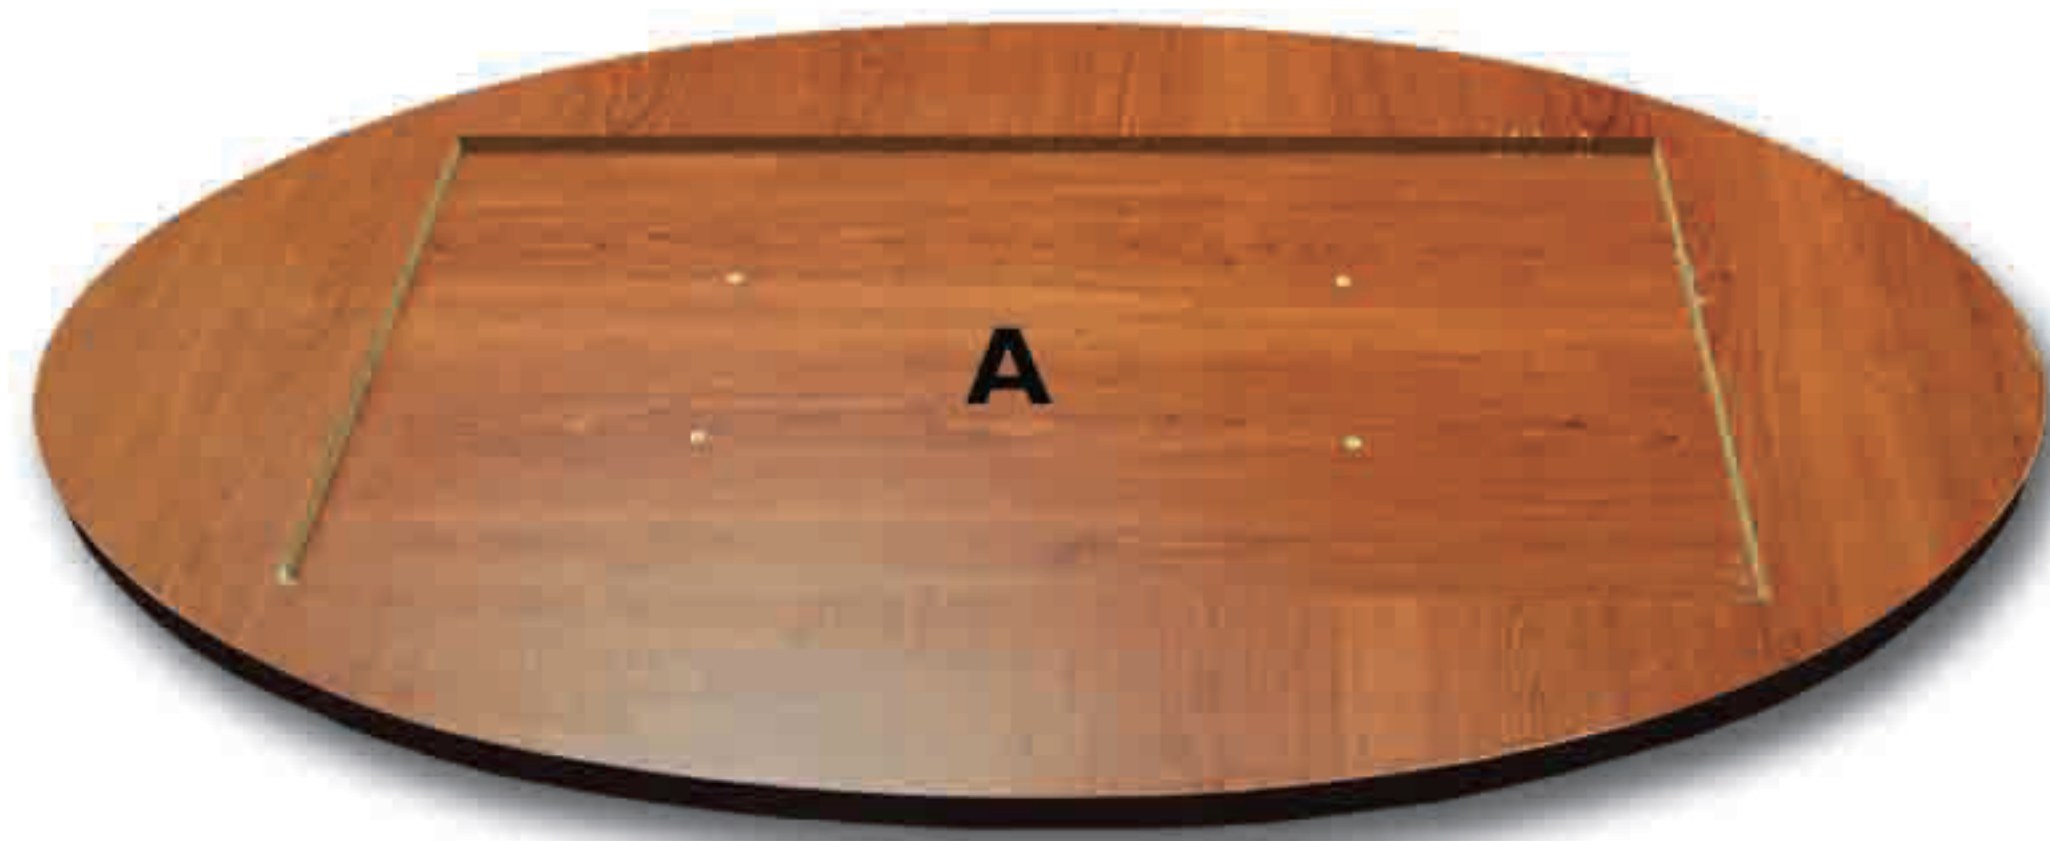


BOTTOM TABLE (x1)



TOP STAND PANEL (x2)

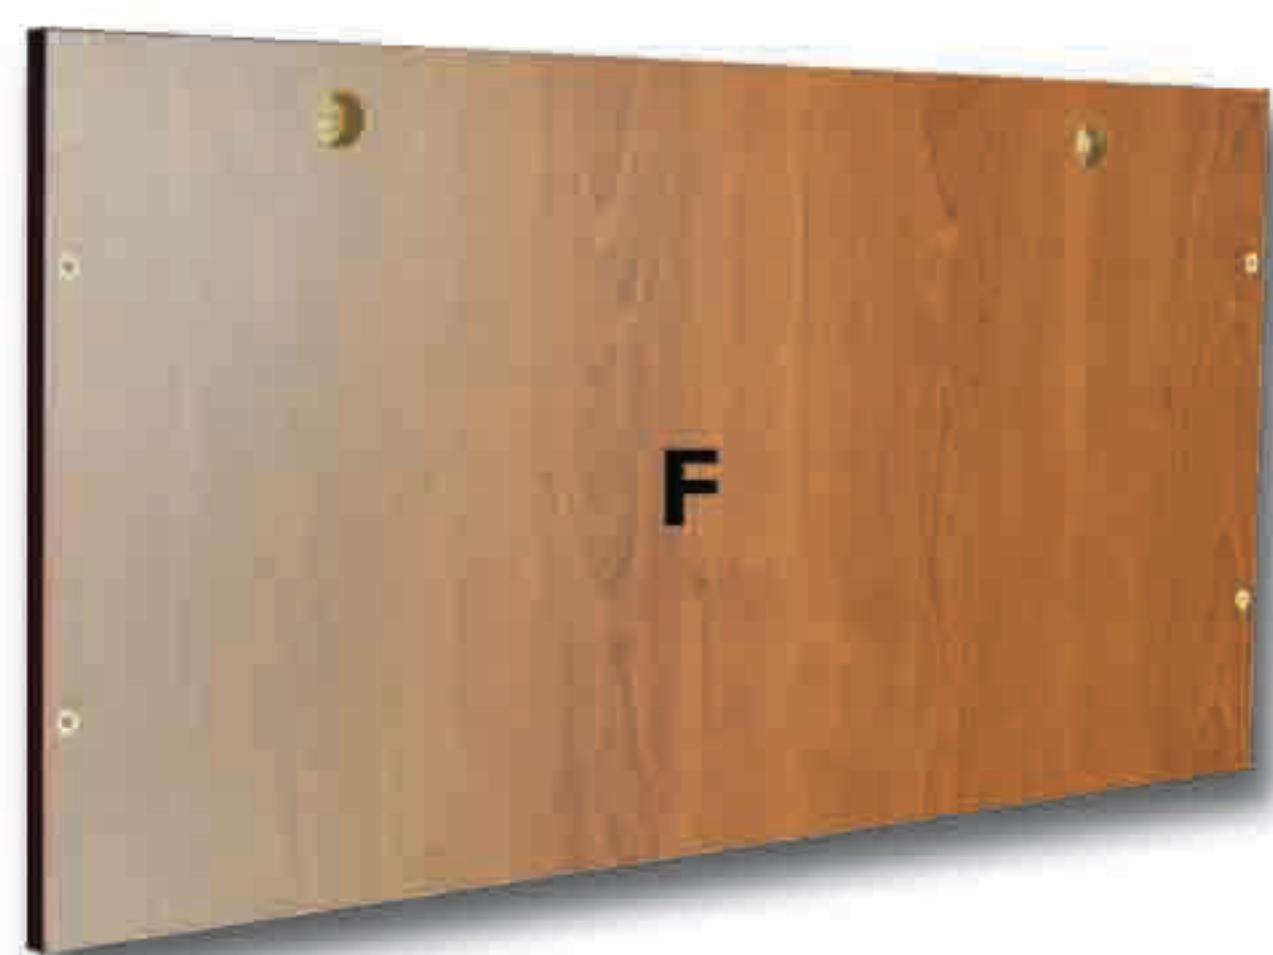

MIDDLE STAND PANEL (x2)

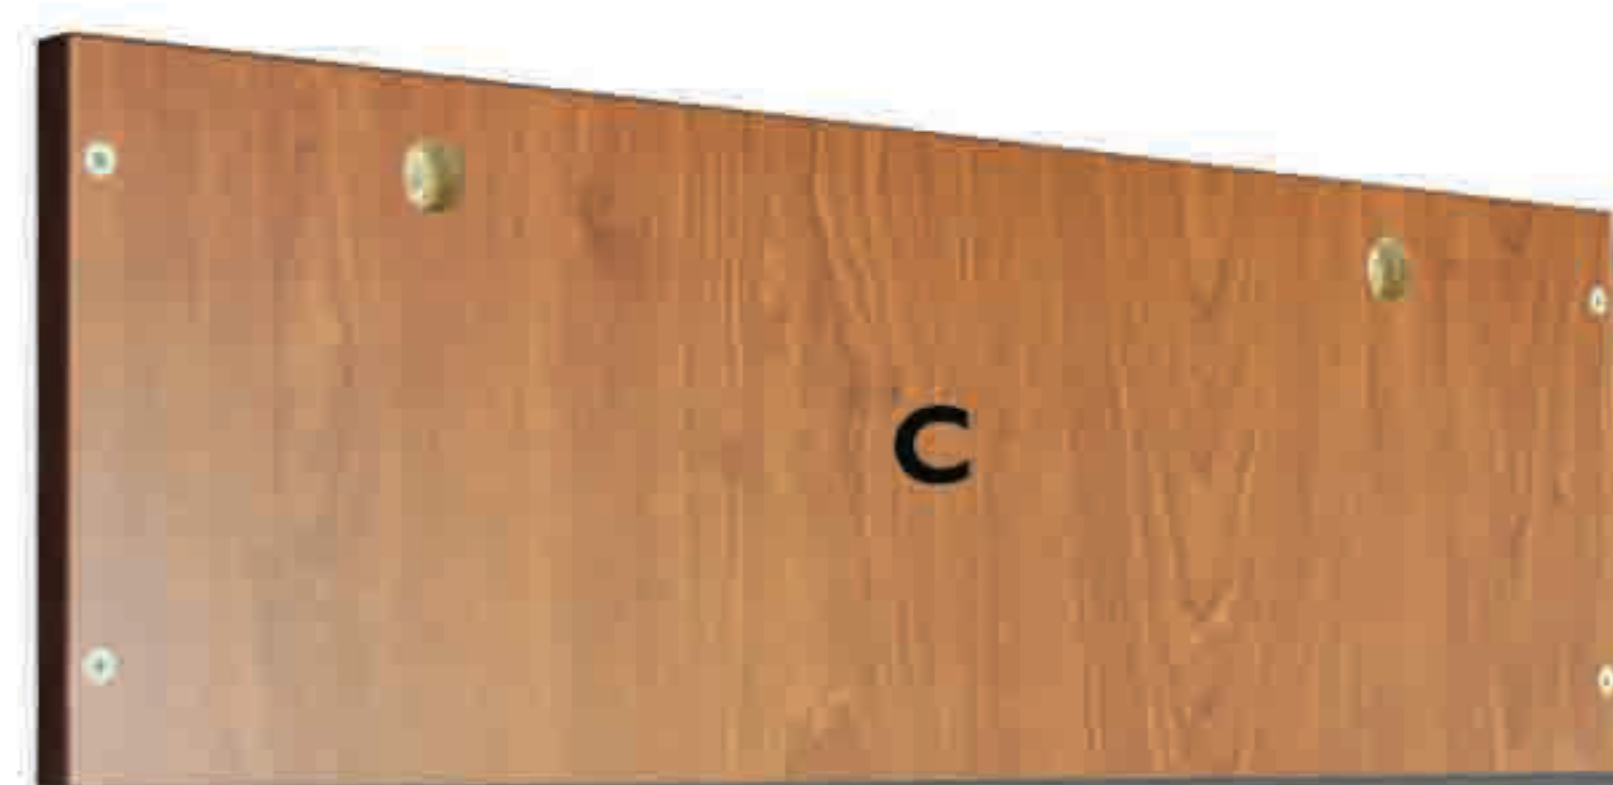


TOE KICK (x2)



TOP STAND SIDE
PANEL (x2)



MIDDLE STAND SIDE
PANEL (x2)

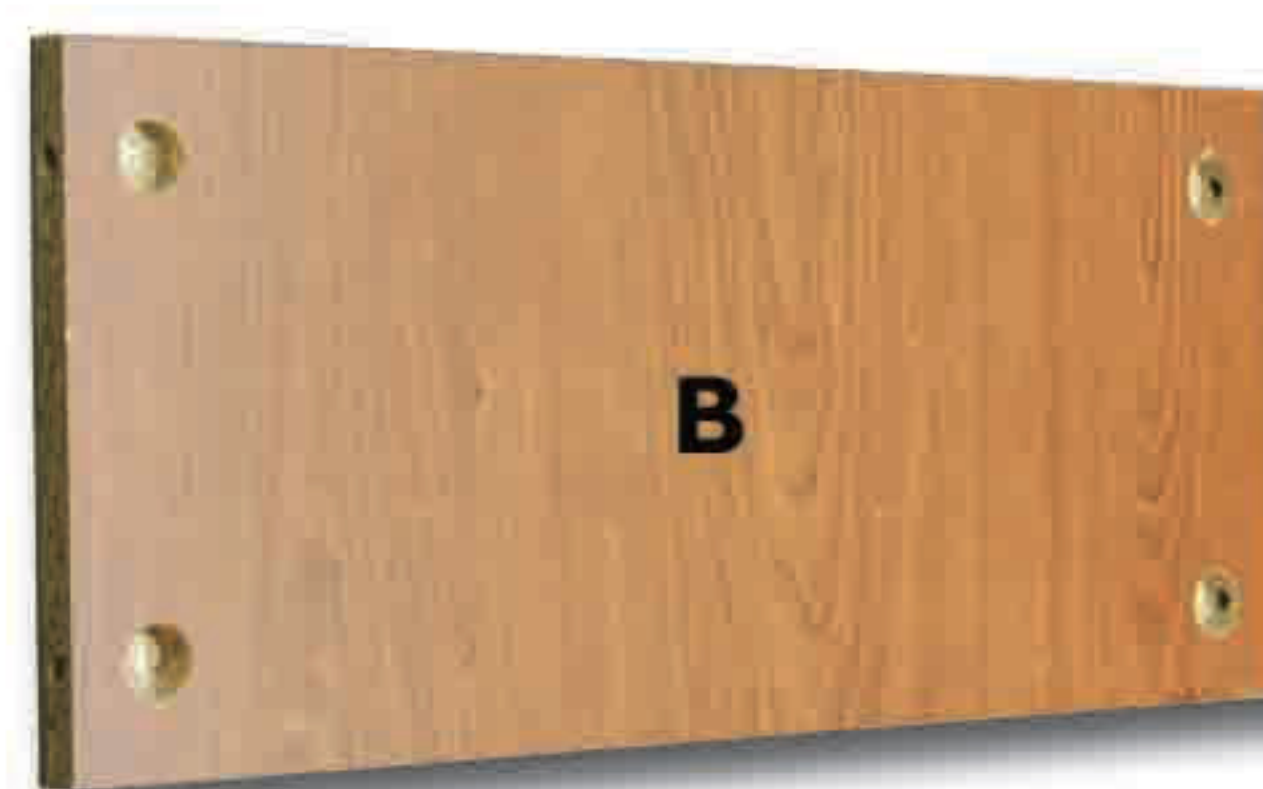

SIDE TOE KICK (x2)

3TIER TABLE-OVAL SHAPE ASSEMBLY INSTRUCTIONS



DAWSON JONES
STORE FIXTURES



2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

TOOLS NEEDED



NOTE: It is recommended that two persons assemble this unit.

1.

BOTTOM TABLE ASSEMBLE

BOTTOM TABLE (x1)
TOE KICK (x2)
SIDE TOE KICK (x2)
#10 CAM LOCK (x12)
BOLT (x12)
GLIDE (x4)

1. Connect toe kick to side toe kick using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other toe kick to side toe kicks.
4. Attach glides on the toe kick.
5. Connect toe kicks to bottom table using bolts.
6. Insert and tighten #10 cam locks.
7. Sit bottom table on floor.



2.

MIDDLE TABLE ASSEMBLE

MIDDLE TABLE (x1)
MIDDLE STAND PANEL (x2)
MIDDLE STAND SIDE PANEL (x2)
#10 CAM LOCK (x16)
BOLT (x16)
#10 SCREW CAP (x4)

1. Connect middle stand panel to middle stand side panel using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other middle stand panel to middle stand side panels.
4. Connect middle stand to bottom table using bolts.
5. Insert and tighten #10 cam locks.
6. Connect middle table to middle stand using bolts.
7. Insert and tighten #10 cam locks.
8. Install #10 screw caps.



3.

TOP TABLE ASSEMBLE

TOP TABLE (x1)

TOP STAND PANEL (x2)

TOP STAND SIDE PANEL (x2)

#10 CAM LOCK (x16)

BOLT (x16)

#10 SCREW CAP (x4)

1. Connect top stand panel to top stand side panel using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other top stand panel to top stand side panels.
4. Connect top stand to middle table using bolts.
5. Insert and tighten #10 cam locks.
6. Connect top table to top stand using bolts.
7. Insert and tighten #10 cam locks.
8. Install #10 screw caps.

