



BOLT
(x44)




GLIDE
(x4)



#10 CAM LOCK
(x44)



#10 SCREW CAP
(x8)

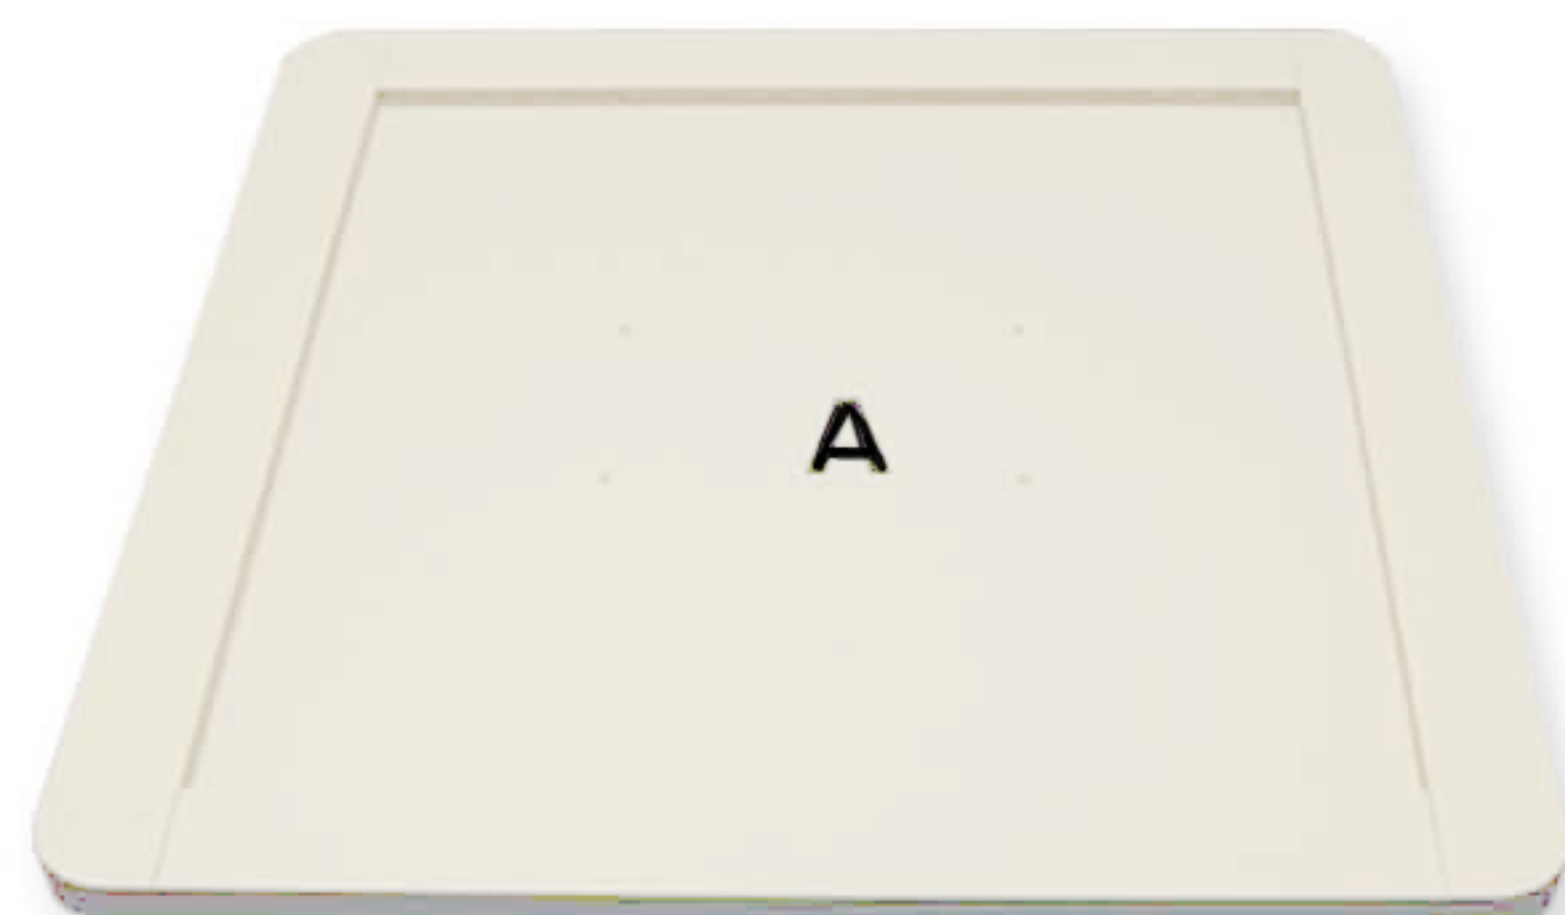


BOTTOM TABLE (x1)



MIDDLE TABLE (x1)




TOP TABLE (x1)

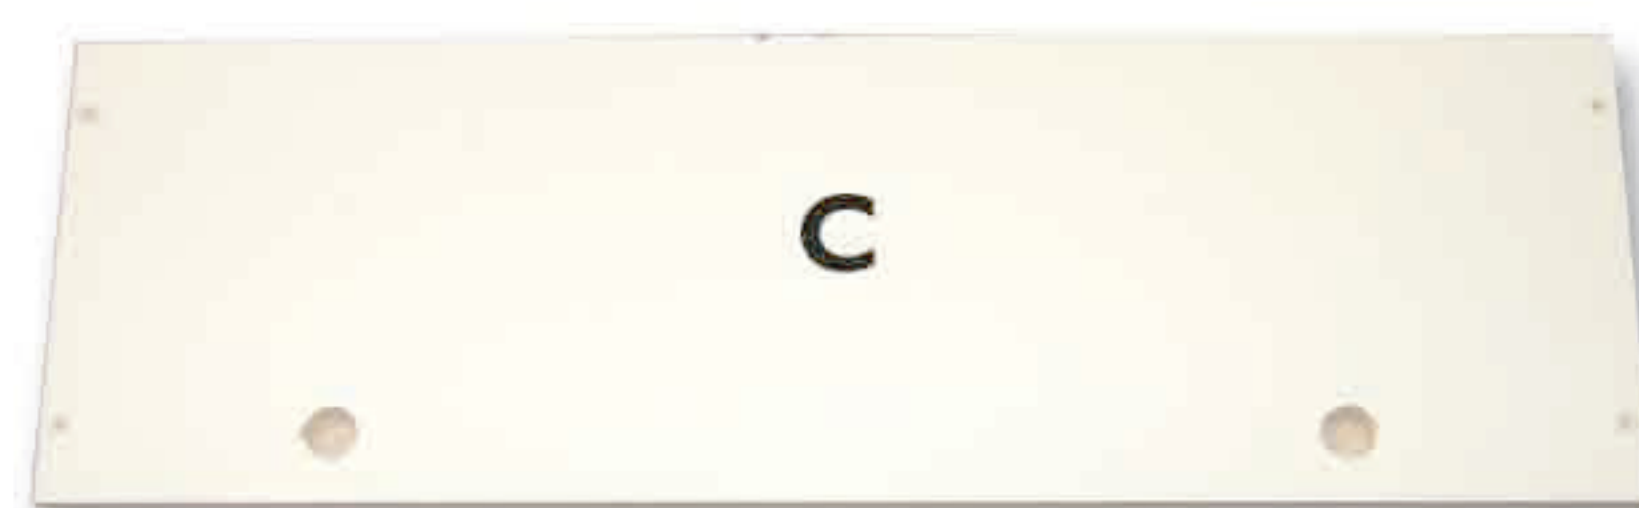

TOE KICK (x2)



MIDDLE STAND PANEL (x2)

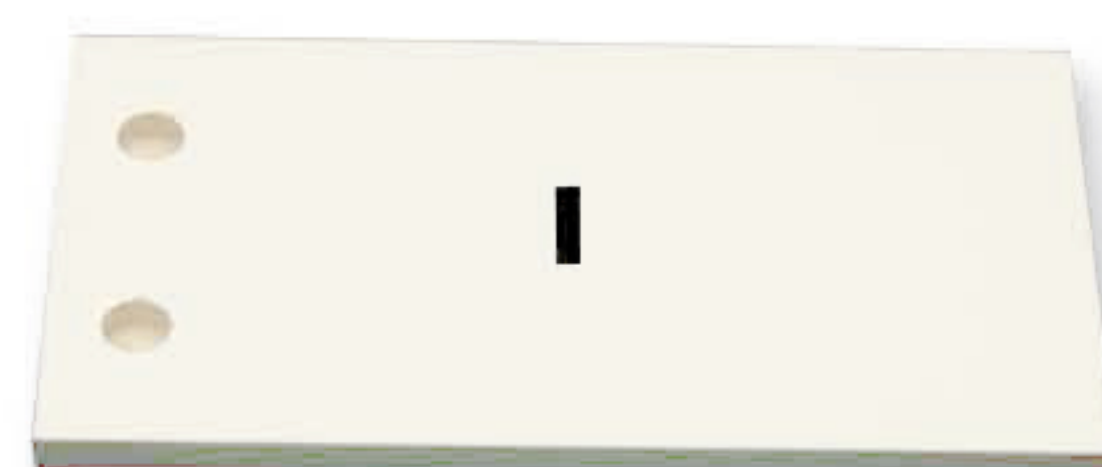

TOP STAND PANEL (x2)



**TOP STAND SIDE
PANEL (x2)**



**MIDDLE STAND SIDE
PANEL (x2)**



**SIDE TOE KICK
(x2)**

3TIER TABLE-SQUARE SHAPE ASSEMBLY INSTRUCTIONS



DAWSON JONES
.....
STORE FIXTURES



2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

TOOLS NEEDED




NOTE: It is recommended that two persons assemble this unit.

I.

BOTTOM TABLE ASSEMBLE

BOTTOM TABLE (x1)
TOE KICK (x2)
SIDE TOE KICK (x2)
#10 CAM LOCK (x12)
BOLT (x12)
GLIDE (x4)

1. Connect toe kick to side toe kick using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other toe kick to side toe kicks.
4. Attach glides on the toe kick.
5. Connect toe kicks to bottom table using bolts.
6. Insert and tighten #10 cam locks.
7. Sit bottom table on floor.




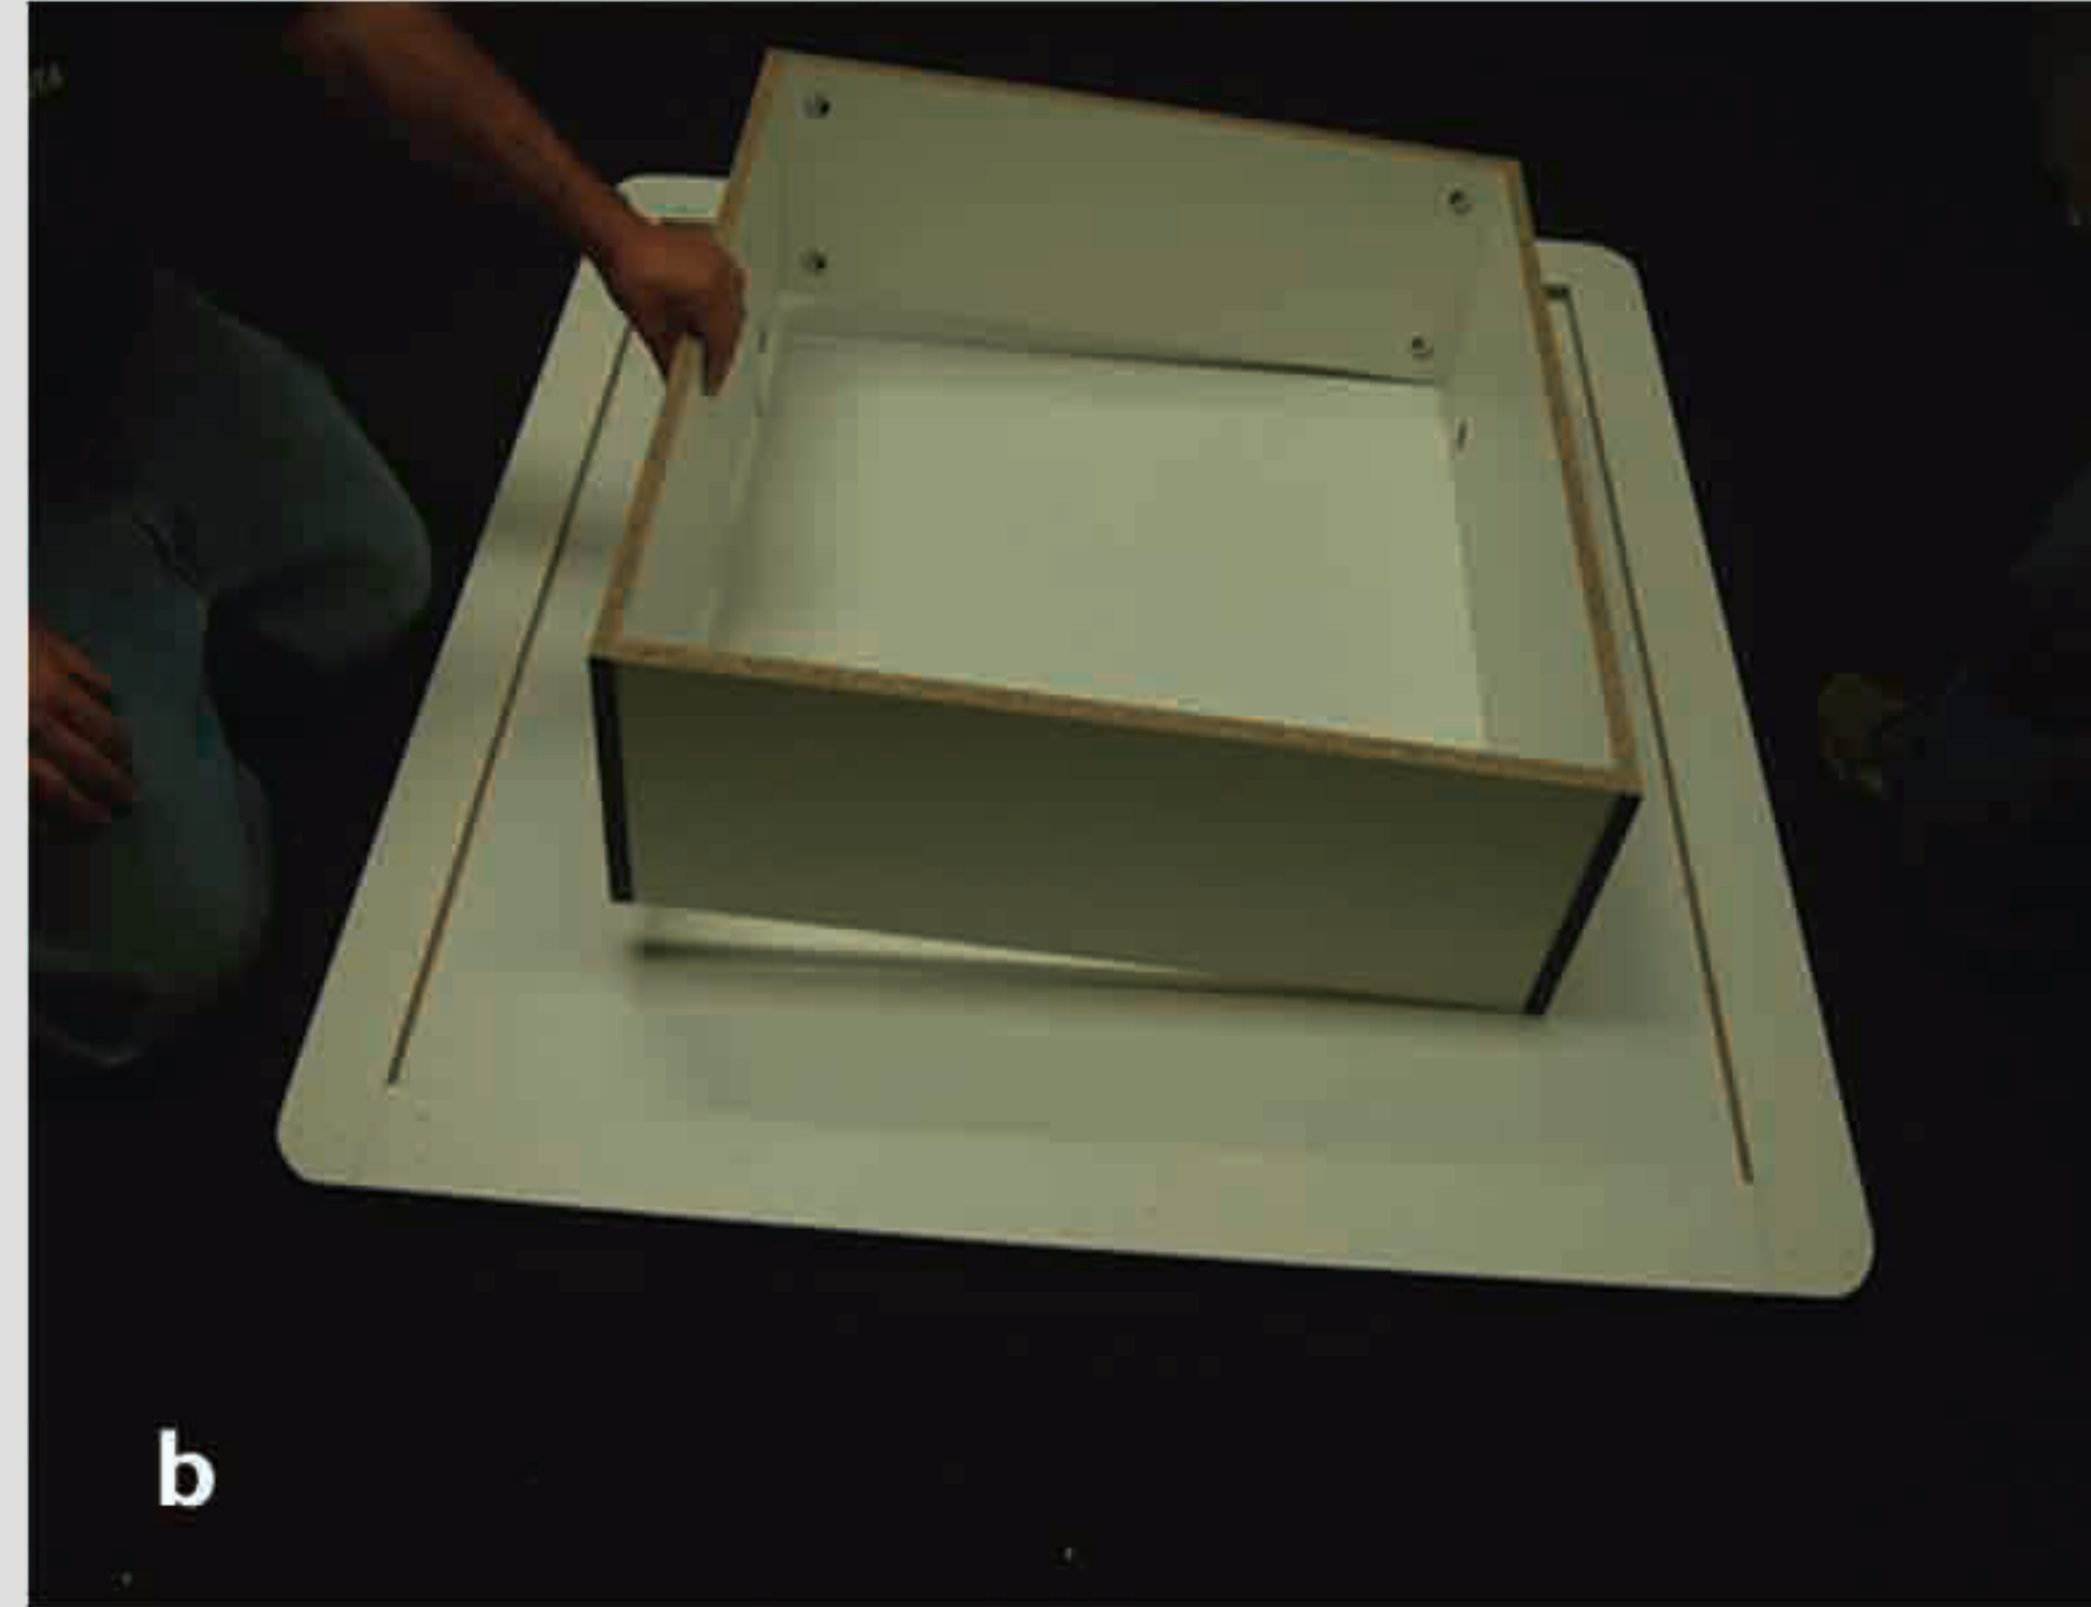


2.

MIDDLE TABLE ASSEMBLE

MIDDLE TABLE (x1)
MIDDLE STAND PANEL (x2)
MIDDLE STAND SIDE PANEL (x2)
#10 CAM LOCK (x16)
BOLT (x16)
#10 SCREW CAP (x4)

1. Connect middle stand panel to middle stand side panel using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other middle stand panel to middle stand side panels.
4. Connect middle stand to bottom table using bolts.
5. Insert and tighten #10 cam locks.
6. Connect middle table to middle stand using bolts.
7. Insert and tighten #10 cam locks.
8. Install #10 screw caps.

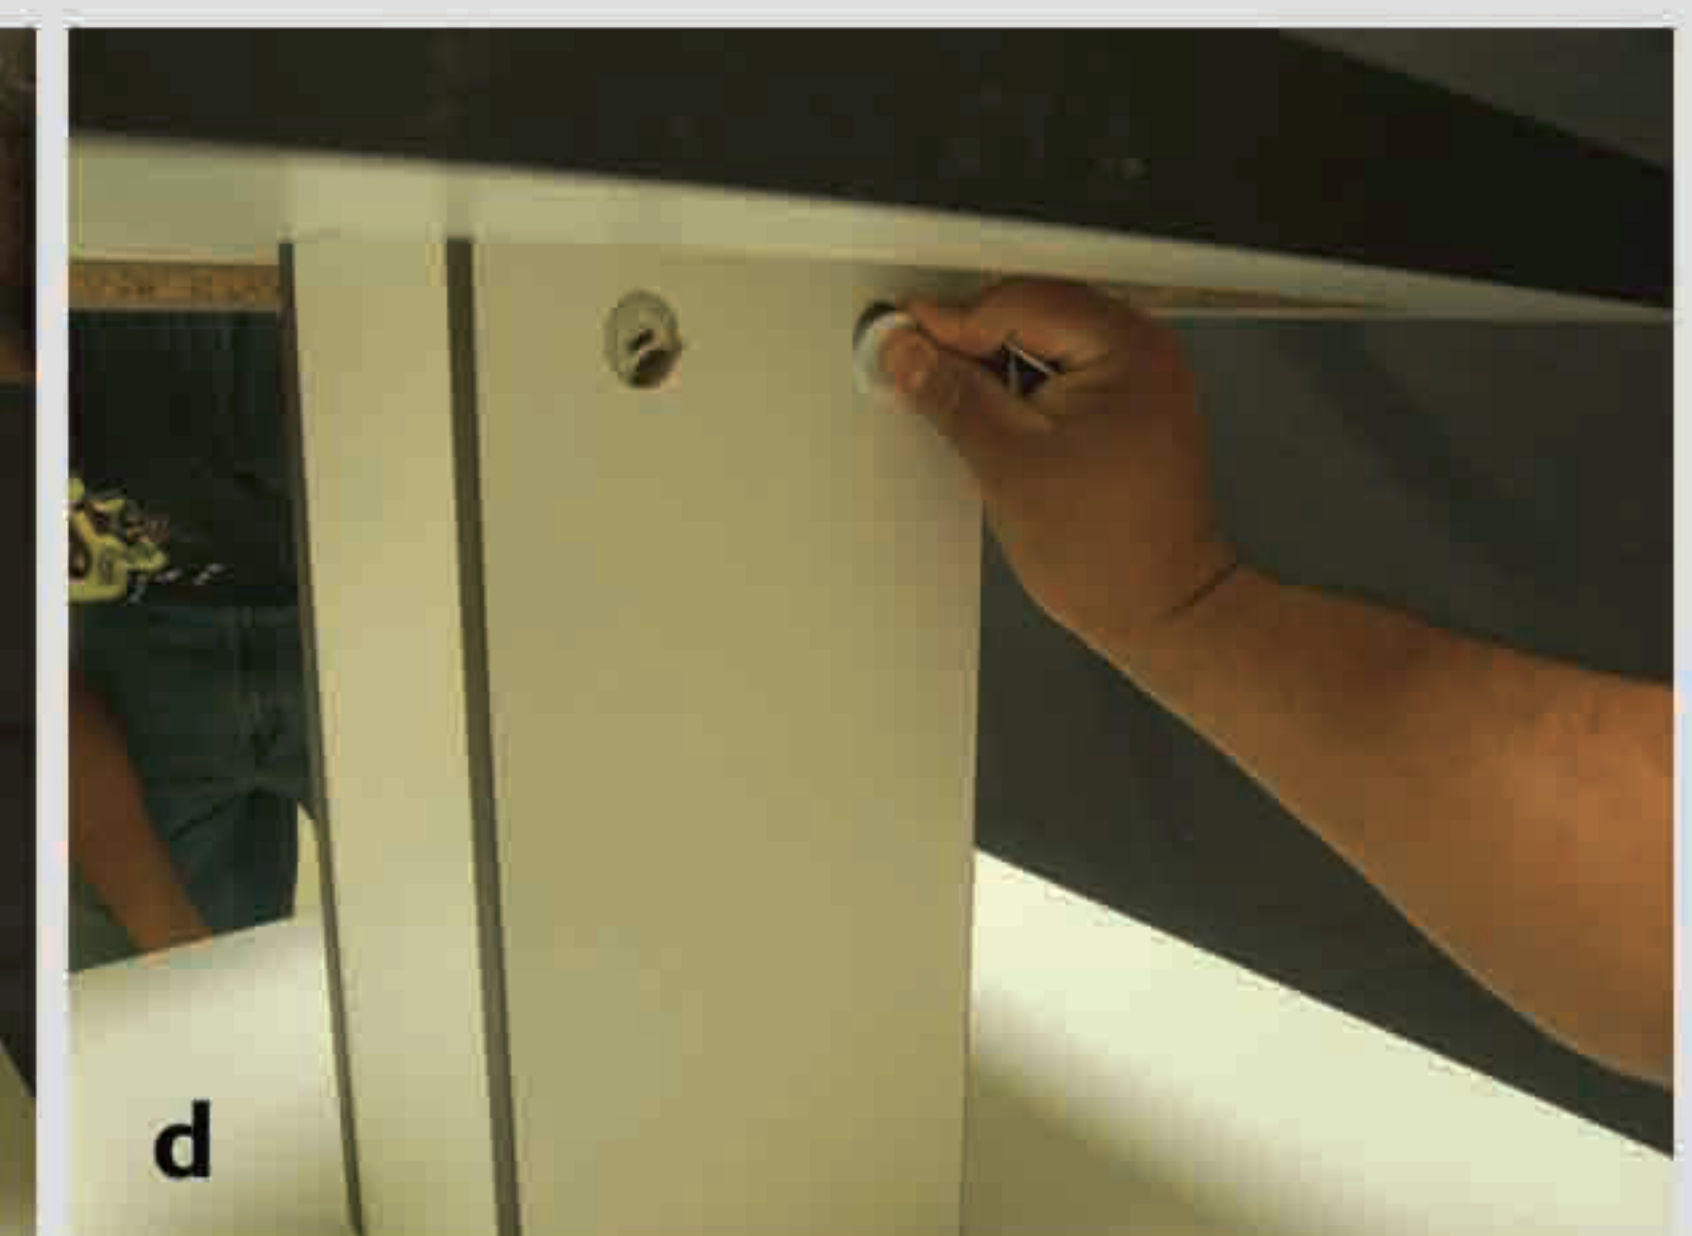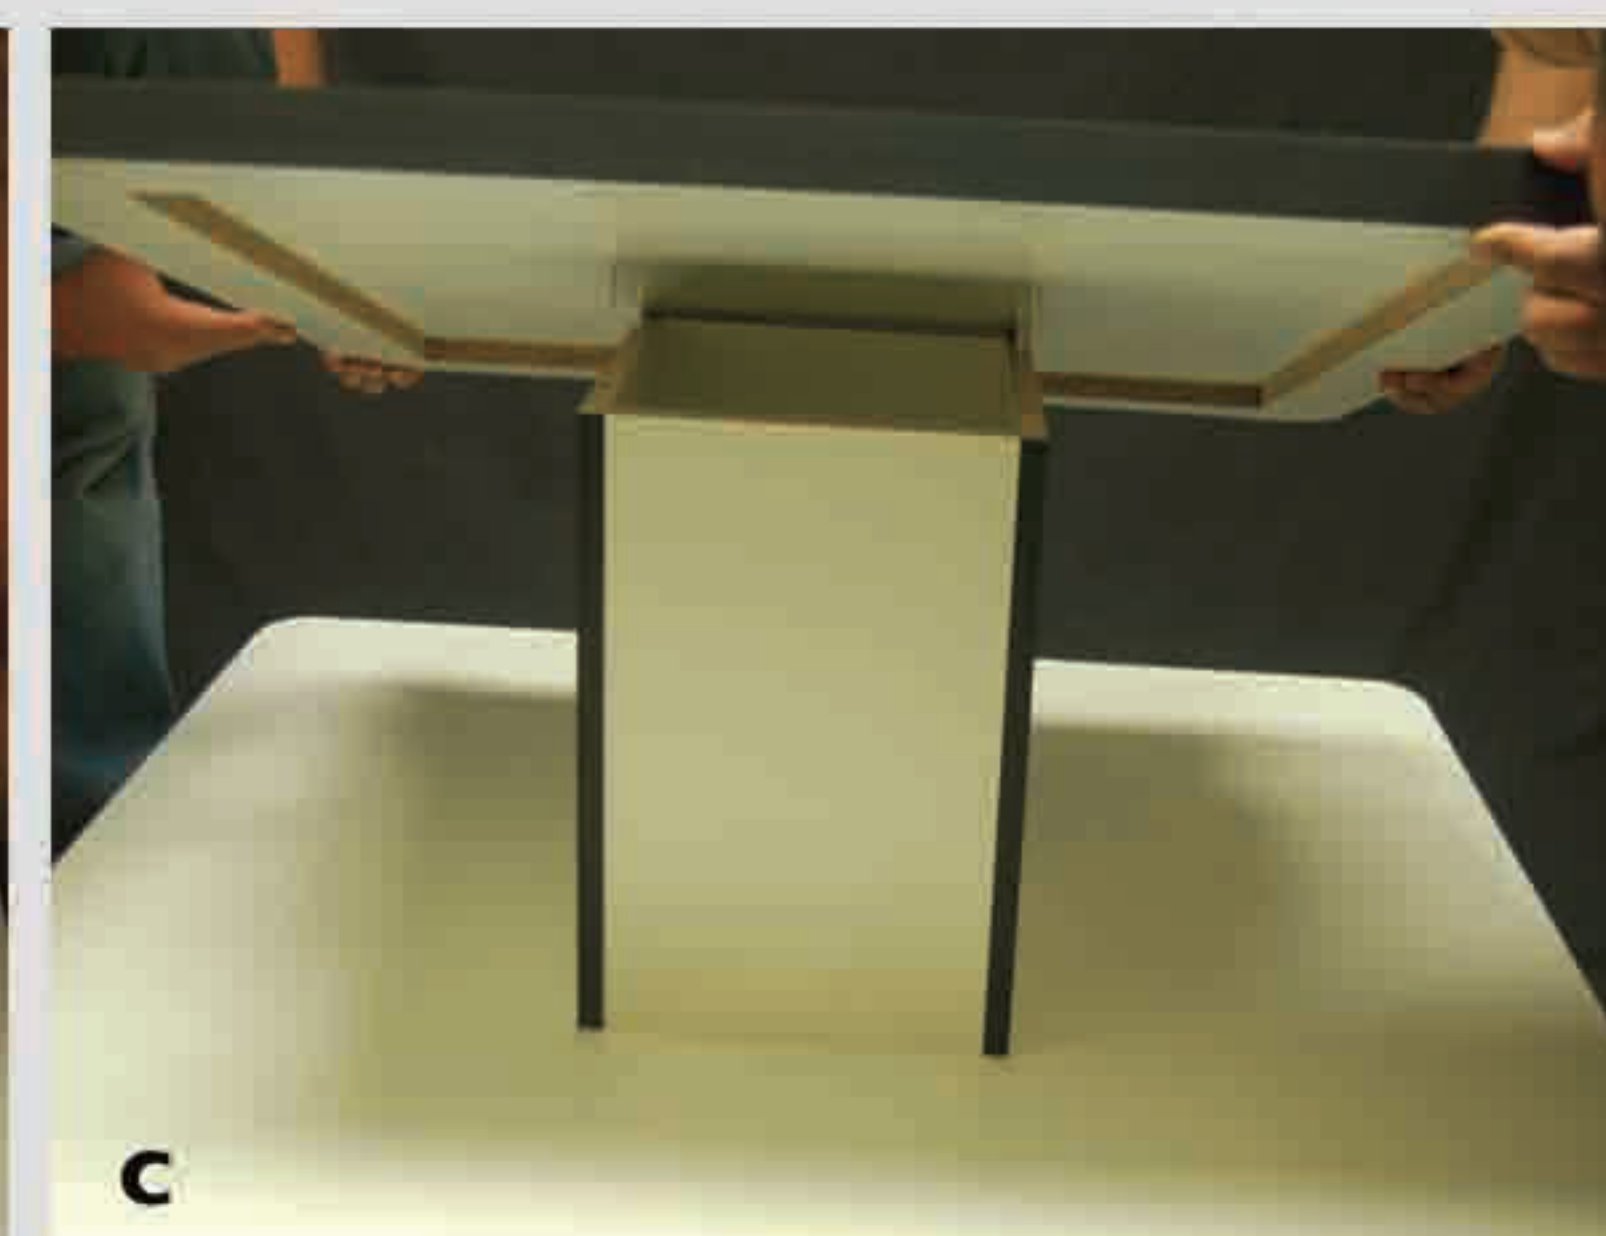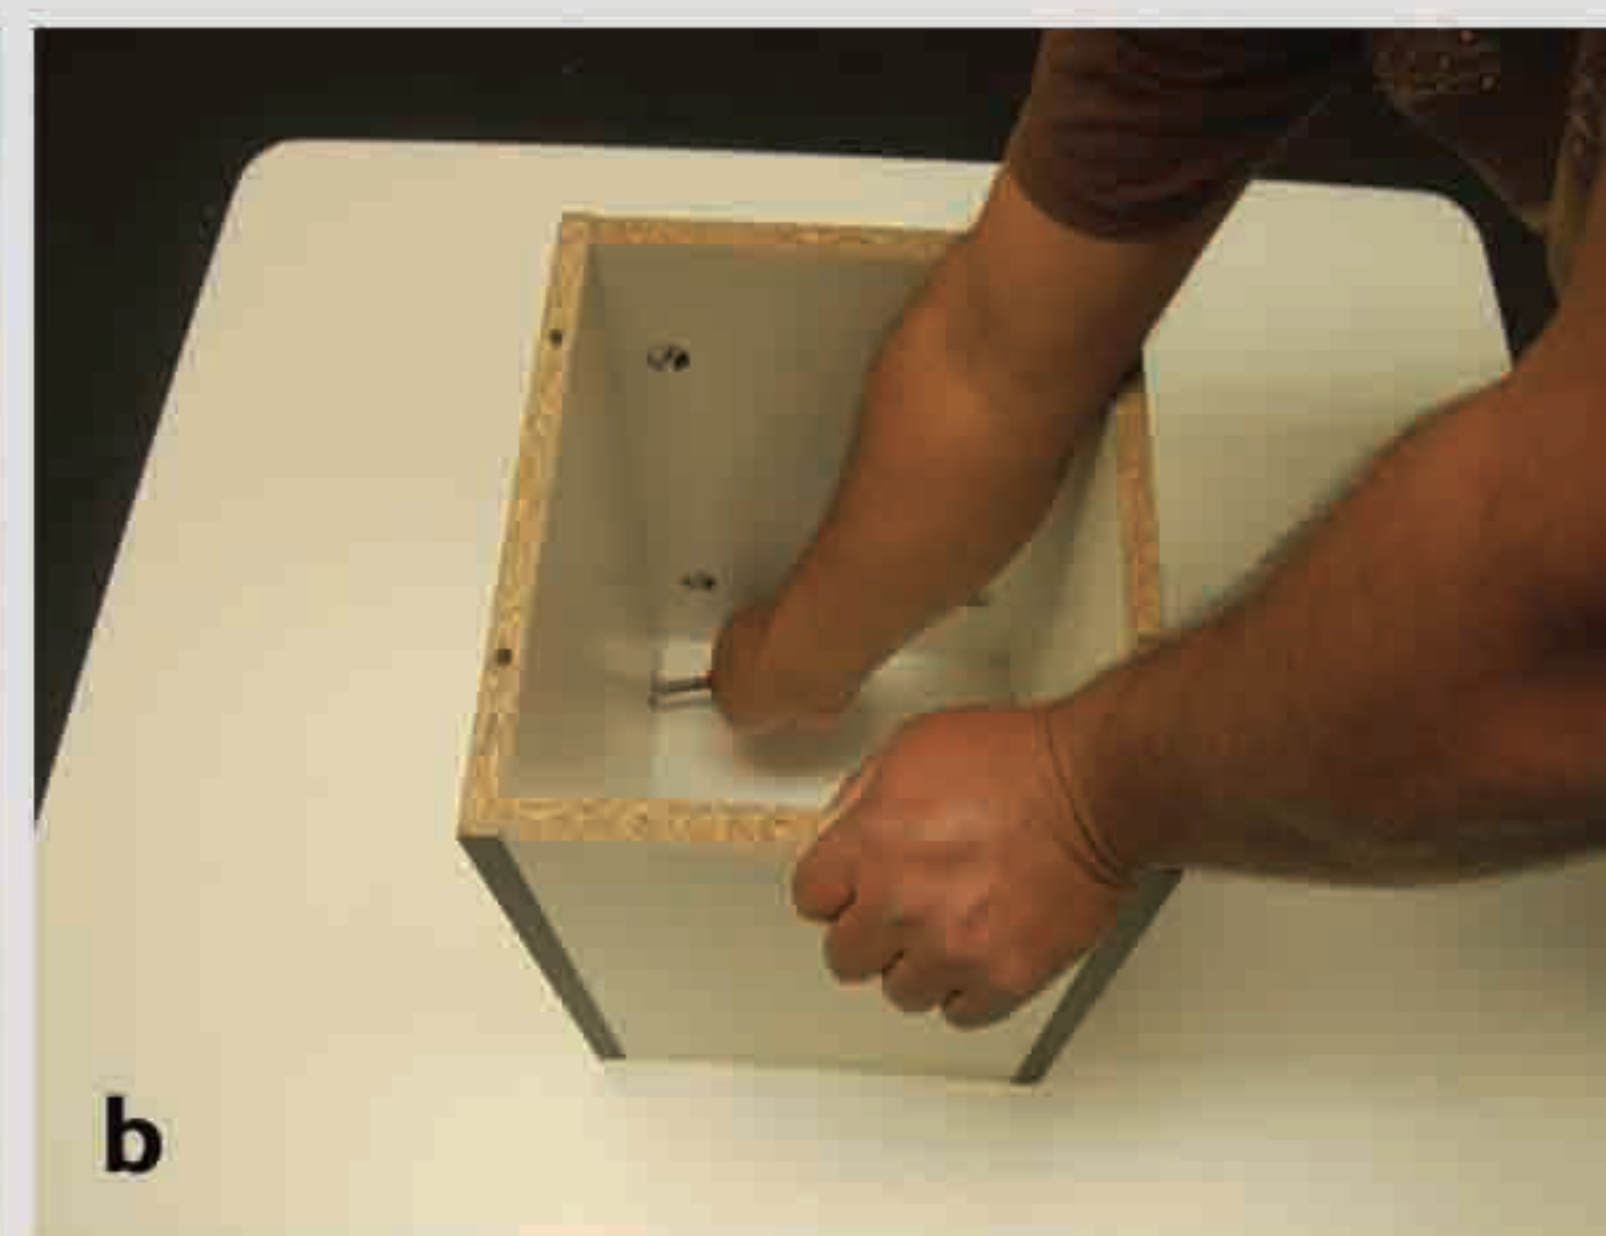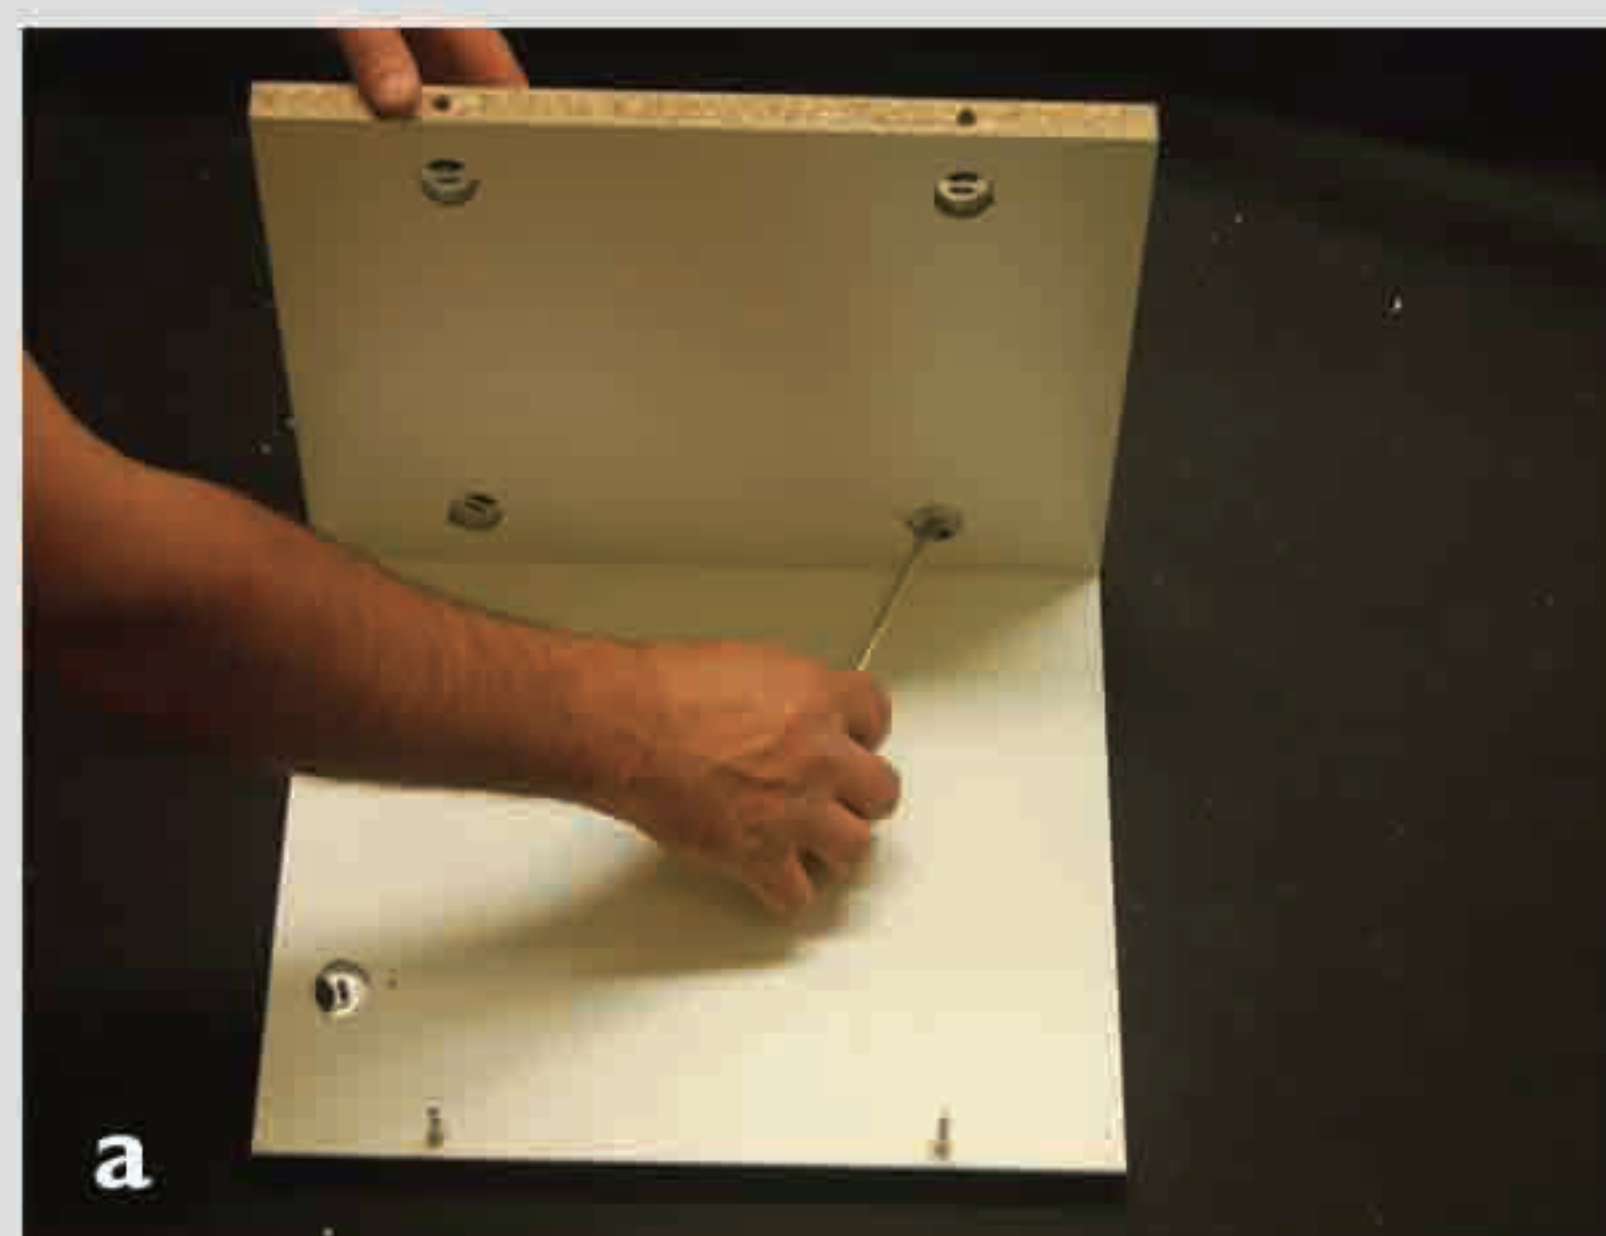

3.

TOP TABLE ASSEMBLE

TOP TABLE (x1)
TOP STAND PANEL (x2)
TOP STAND SIDE PANEL (x2)
#10 CAM LOCK (x16)
BOLT (x16)
#10 SCREW CAP (x4)

1. Connect top stand panel to top stand side panel using bolts.
2. Insert and tighten #10 cam locks.
3. Repeat 1 & 2 connect other top stand panel to top stand side panels.
4. Connect top stand to middle table using bolts.
5. Insert and tighten #10 cam locks.
6. Connect top table to top stand using bolts.
7. Insert and tighten #10 cam locks.
8. Install #10 screw caps.

