






WRAP COUNTER

ASSEMBLY INSTRUCTIONS



TOP PANE (x1)

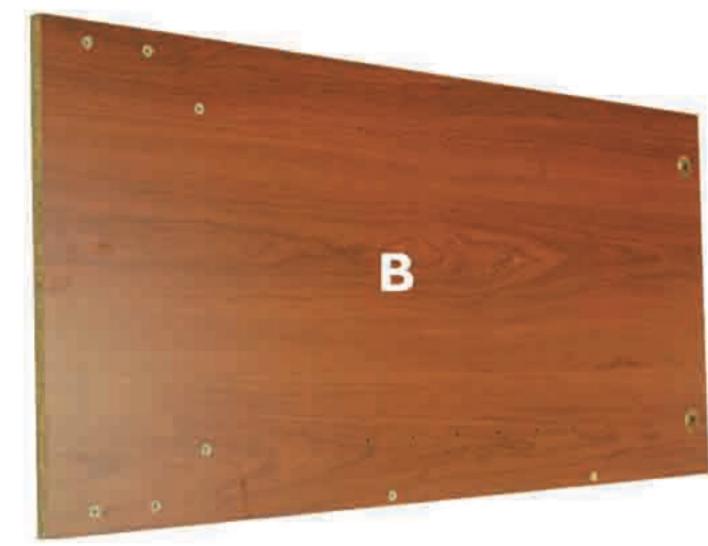

RIGHT SIDE PANEL (x1)













LEFT SIDE PANEL (x1)



FRONT PANEL (x1)


2960 Amwiler Rd. Atlanta, Ga 30360 dawsonjones.com (800) 418-1954 (770)458-7234



TOE KICK (x2)

BOTTOM PANEL (x1)








**TOOLS NEEDED** 

NOTE: It is recommended that two persons assemble this unit.


## **BASE ASSEMBLE**

BOTTOM PANEL (x1)
TOE KICK (x2)
#10 CAM LOCK (x16)
BOLT (x4)
GLIDE (x4)

- 1. Connect toe kick to bottom panel using bolts.
- 2. Insert and tighten #10 cam locks.
- 3. Attach glides to the toe kick.

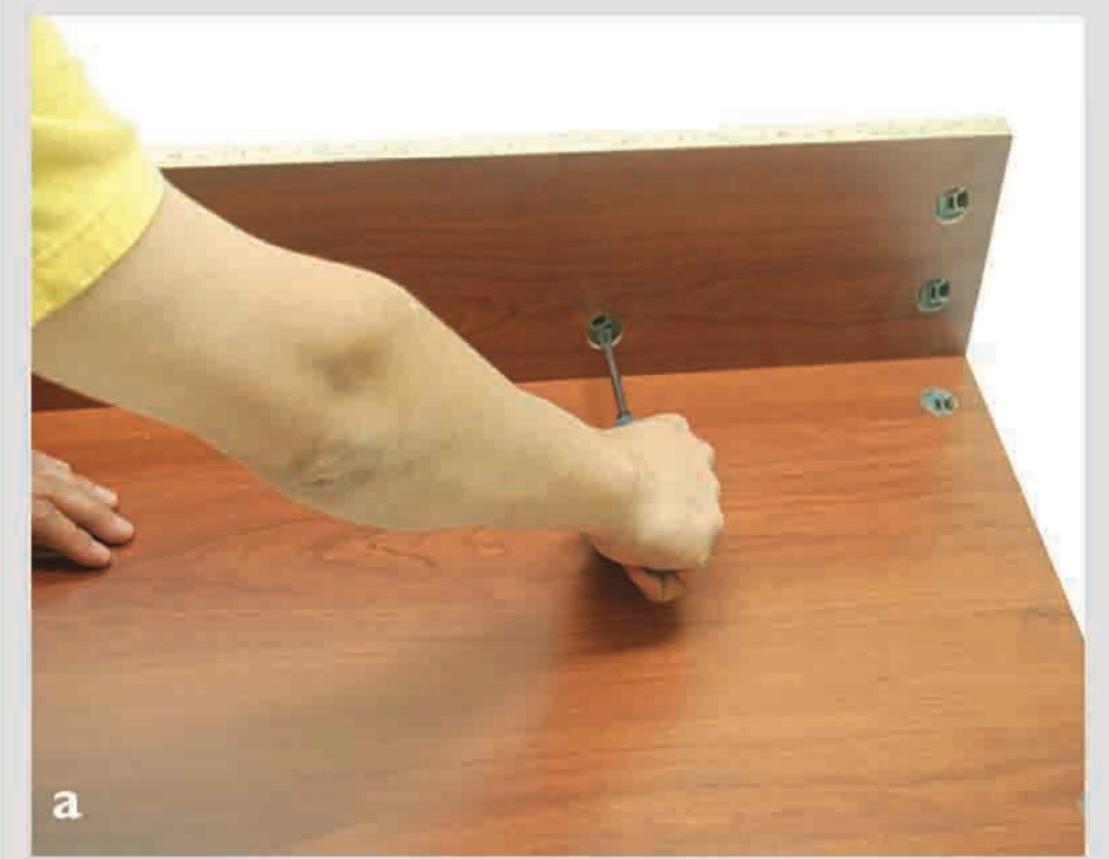



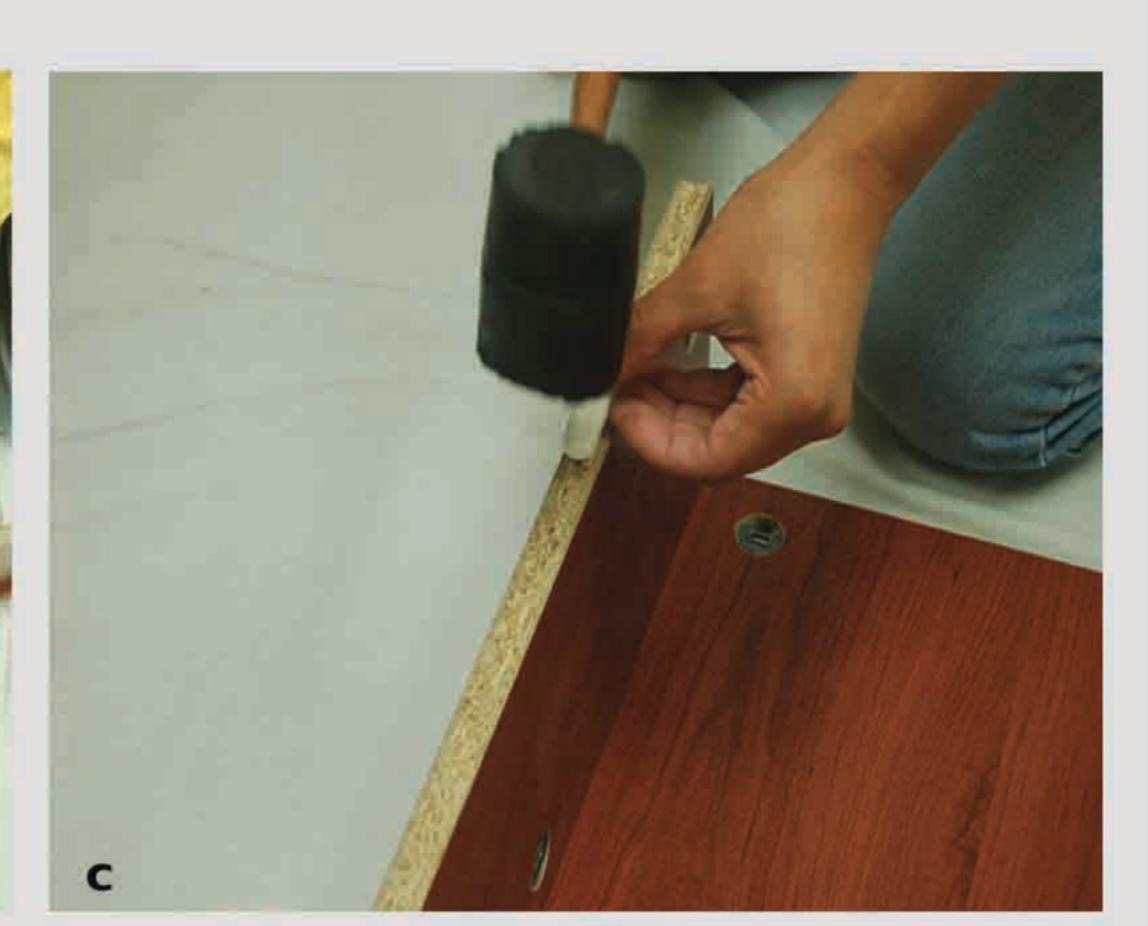

## CENTER PANEL & FRONT PANEL ASSEMBLE

CENTER PANEL (x1) FRONT PANEL (x1) #10 CAM LOCK (x9) BOLT (x3)

- 1. Connect center panel to front panel using bolt.
- 2. Insert and tighten #10 cam lock.
- 3. Connect center and front panel to base using bolts.
- 4. Insert and tighten #10 cam locks.






## SIDE PANEL ASSEMBLE

RIGHT SIDE PANEL (x1) LEFT SIDE PANEL (x1) #10 CAM LOCK (x4) BOLT (x16)

- 1. Attach right side panel to counter using bolts.
- 2. Tighten cam locks.
- 3. Attach left side panel to counter using bolts.
- 4. Tighten cam locks.
- 5. Sit counter on Floor.



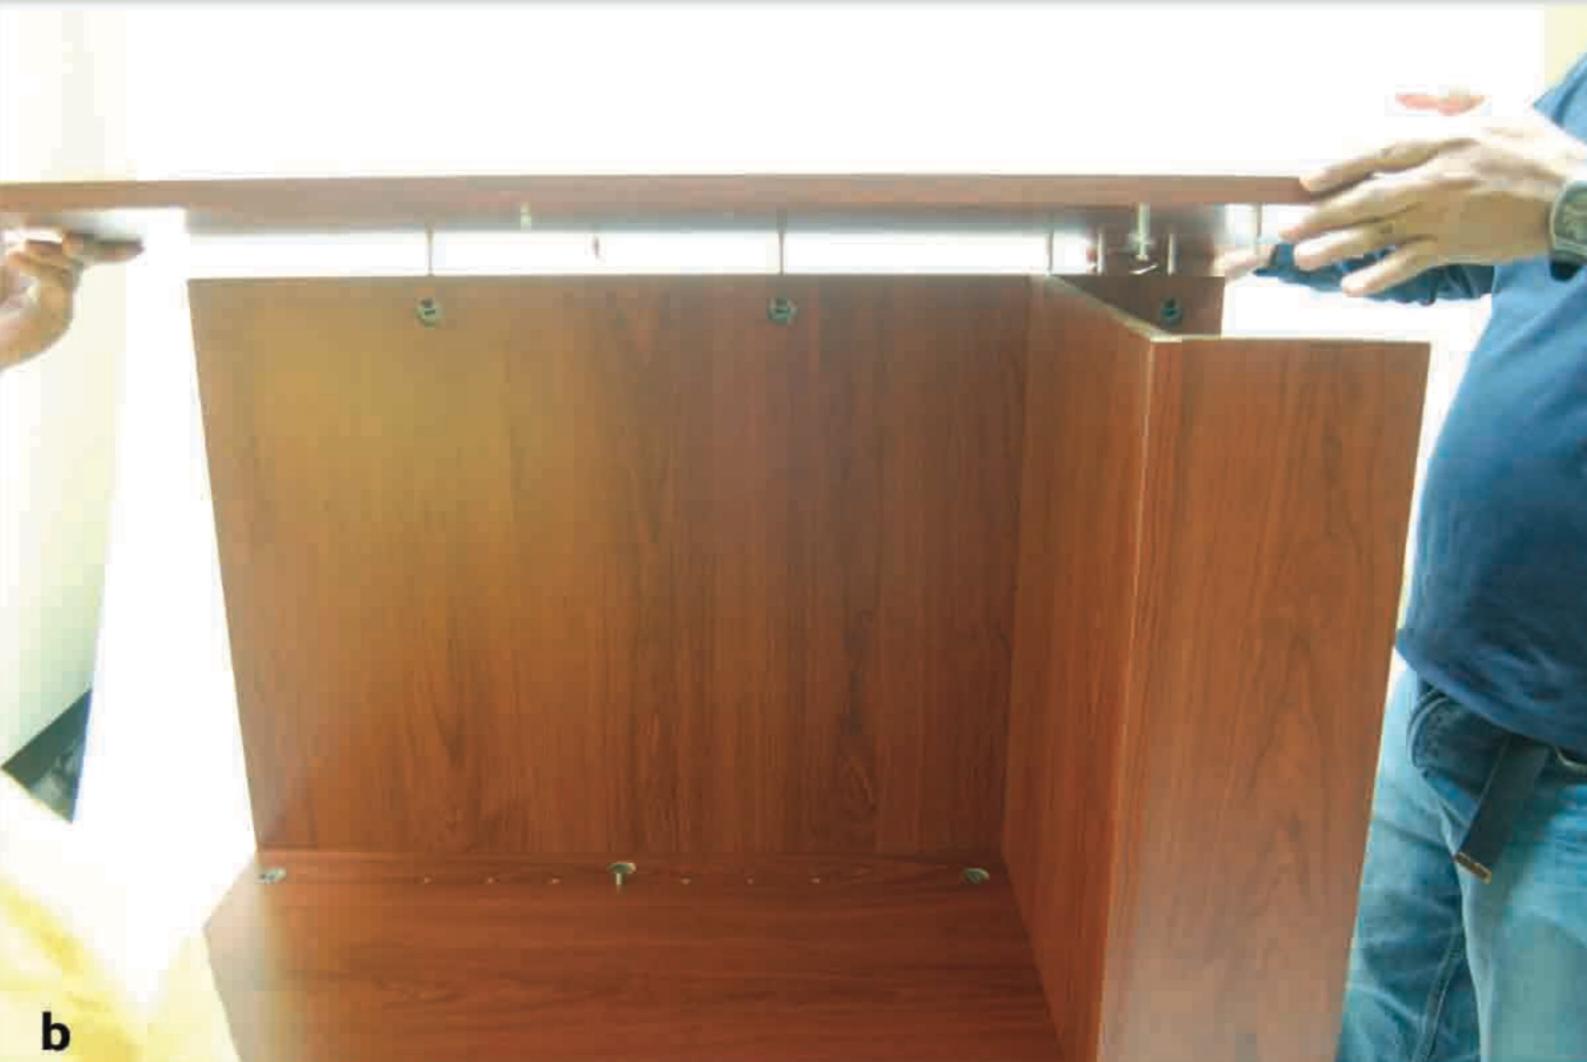

## TOP PANEL ASSEMBLE

TOP PANEL (x1)
BOLT (x6)
SHELF SUPPORT PIN (x8)
SHELF (x2)
#10 SCREW CAP (x13)

- 1. Attach top panel to counter using bolts.
- 2. Tighten #10 cam locks.
- 3. Insert shelf support pins in position.
- 4. Sit shelves on shelf support pin.
- 5. Install #10 screw caps.

