


LEDGETOP COUNTER WITH SHOWCASE ASSEMBLY INSTRUCTIONS



DAWSON JONES
STORE FIXTURES




TOOLS NEEDED

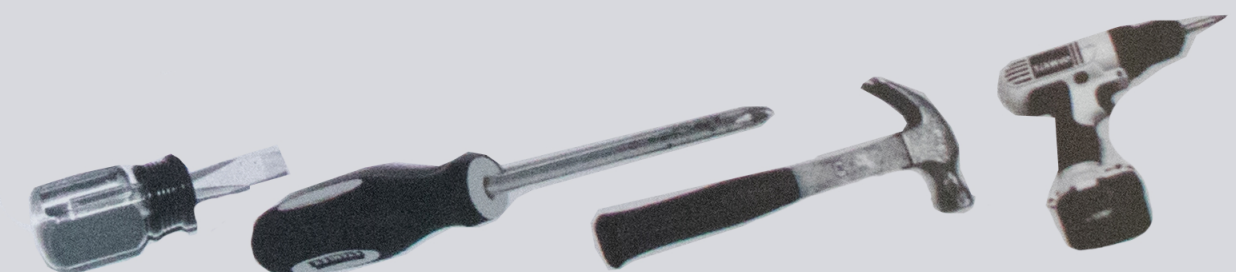


2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

NOTE: It is recommended that two persons assemble this unit.


PARTS LIST - I

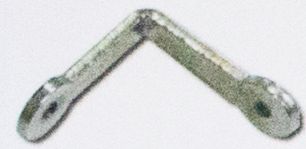

AGCON2
(X4)

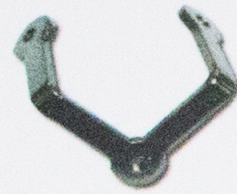


AGCON3
(X4)

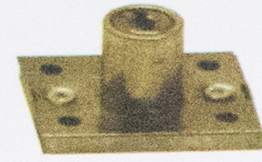

DRAWER LOCK
(X2)



HW117-72(X1)

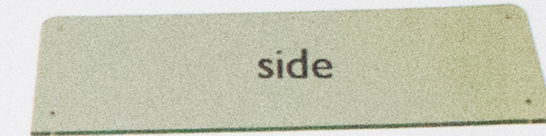

side
SIDE GLASS (X2)



#6x12 PHILLIP
SCREW (X32)




TROX SCREW x 3/4"
(X8)



SCLKP (X1)



HW116-71 (X1)




shelf
SHELF GLASS (x2)




#6 x 5/8" PAN SCREW
(X30)




#6x118 PHILLIPS SCREW
(x4)



BT8C
(x6)



HW18-71 (X1)

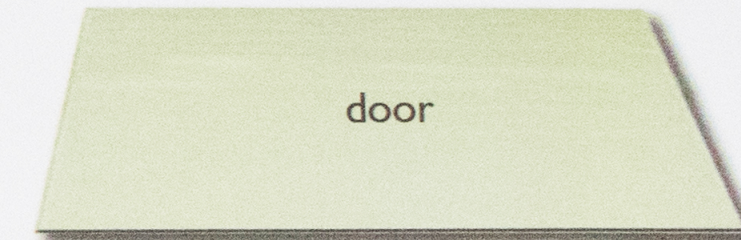

door
GLASS DOOR (x2)



NE09034-36 (X2)



GLASS GLAZING (X6)



DOWEL PIN
(X12)



TOP GUIDE
(X6)



GLIDE
(X10)



SS27CD
(x3)




DOOR PROTECTION (x2)



PLASTIC GLAZING
(X8)



SHELF SUPPORT
PIN (X16)

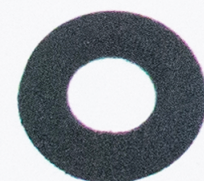

BLACK WASHER
(X16)



BOLT
(X64)




#10 CAM LOCK
(x64)



COUNTER
SLIDERS
(2 PAIR)




DRAWER
SLIDERS
(2 PAIR)

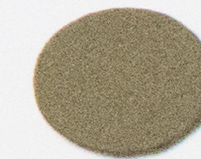

SCREW-CAP
(x32)



SCREW-CAP(W)
(x8)



DOOR PULL (X2)



CAP (X2)

TOOLS NEEDED




1.

BASE AND SIDE ASSEMBLE

BOTTOM PANEL (x1)
TOE KICK PANEL (x3)
RIGHT SIDE PANEL (x1)
#10 CAM LOCK (x22)

BOLT (x28)
COUNTER SLIDER (x1)
#6x12 PHILLIPS SCREWS (x2)

1. Connect toe kick panel to bottom panel using bolts.
2. Insert and tighten #10 cam locks.
3. Attach slider to the left panel with #6x12 phillips screws.
4. Connect base with right side panel using bolts.
5. Insert and tighten #10 cam locks.
6. Insert the bolts on bottom panel.

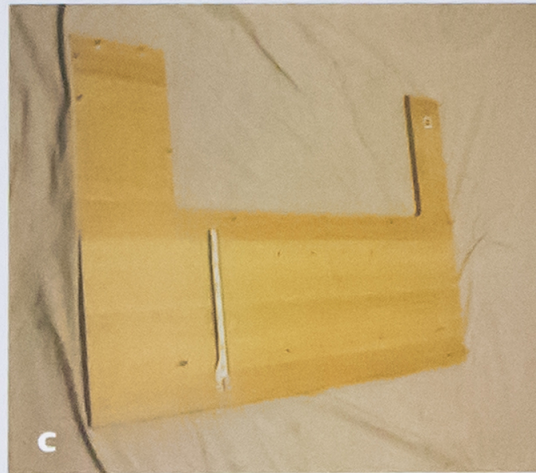


2.

CENTER PANEL & FRONT PANEL ASSEMBLE

CENTER PANEL (x2) BOLT (x2)
FRONT PANEL (x1) COUNTER SLIDER (x2)
#10 CAM LOCK (x18) #6x12 PHILLIPS SCREWS (x4)

1. Attach slider to center panels; tighten.
2. Connect the front and bottom panels; tighten.
3. Attach center panels to bottom base; tighten.


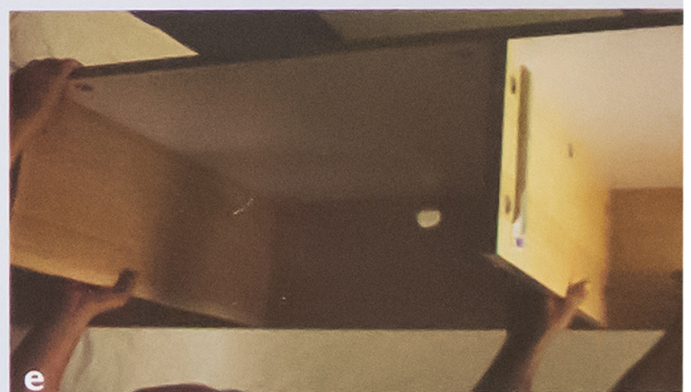


3.

LEDGE TOP ASSEMBLE

LEDGE TOP PANEL (x1)
LEDGE TOP FRONT PANEL (x1)
DIVIDED PANEL (x1)
#10 CAM LOCK (x16)
BOLT (x4)

1. Connect ledge top front panel and ledge top panel ; tighten.
2. Insert #10 cam lock in divided panel.
3. Connect divided panel to ledge top panel ;tighten.

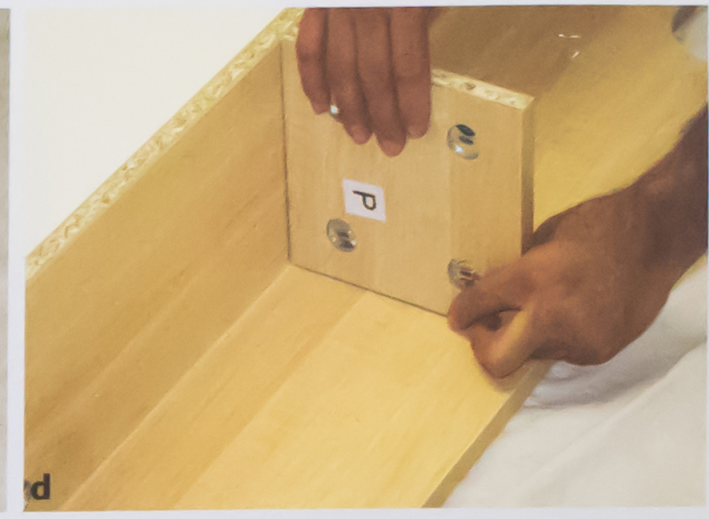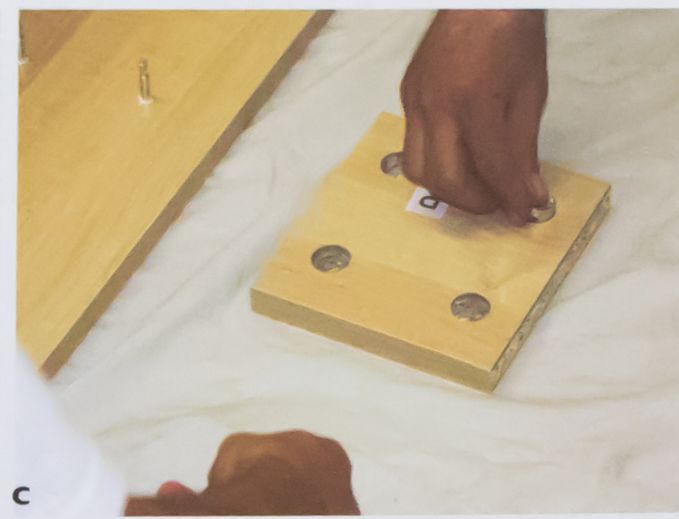

4.

TOP PANEL ASSEMBLE

TOP PANEL (x1)
#10 CAM LOCK (x4)
BOLT (x10)

1. Attach top panel using bolts.
2. Tighten #10 cam locks.
3. Connect Ledge top with top panel; tighten.



5.




DRAWER ASSEMBLE

DRAWER FRONT (x2)
DRAWER RIGHT (x2)
DRAWER LEFT (x2)
DRAWER BOTTOM (x2)
DRAWER BACK (x2)

DRAWER SLIDERS (2 PAIR)
#10 CAM LOCKS (x4)
BOLT (x4)
DOWEL PINS (x12)
#10 SCREW CAPS (x4)

DRAWER LOCK&KEY (x2)
#6x12 PHILLIPS SCREWS (x24)
#6x118 PHILLIPS SCREWS (x4)

1. Insert dowel pins into place.
2. Connect drawer left, drawer right, and drawer back pieces.
3. Slide in drawer bottom.
4. Attach drawer front to drawer using bolts; tighten #10 cam locks.
5. Screw the drawer side & back using #6x118 philips screws.
6. Install the drawer lock using #6x12 philips screws.
7. Attach drawer sliders to drawer using #6x12 philips screws.
8. Install #10 screw caps.

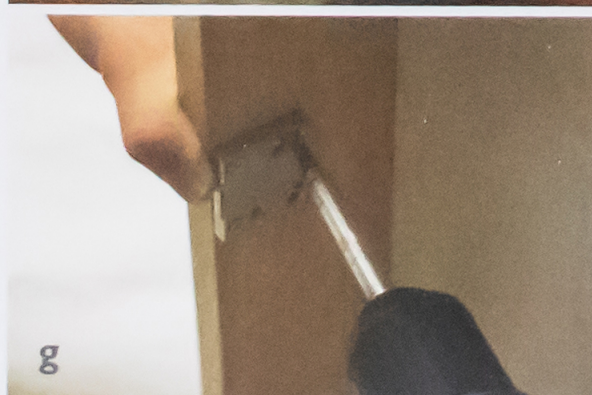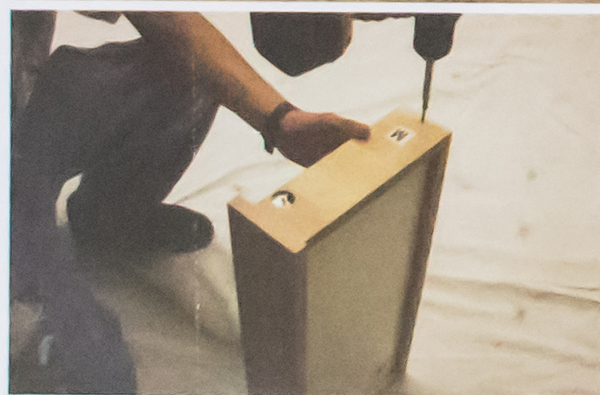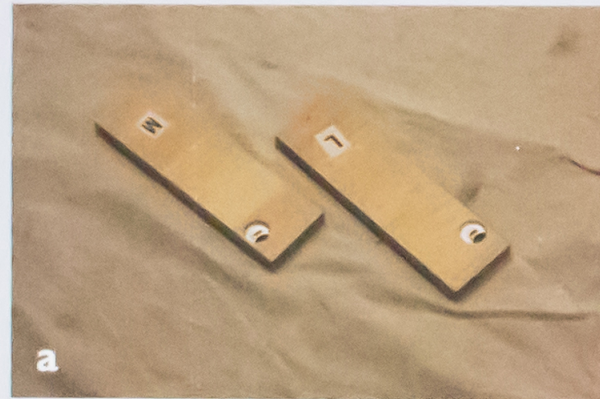

6.




DRAWER ASSEMBLE

DRAWER FRONT (x2)
DRAWER RIGHT (x2)
DRAWER LEFT (x2)
DRAWER BOTTOM (x2)
DRAWER BACK (x2)

DRAWER SLIDERS (2 PAIR)
#10 CAM LOCKS (x4)
BOLT (x4)
DOWEL PINS (x12)
#10 SCREW CAPS (x4)

DRAWER LOCK&KEY (x2)
#6x12 PHILLIPS SCREWS (x24)
#6x118 PHILLIPS SCREWS (x4)

1. Insert dowel pins into place.
2. Connect drawer left, drawer right, and drawer back pieces.
3. Slide in drawer bottom.
4. Attach drawer front to drawer using bolts; tighten #10 cam locks.
5. Screw the drawer side & back using #6x118 philips screws.
6. Install the drawer lock using #6x12 philips screws.
7. Attach drawer sliders to drawer using #6x12 philips screws.
8. Install #10 screw caps.

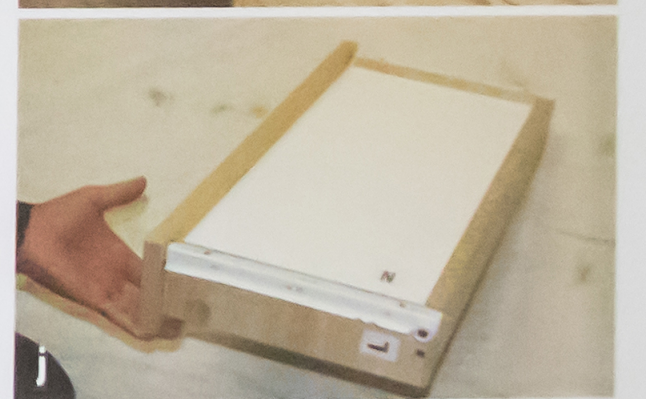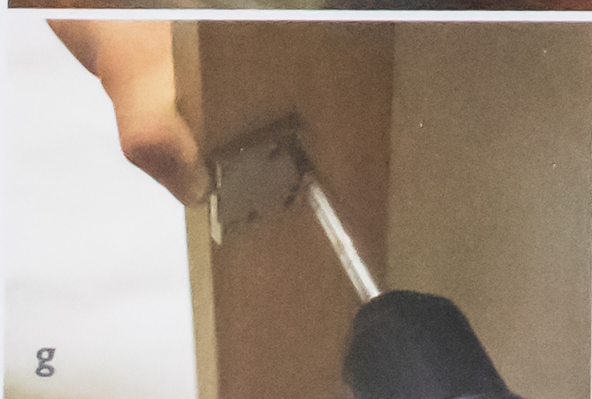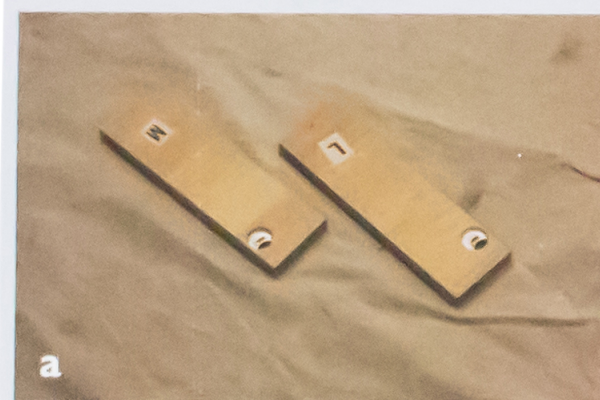


7. STANDARD&DOOR FRAME ASSEMBLE

#6 x 58 PAN SCREW (x11)

HW117-71 (x1)

SS27CD (x3)

1. Attach HW117-71 on top; tighten by using 2 #6X58 pan screw.
2. Tighten SS27CD on front panel with 1 #6X58 pan screw.
2. Tighten the same SS27CD part on base with 2 #6X58 pan screw.
3. Repeat steps 1 & 2 to assemble the other 2 pcs of SS27CD.

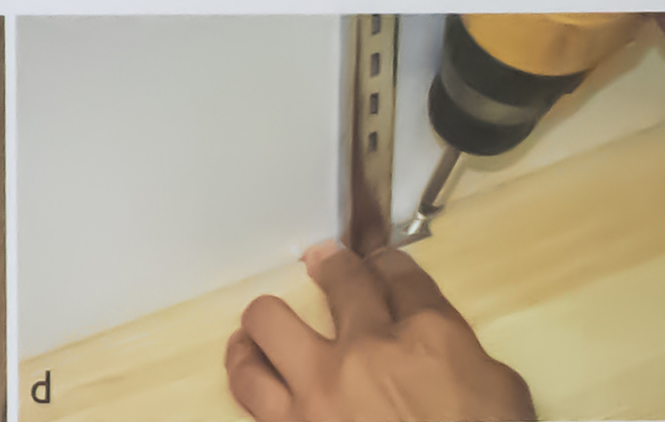



8. STANDARD&DOOR FRAME ASSEMBLE

#6 x 58 PAN SCREW (x11)

HW117-71 (x1)

SS27CD (x3)

1. Attach HW117-71 on top; tighten by using 2 #6X58 pan screw.
2. Tighten SS27CD on front panel with 1 #6X58 pan screw.
2. Tighten the same SS27CD part on base with 2 #6X58 pan screw.
3. Repeat steps 1 & 2 to assemble the other 2 pcs of SS27CD.

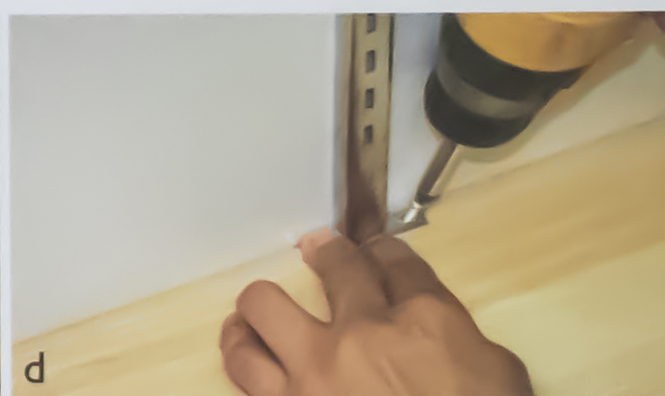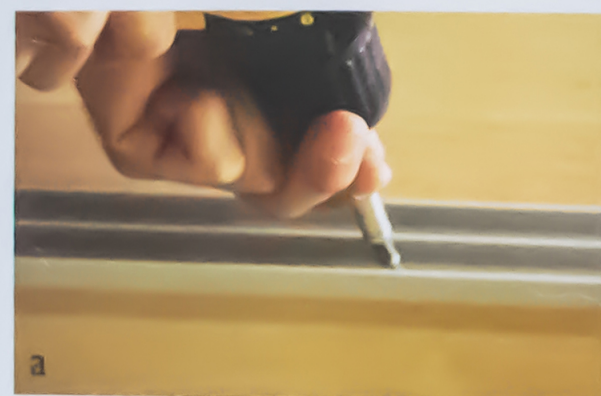



9.

SIDE GLASS ASSEMBLE

SIDE GLASS (x2)
AGCON 2(x4)
AGCON 3(x4)

#6X58 PAN SCREW (x12)
PLASTIC GLAZING (x8)
TROX SCREW 3/4" (x8)

1. Connect right side glass with bottom and front panel using AGCON 2 & AGCON 3 using 8 TROX SCREW 3/4" & #6X58" PAN SCREW.
2. Repeat step 1 to connect left.
3. Put plastic glazing on TROX SCREW 3/4".

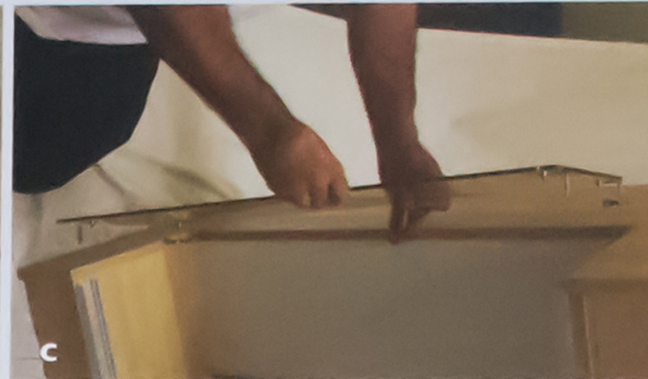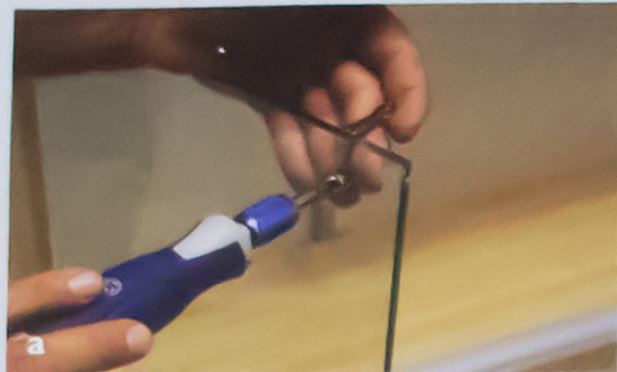


10.

DOOR FRAME ASSEMBLE

#6 x 58 PAN SCREW (x2)
HW116-71 (x1)
HW18-71 (x1)

1. Attach HW116-71 to bottom panel using #6x58 pan screws.
5. Snap HW18-71 into HW116-71.

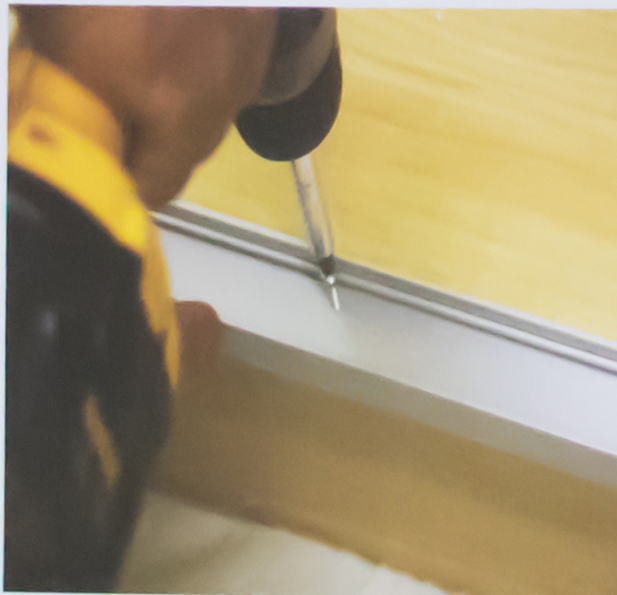

e