



DAWSON JONES  
.....  
STORE FIXTURES

**FULL VISION WALLCASE (SAGW4)**  
ASSEMBLY INSTRUCTION




2960 Amwiler Rd.  
Atlanta, Ga 30360  
dawsonjones.com  
(800) 418-1954  
(770) 458-7234

*NOTE: Must have two persons assemble this unit.*



PARTS LIST

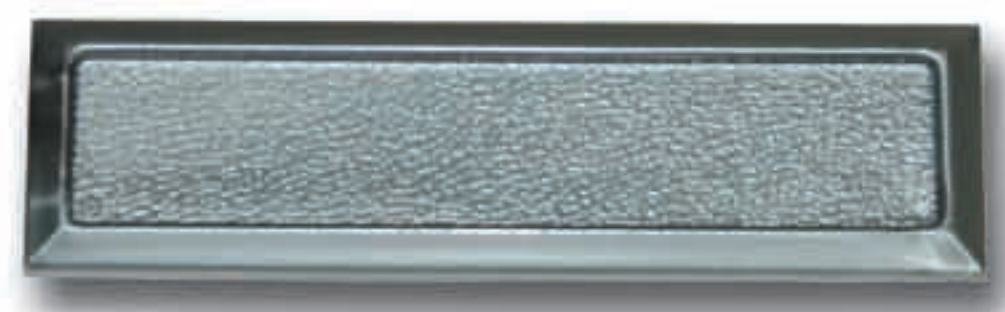

DOOR PULL (X2)



#6 x 1/2" PAN SCREW  
(X6)



TROX SCREW x 3/4" (X32)



TROX SCREW x 1/2"  
(X2)



AGCON2  
(X8)



AGCON3  
(X2)



BOLT  
(X16)



#58 CAM LOCK  
(X16)



SHELF SUPPORT (X8)



PLASTIC GLAZING  
(X16)



GLASS GLAZING (X4)



1" GRAY SCREW-CAP  
(x2)



HWI17- 4(X1)



HWI16 - 4 (X1)



AK0313 - 4 (X1)



HWI8 - 4 (X1)




NE09034-4 (X2)



TOEKICK (X2)




SIDE GLASS (X2)

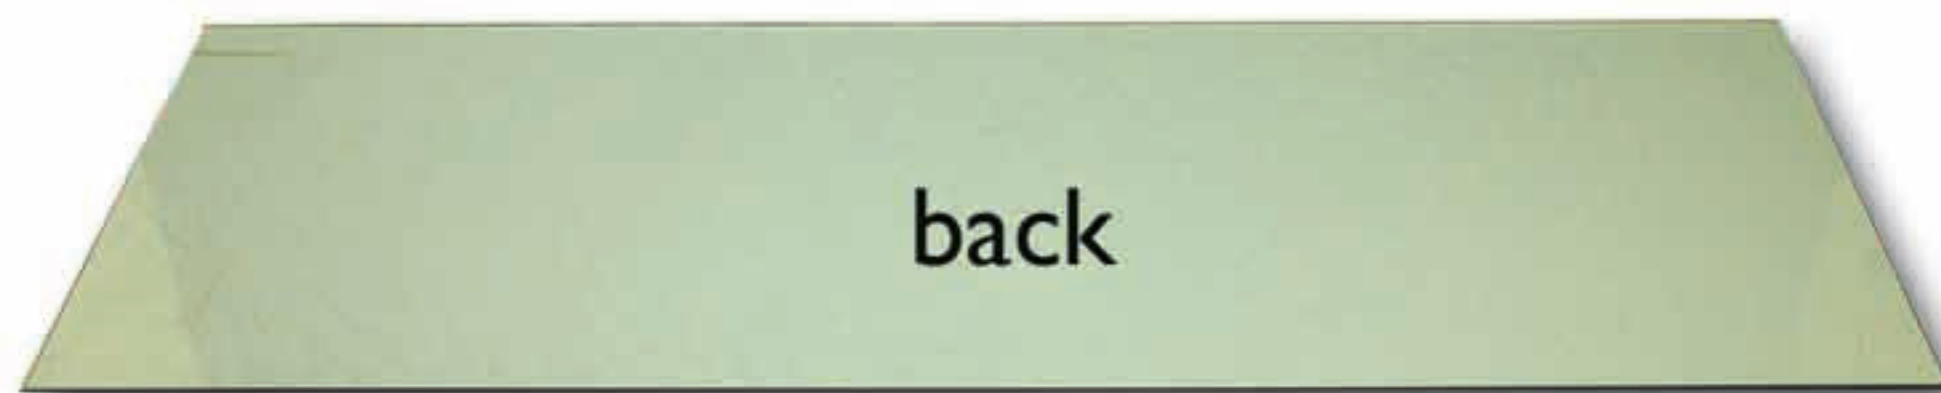


BACK GLASS (X1)




SHELF GLASS (x4)

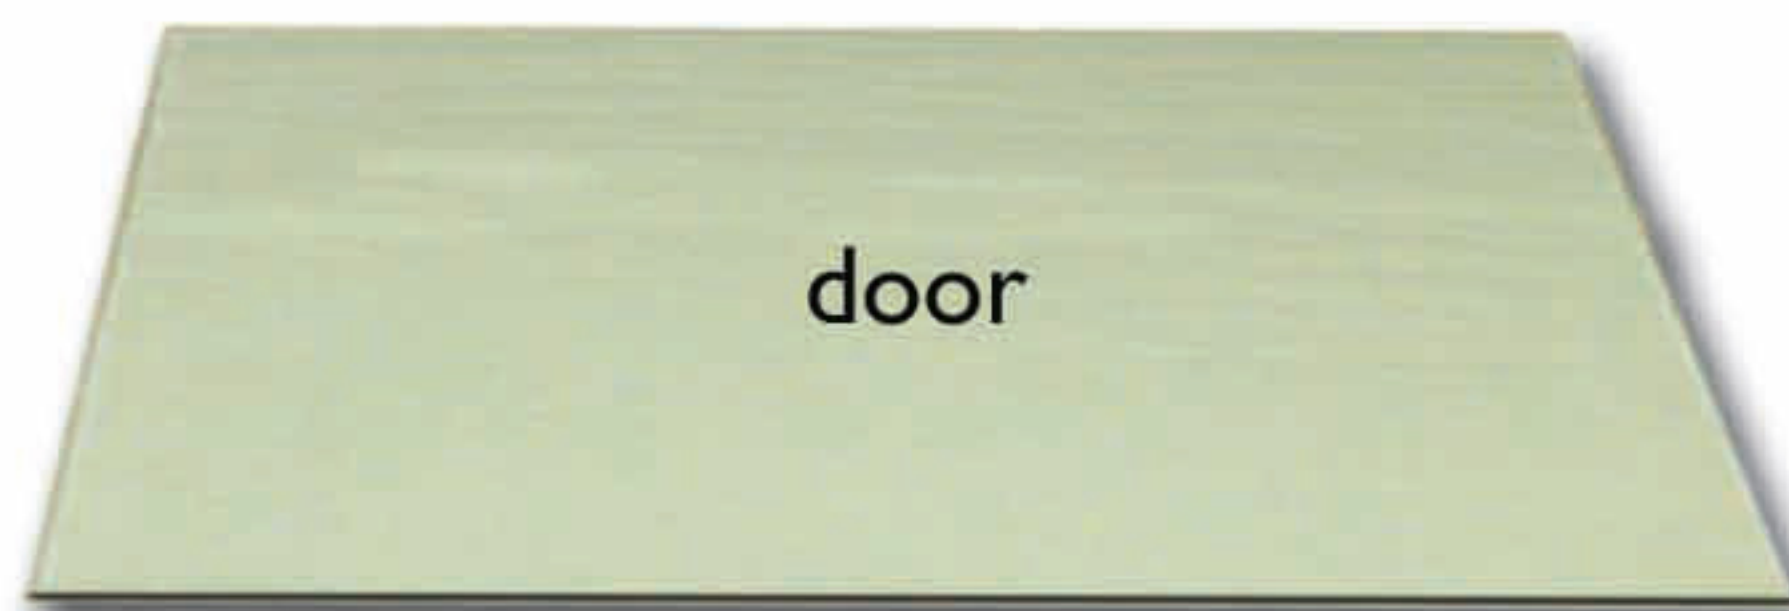

GLASS DOOR (x2)

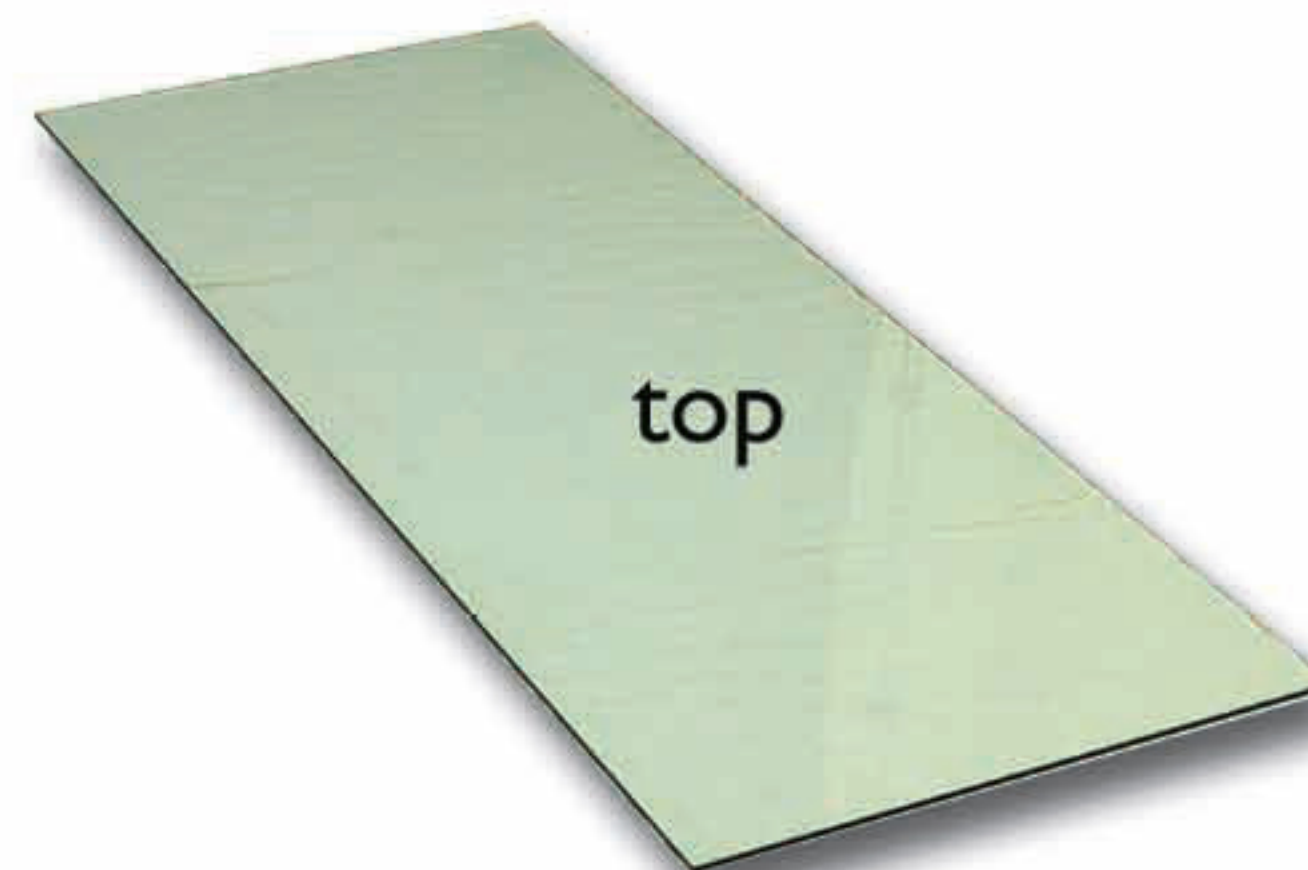

TOP GLASS  
(x1)

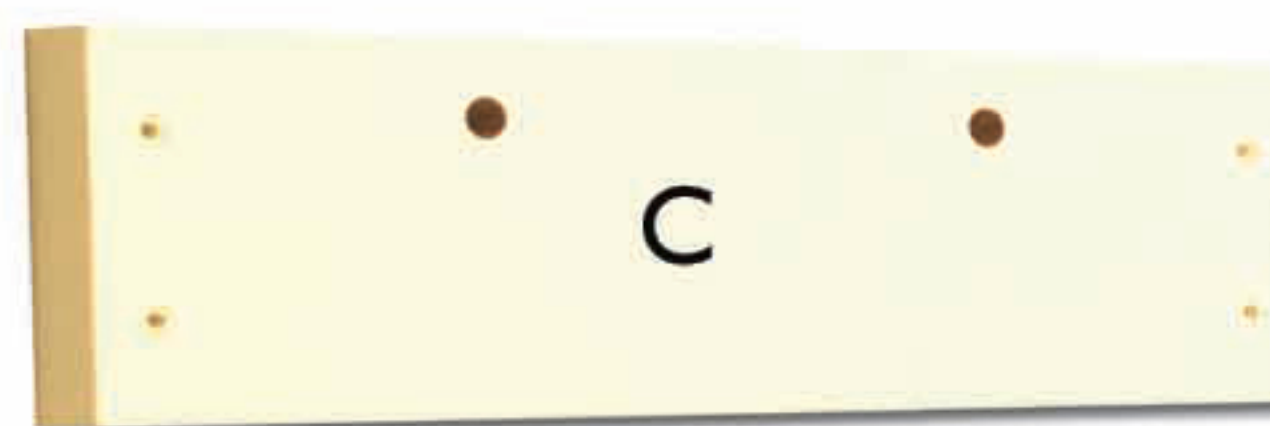

SIDE TOEKICK (X2)



GLIDE  
(X4)



TOP GUIDE  
(X4)



BOTTOM PANEL (X1)

TOOLS NEEDED



\*T20 TROX SCREW DRIVER NEEDED




1.

## BASE ASSEMBLE

TOEKICK (x2) #58 CAM LOCK (x16)  
SIDE TOEKICK (x2) BOLT (x16)  
BOTTOM PANEL (x1) GLIDE (x4)

1. CONNECT SIDE TOE KICK PANEL WITH TOE KICK PANEL USING BOLT.
2. INSERT AND TIGHTEN #58 CAM LOCK.
3. ATTACH GLIDES ON TOE KICK.
4. CONNECT TOE KICK SET WITH BOTTOM PANEL USING BOLT.
5. INSERT AND TIGHTEN #58 CAM LOCK.
6. SIT BASE ON FLOOR.



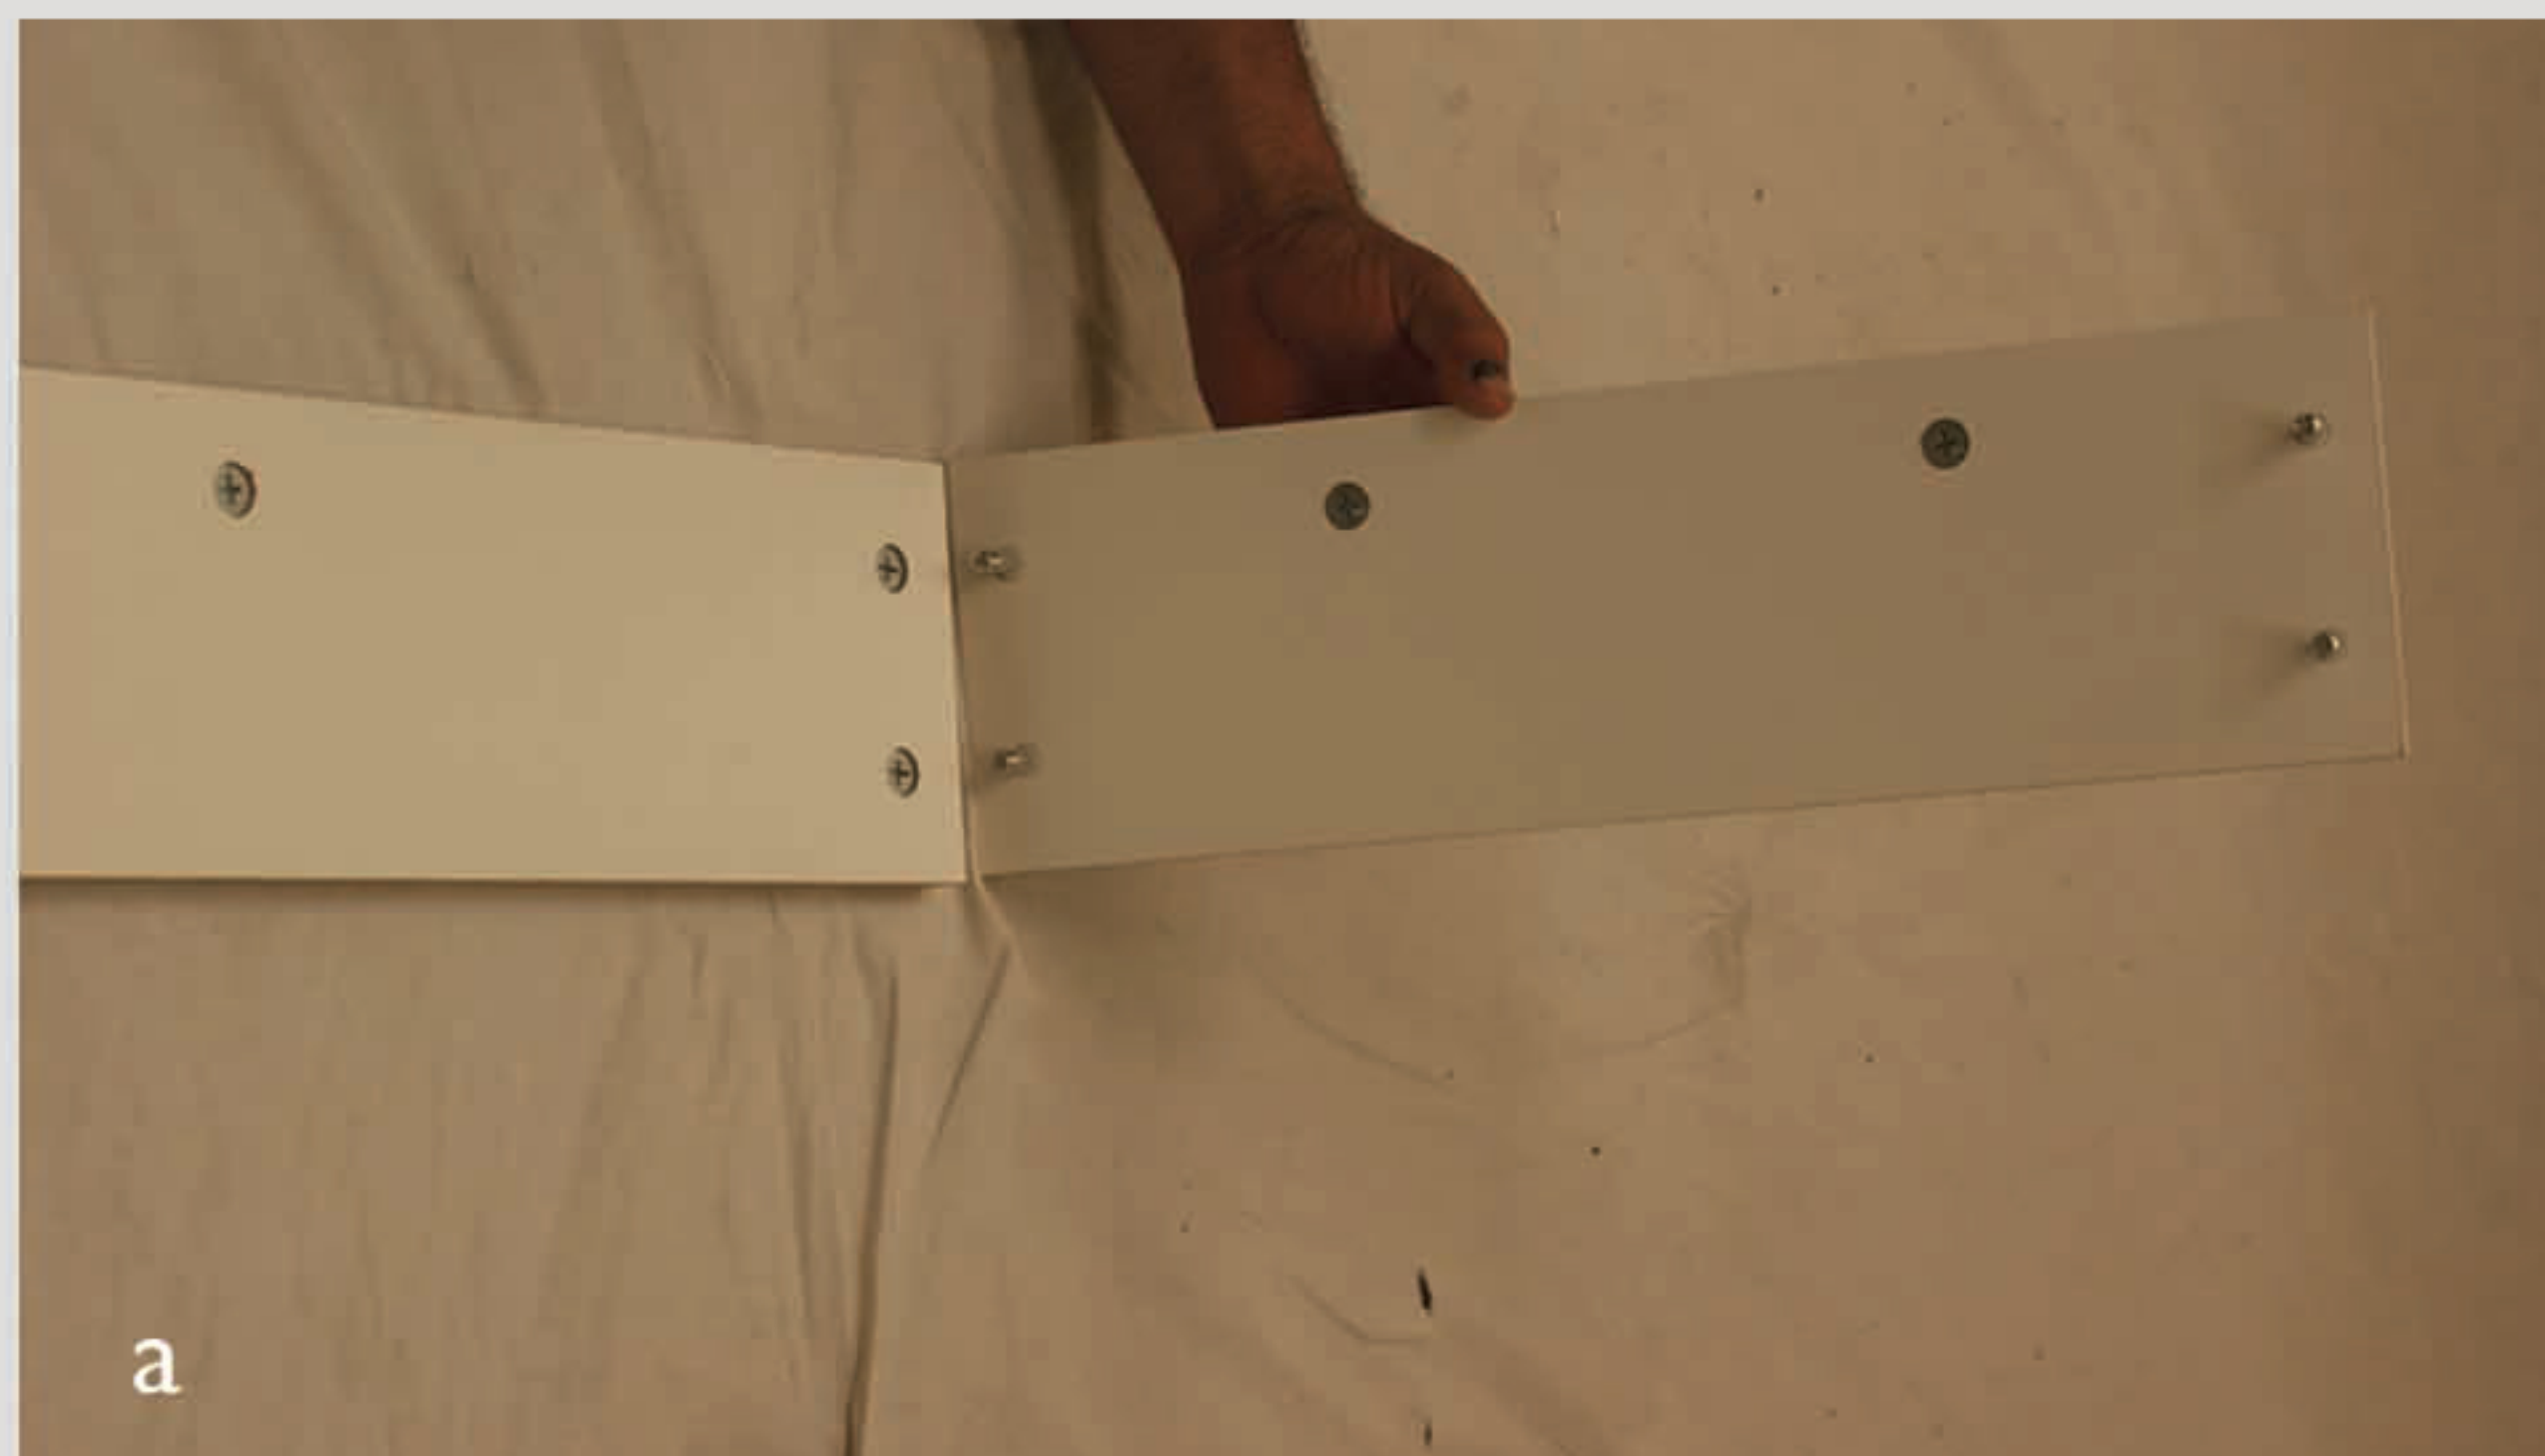


2.

## GLASS MODULAR ASSEMBLE

BACK GLASS (x1) AGCON3 (x2)  
SIDE GLASS (x2) #6 x 1/2" PAN SCREW (x4)  
TOP GLASS (x1) TROX SCREW x 3/4" (x30)  
AGCON2 (x6) SHELF SUPPORT (x16)

1. INSERT BACK GLASS.
2. INSERT RIGHT SIDE GLASS.
3. CONNECT BACK GLASS WITH RIGHT SIDE GLASS USING AGCON3 & 3/4"L TROX SCREW.
4. CONNECT RIGHT SIDE GLASS WITH BOTTOM USING AGCON2, 3/4"L TROX SCREW & #6X1/2" PAN SCREW.
5. REPEAT SETP 3 AND 4. TO CONNECT LEFT SIDE GLASS WITH FRONT GLASS AND BOTTOM.
6. CONNECT TOP GLASS WITH MODULAR USING 3/4" TROX SCREW.
7. CONNECT TROX SCREW 3/4" THROUGH SIDE GLASS WITH SHELF SUPPORT.

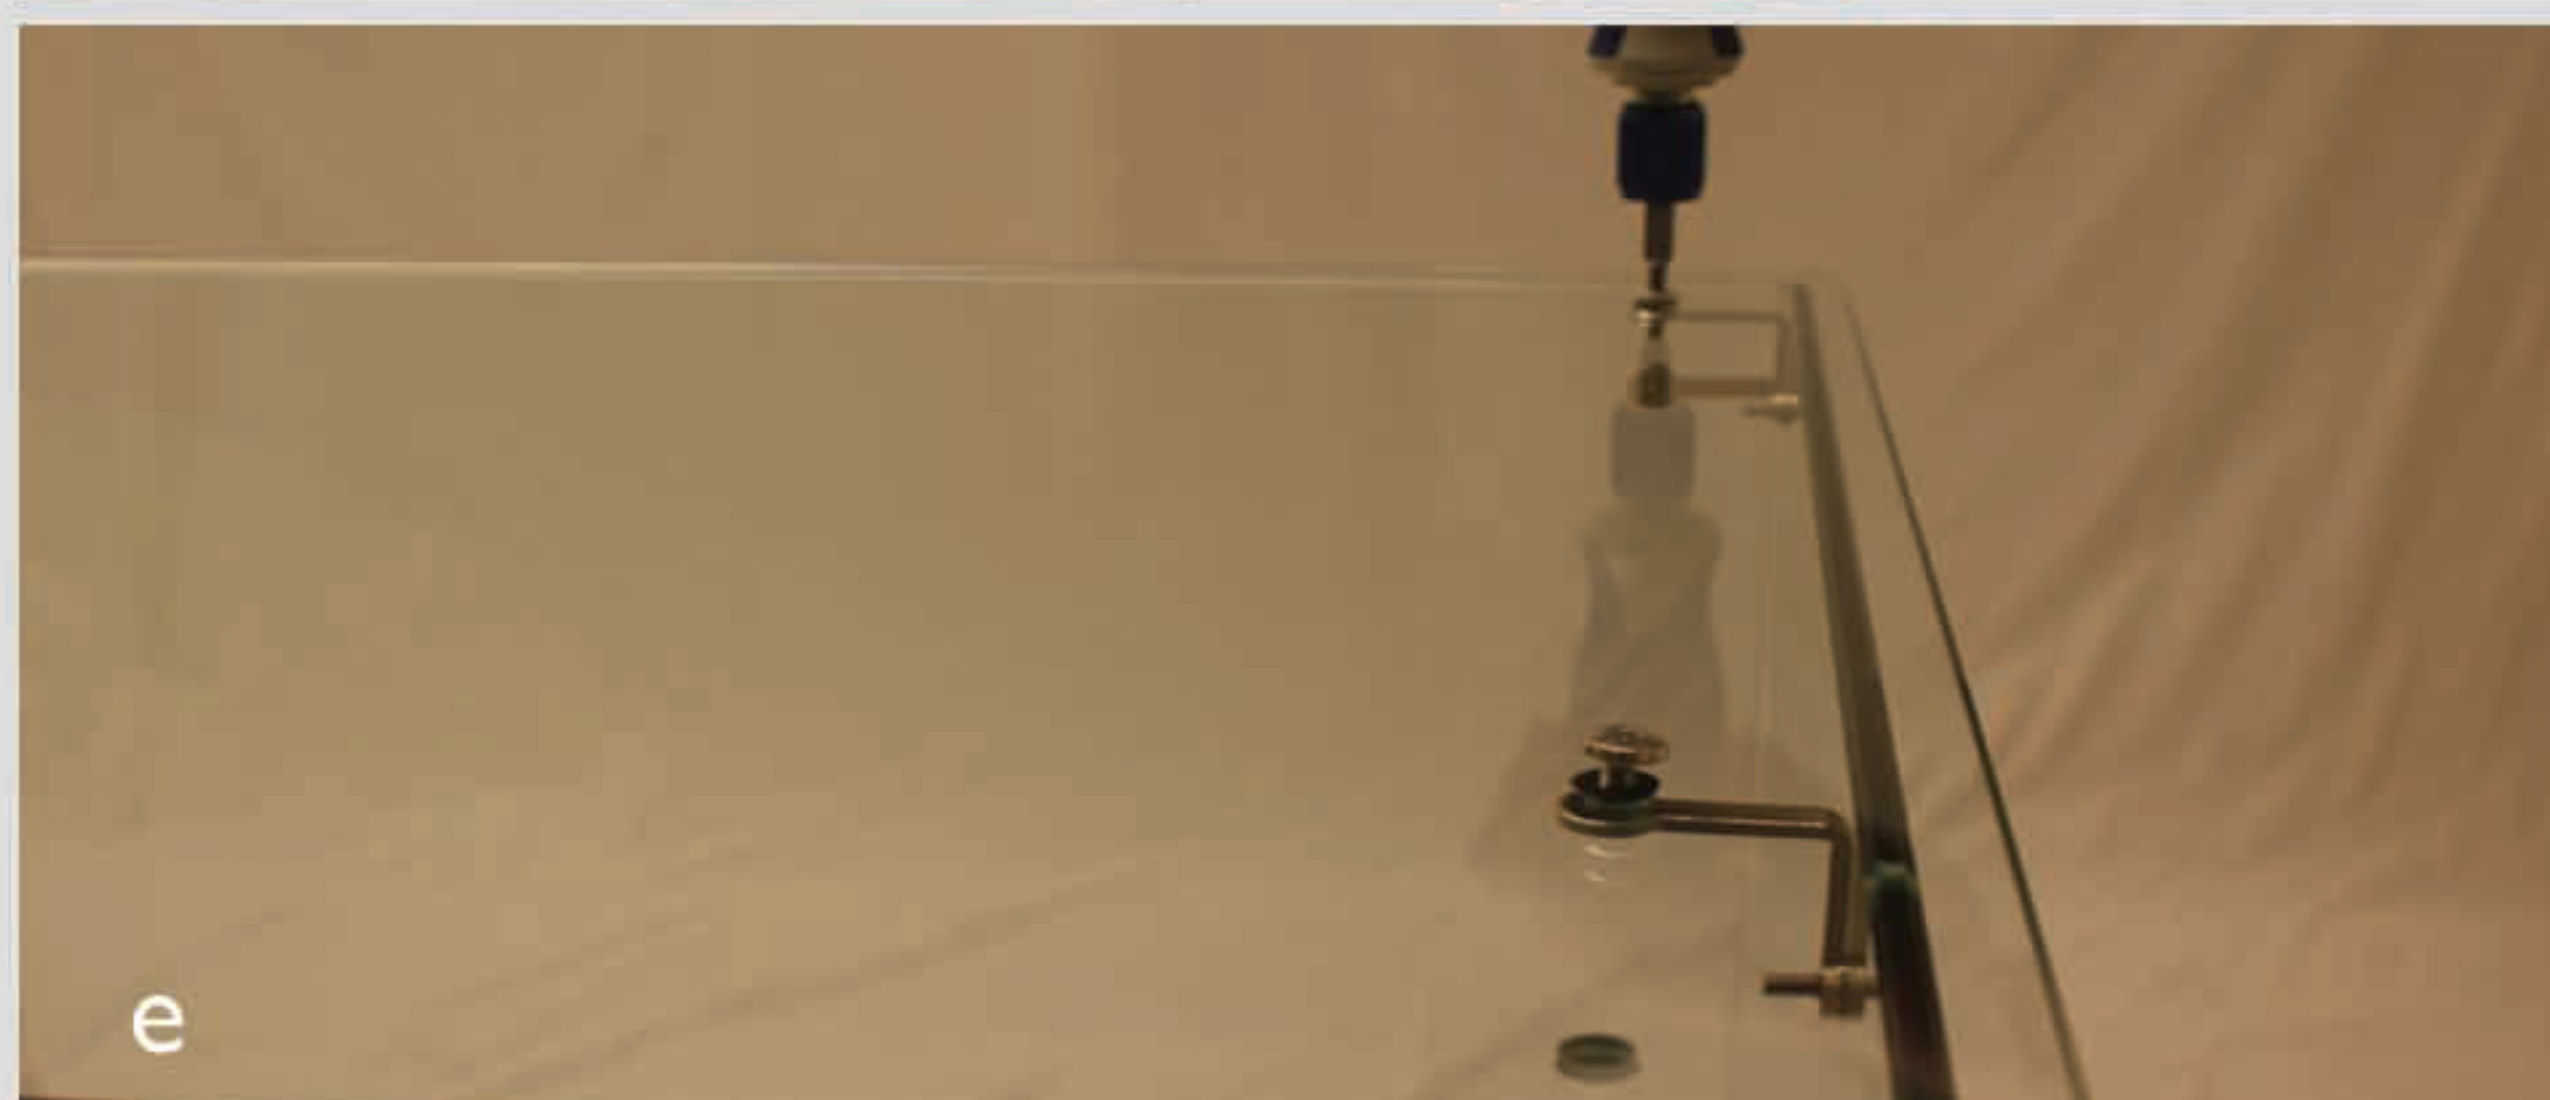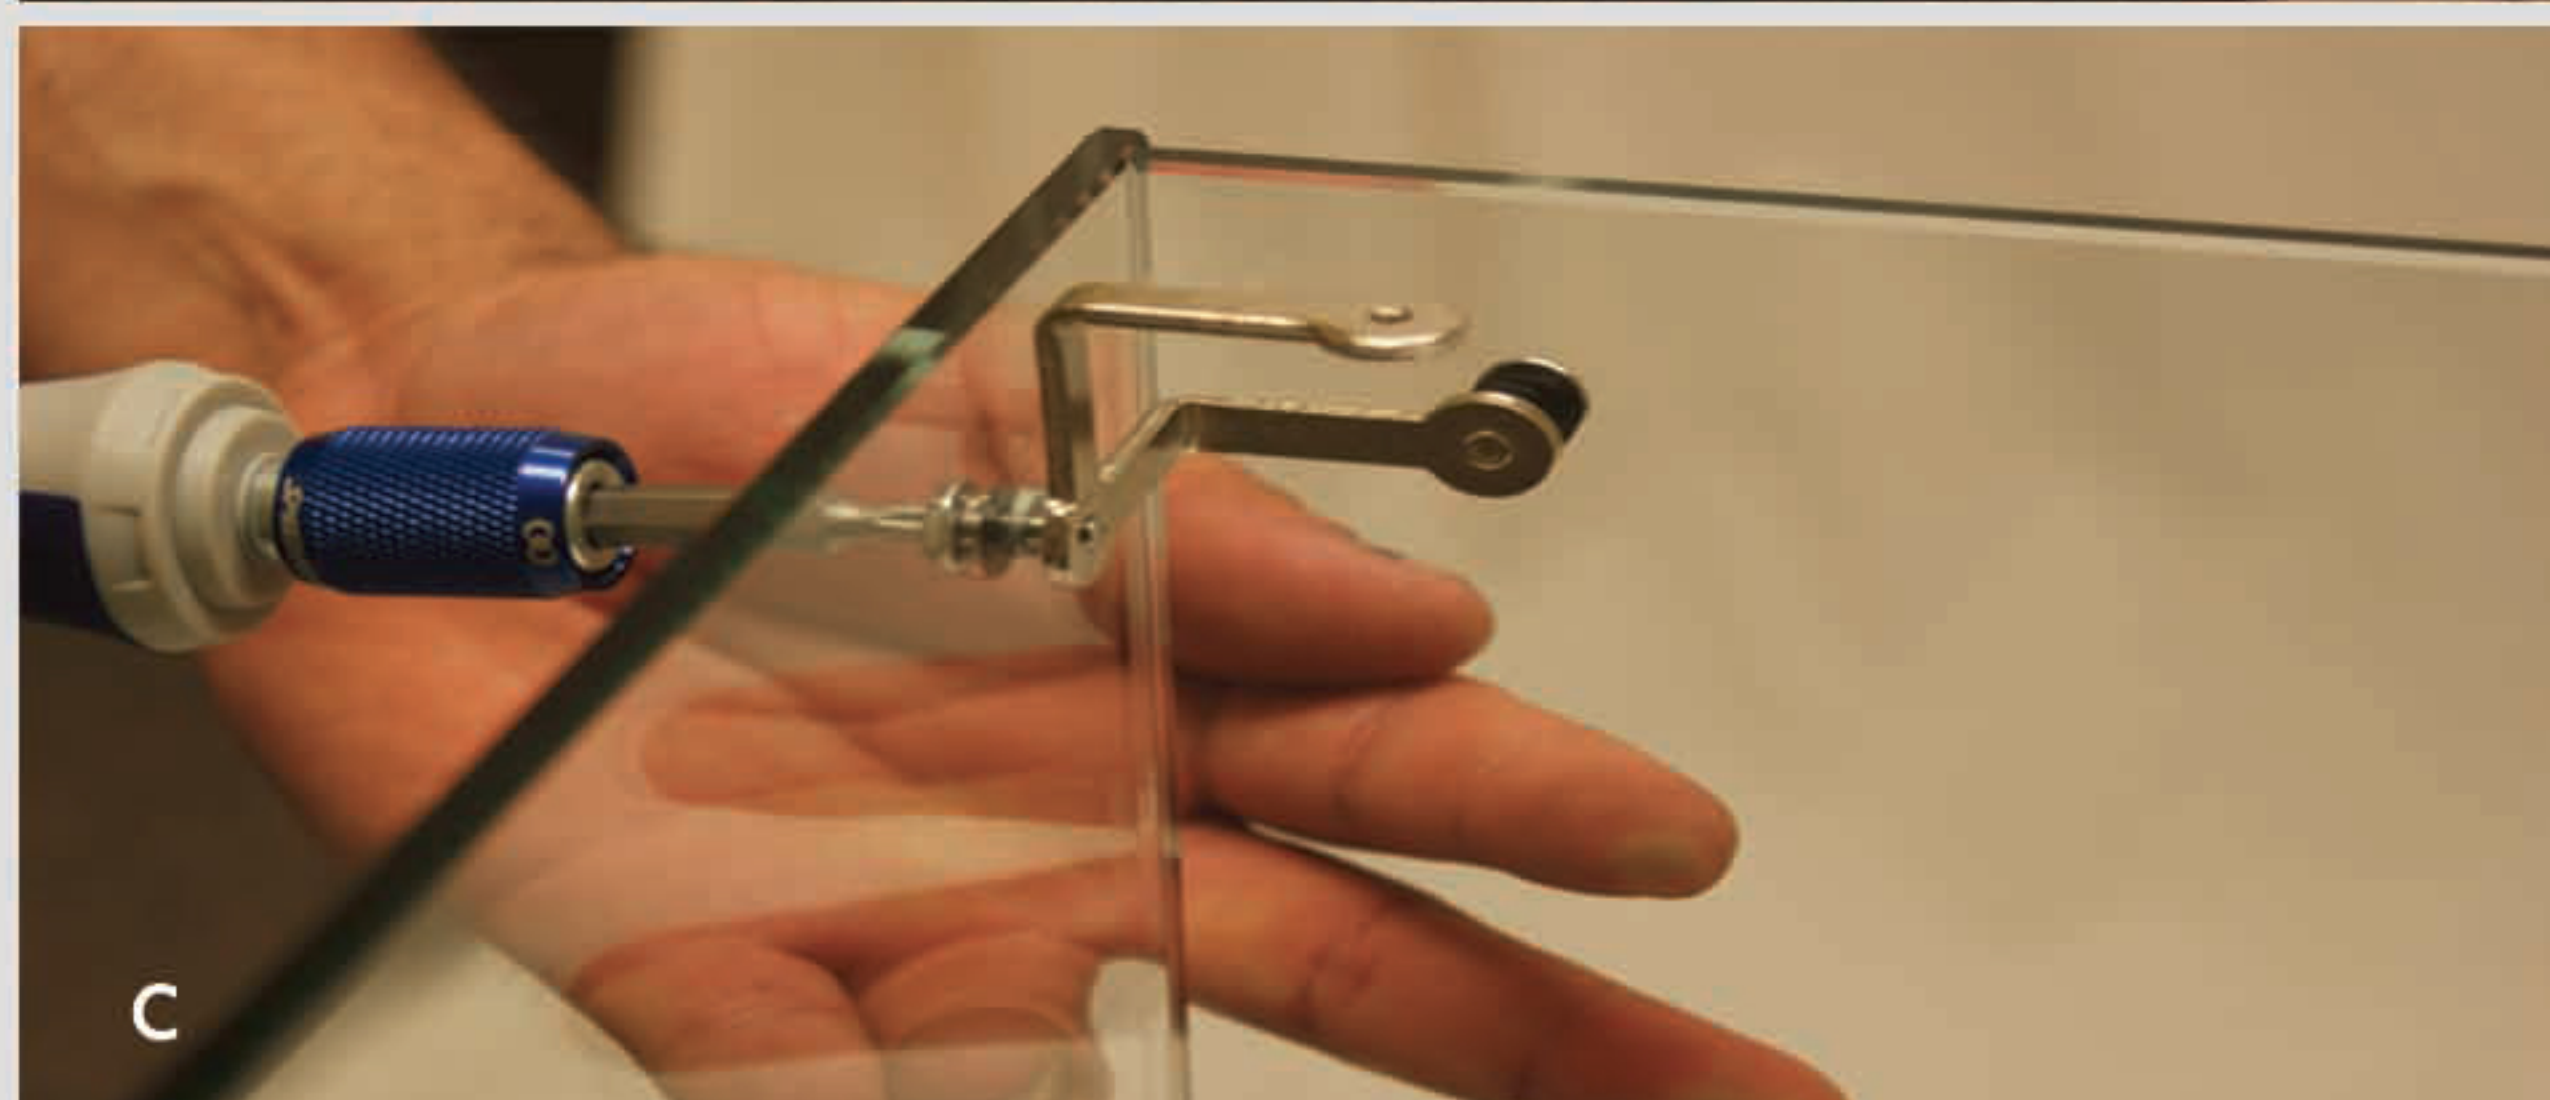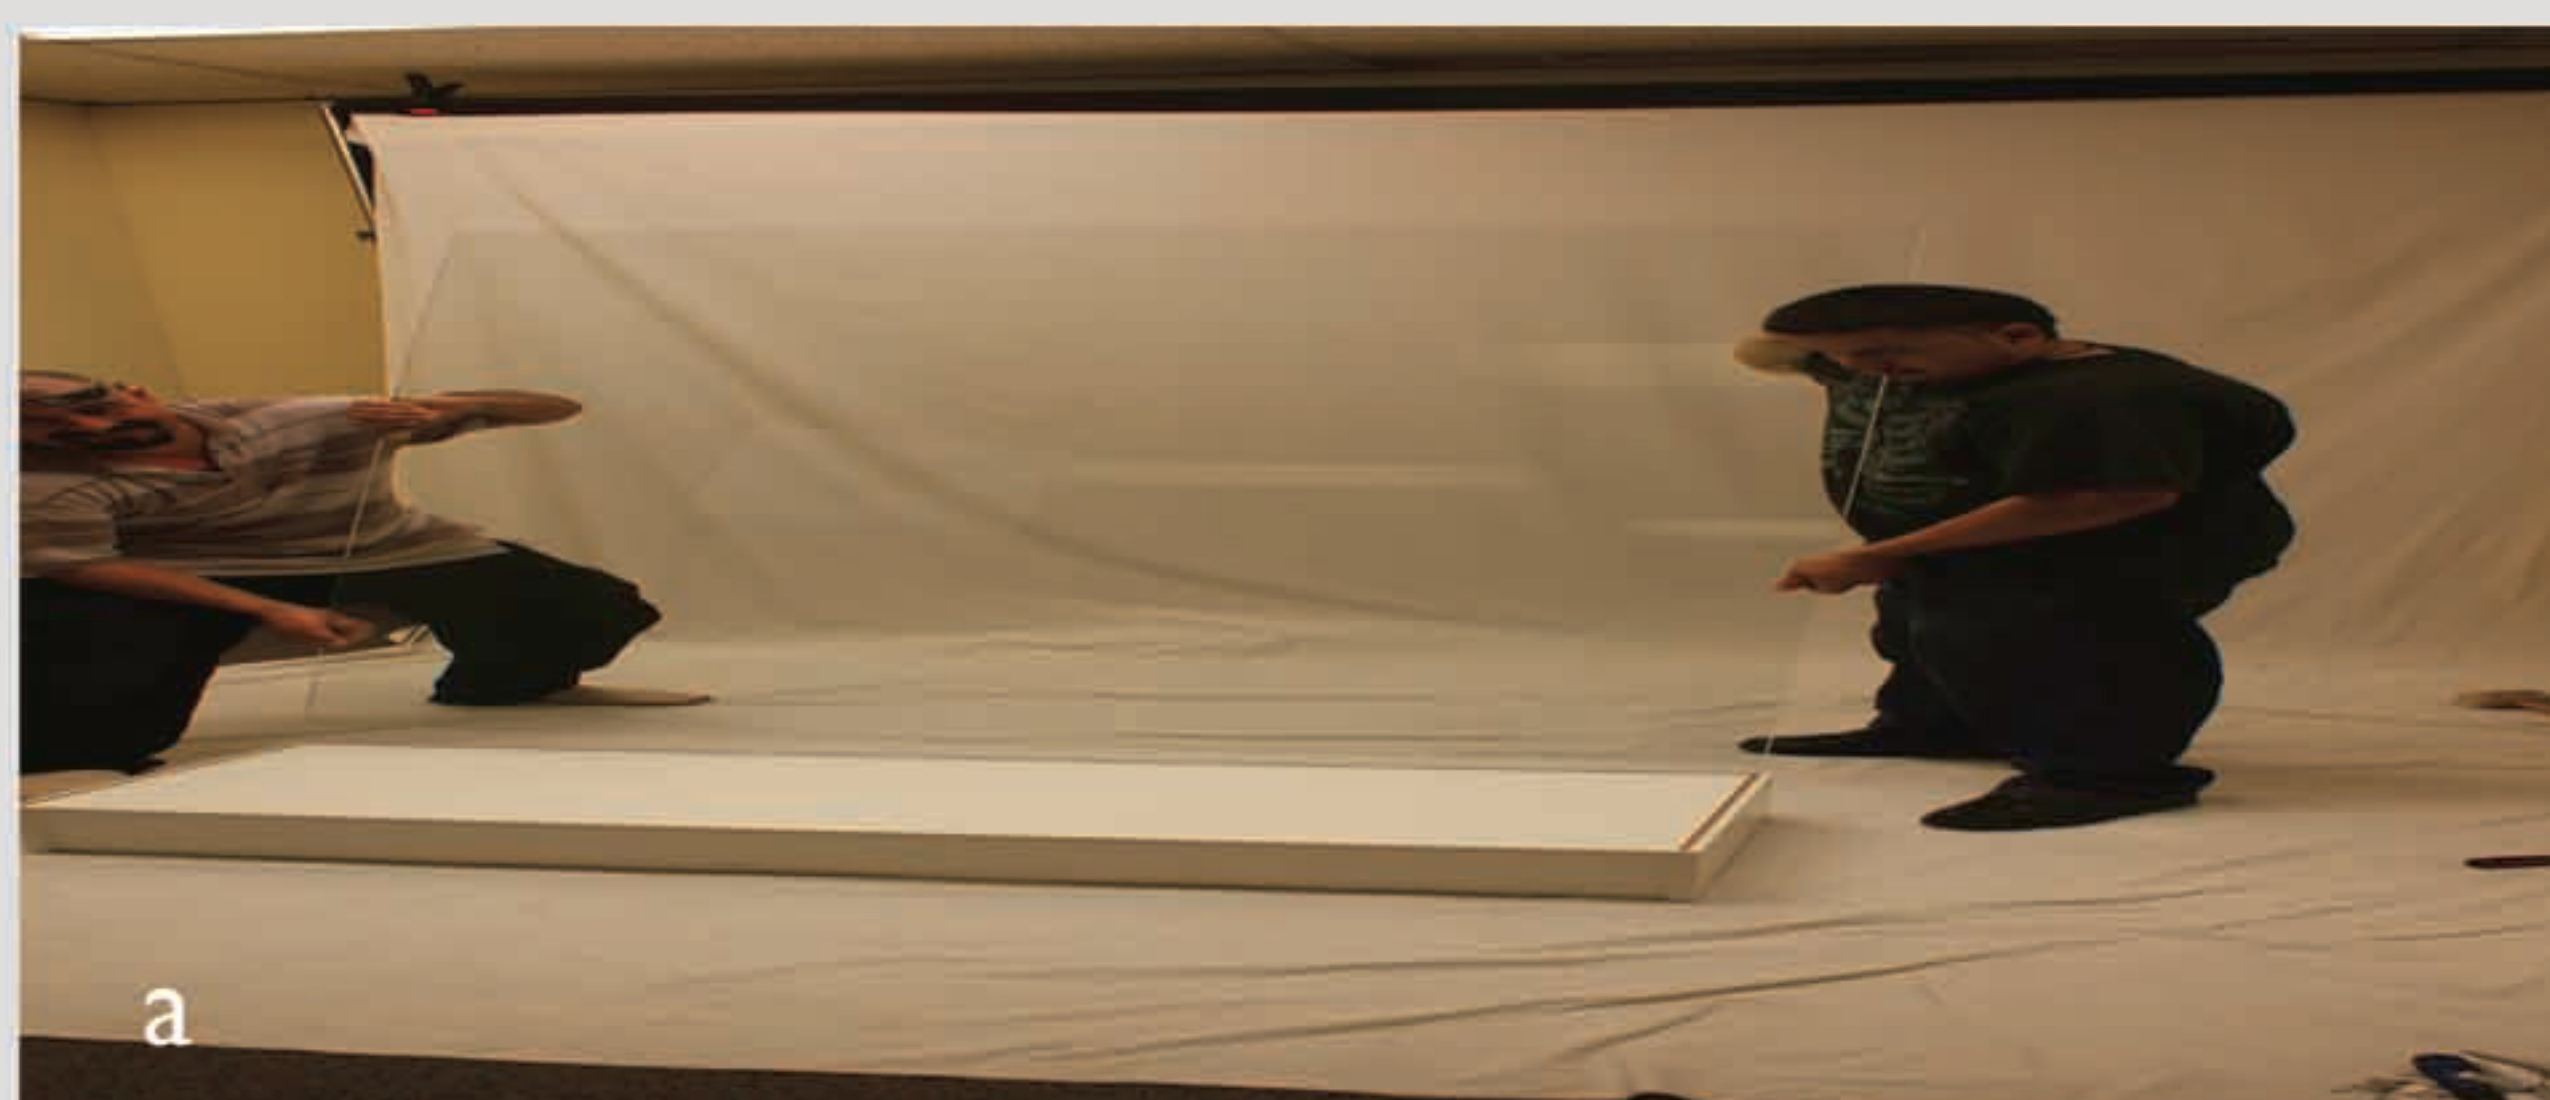





3.

## GLASS DOOR ASSEMBLE

GLASS DOOR (x2) TROX SCREW x 1/2" (x2)  
 HW117-4 (x1) PLASTIC GLAZING (x4)  
 HW116-4 (x1) TOP GUIDE (x4)  
 HW18-4 (x1) DOOR PULL (x2)  
 NE09034-4 (x2)  
 #6 x 1/2" PAN SCREW (x2)

1. CONNECT HW117-4 WITH TOP GLASS USING TROX SCREW x 1/2".
2. CONNECT HW116-4 WITH BOTTOM USING #6 x 1/2" PAN SCREW
3. SNAP HW18-4 INTO HW116-4.
4. ATTACH 2 GLASS GLAZING ON 24"L EDGE OF GLASS DOOR.
5. ATTACH NE09034-4 WITH GLASS DOOR.
6. ATTACH 2 TOP GUIDE ON TOP OF GLASS DOOR.
7. PLACE GLASS SHELF ON TO SHELF SUPPORT.
8. INSERT GLASS DOOR ON CASE.
9. ADHERE DOOR PULL ON GLASS DOOR WITH PROPER POSITION.

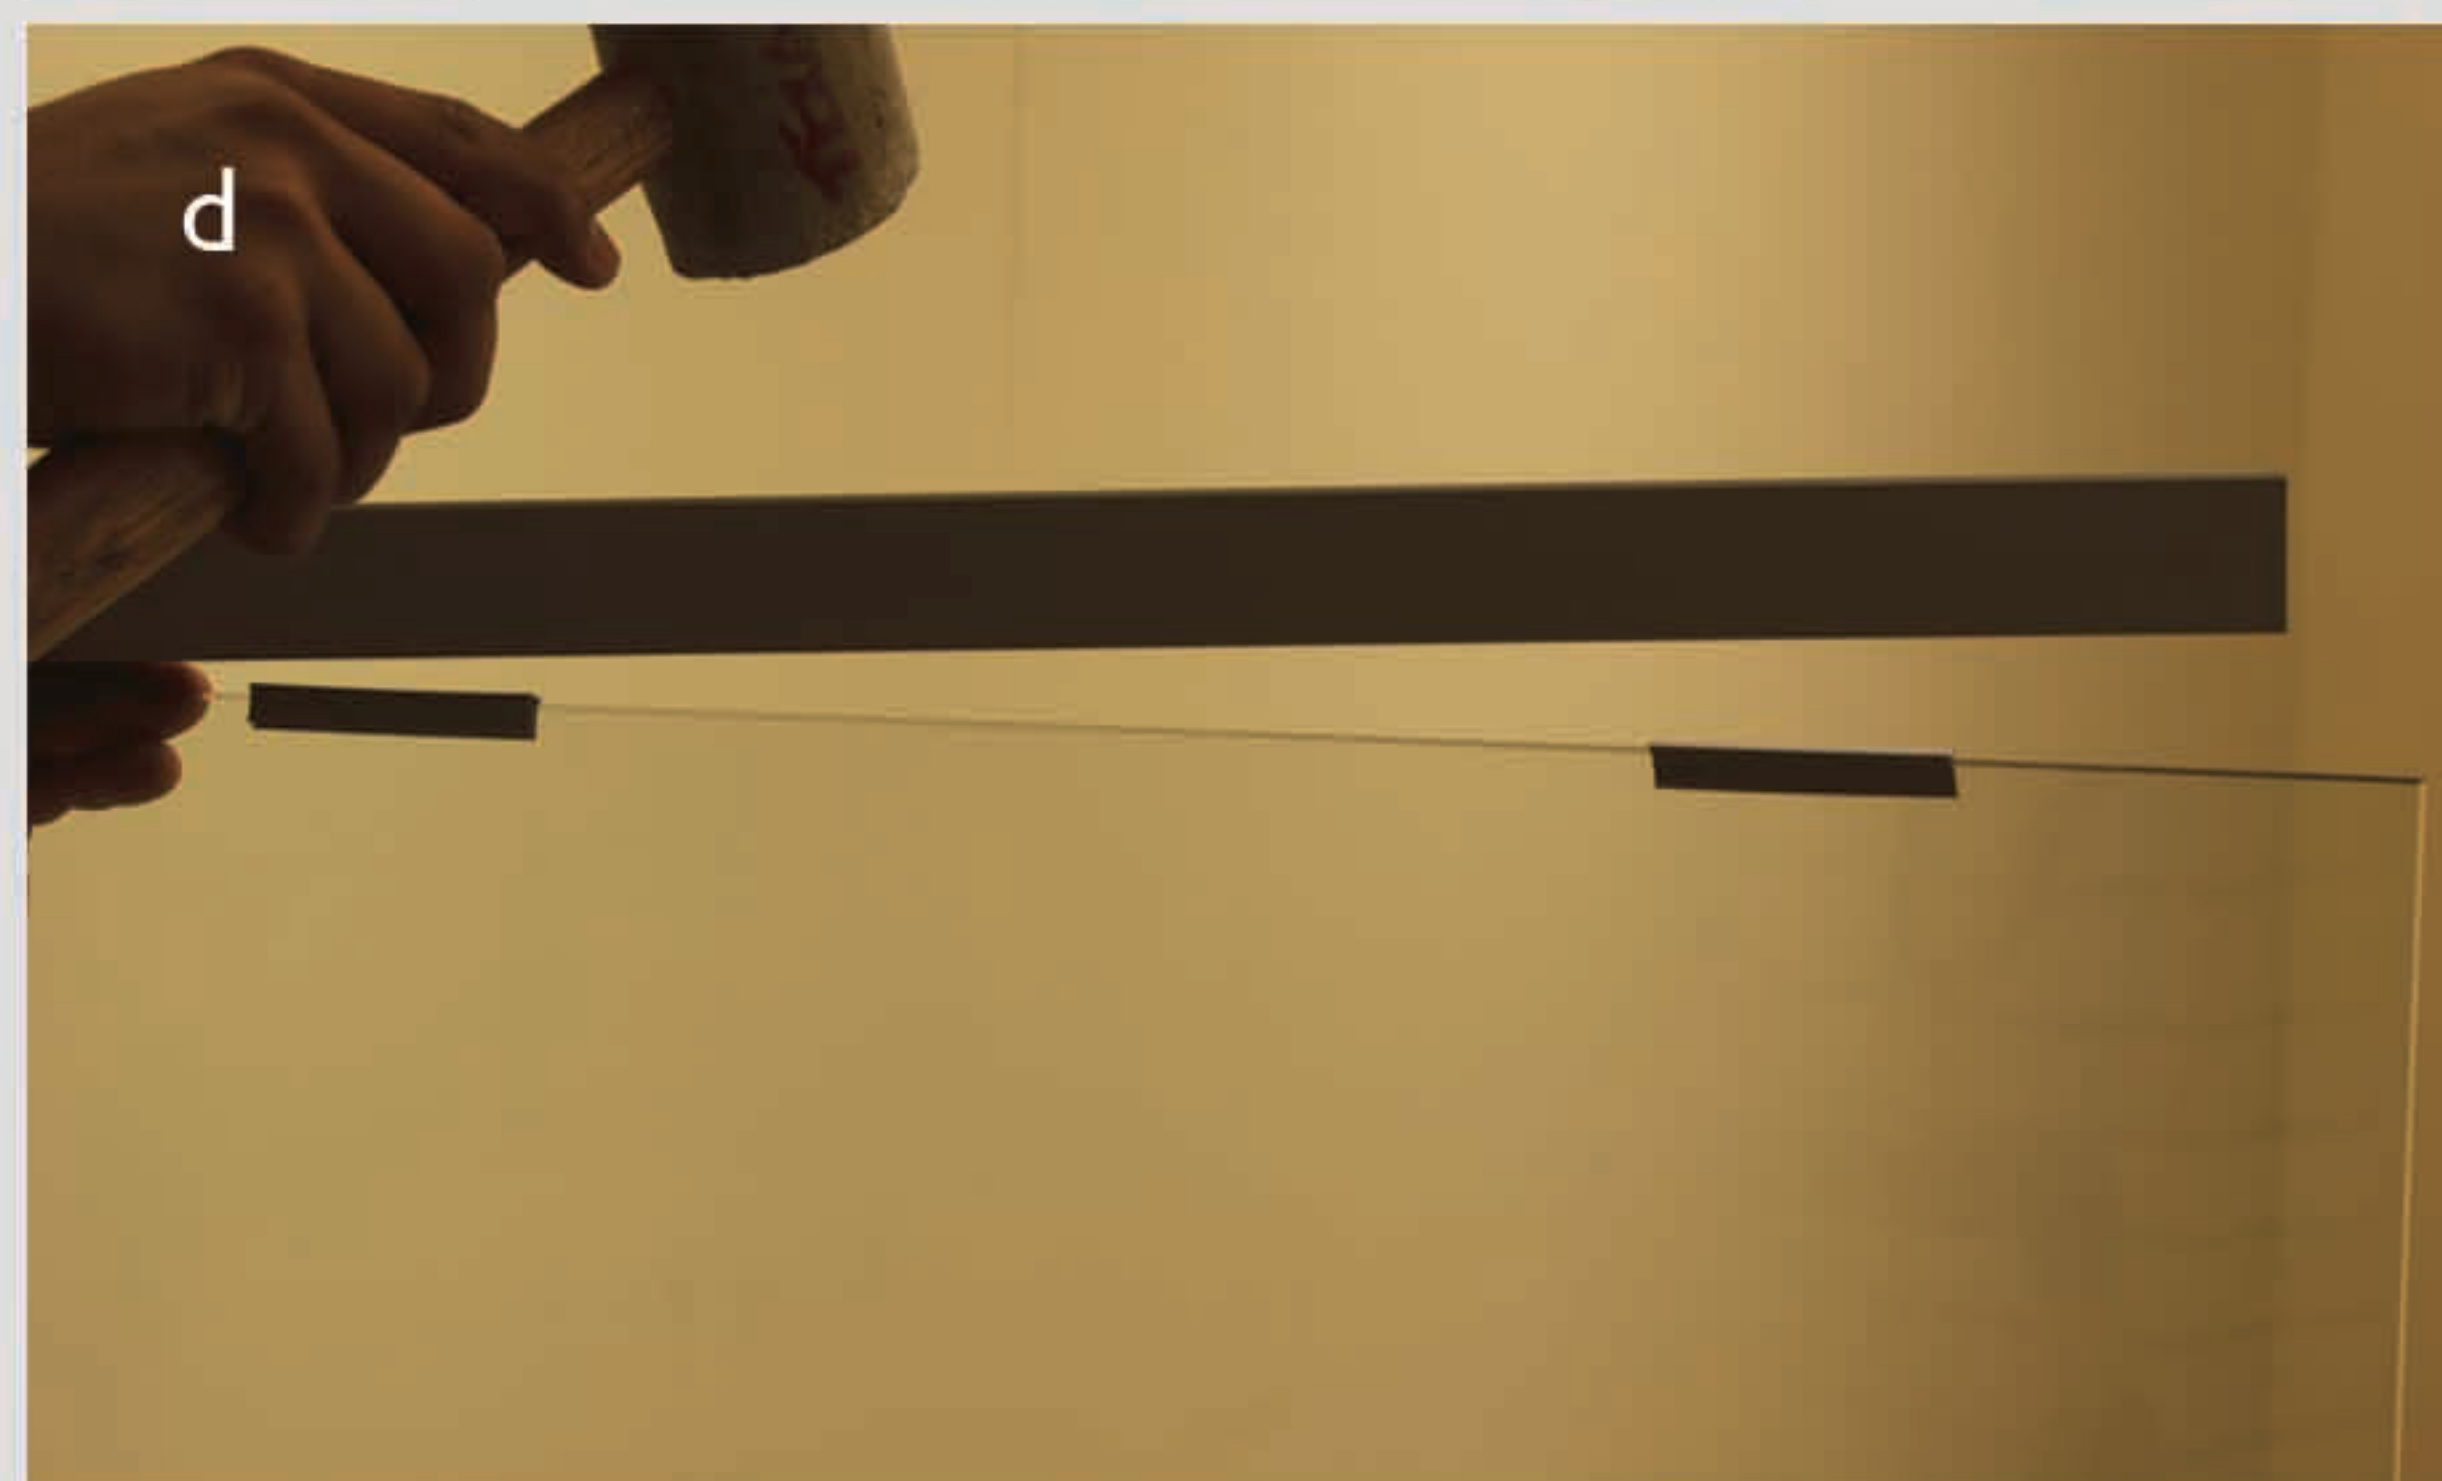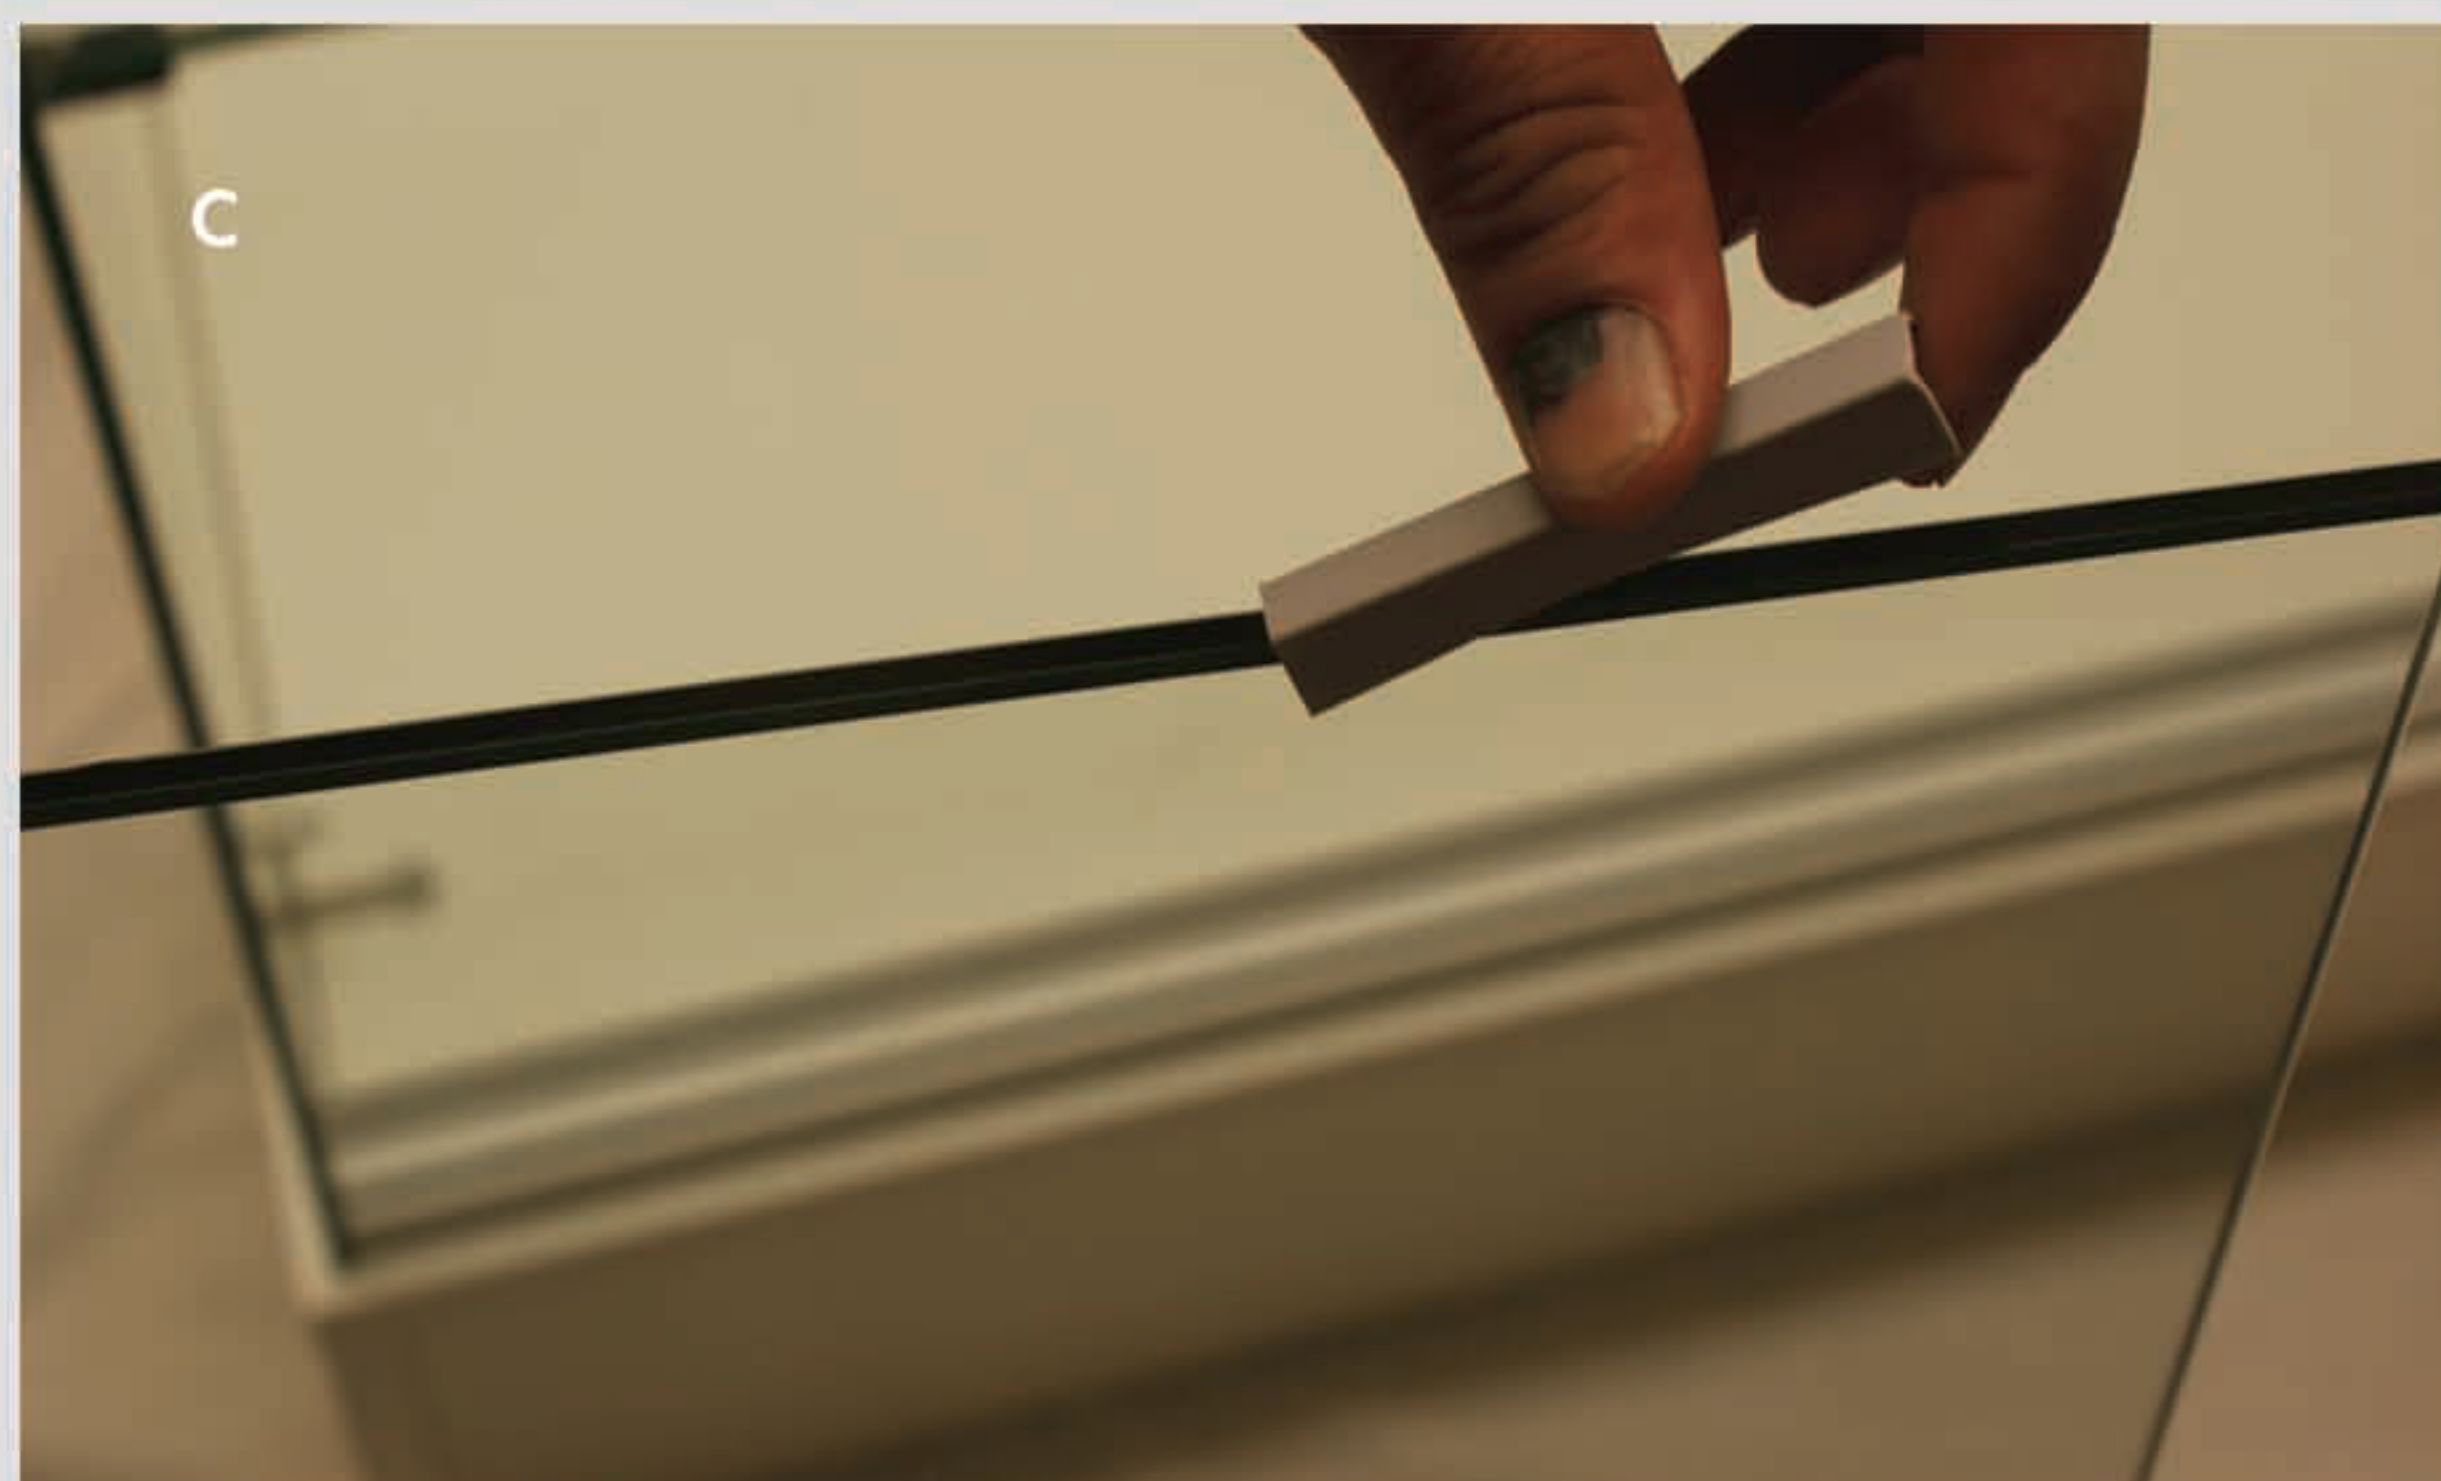

g

h