



TOP PANEL (x1)



BOTTOM PANEL (x1)



SIDE PANEL A (x2)



SIDE PANEL B (x2)



SIDE TOE KICK (x2)

TOE KICK (x2)



SLATWALL CUBIC TOWER ASSEMBLY INSTRUCTIONS



DAWSON JONES
STORE FIXTURES



2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

TOOLS NEEDED




NOTE: It is recommended that two persons assemble this unit.

1.

TOWER ASSEMBLE

SIDE PANEL A (x2)
SIDE PANEL B (x2)
#58 CAM LOCK (x12)
BOLT (x12)
DOWEL PIN (x4)

1. Connect 2 side panel A to side panel B using bolt.
2. Insert and tighten #58 cam locks.
3. Connect other side panel B using bolts.
4. Insert and tighten #58 cam locks.

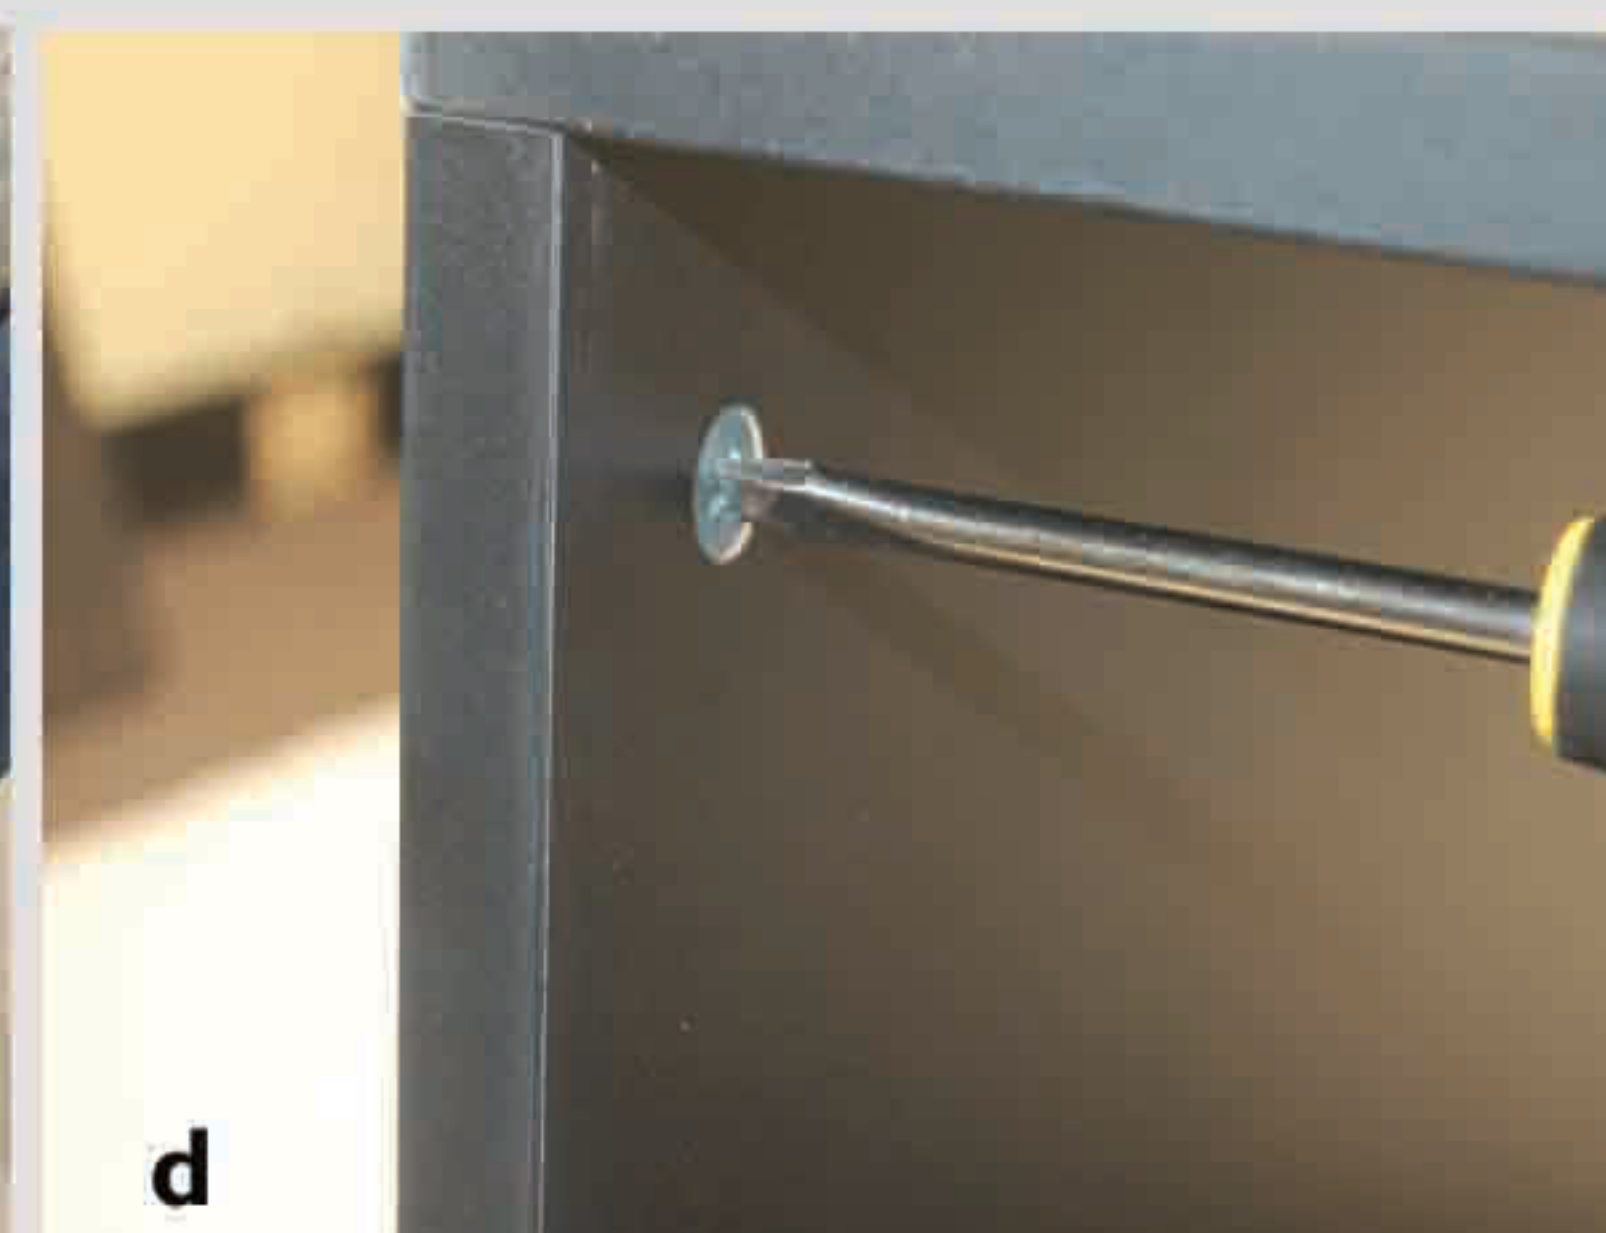

2.

BASE ASSEMBLE

BASE (x1)
#6x158 PHILLIPS SCREW (x8)

1. Connect base panel to tower using #6x158 phillips screws.





3.

TOE KICK ASSEMBLE

TOE KICK (x2)
SIDE TOE KICK (x2)
#58 CAM LOCK (x8)
BOLT (x8)
GLIDE (x4)

1. Connect toe kick to side toe kick using bolt.
2. Insert and tighten #58 cam lock.
3. Repeat 1 & 2 to connect 4 toe kick panels.
4. Attach glides on the toe kick.

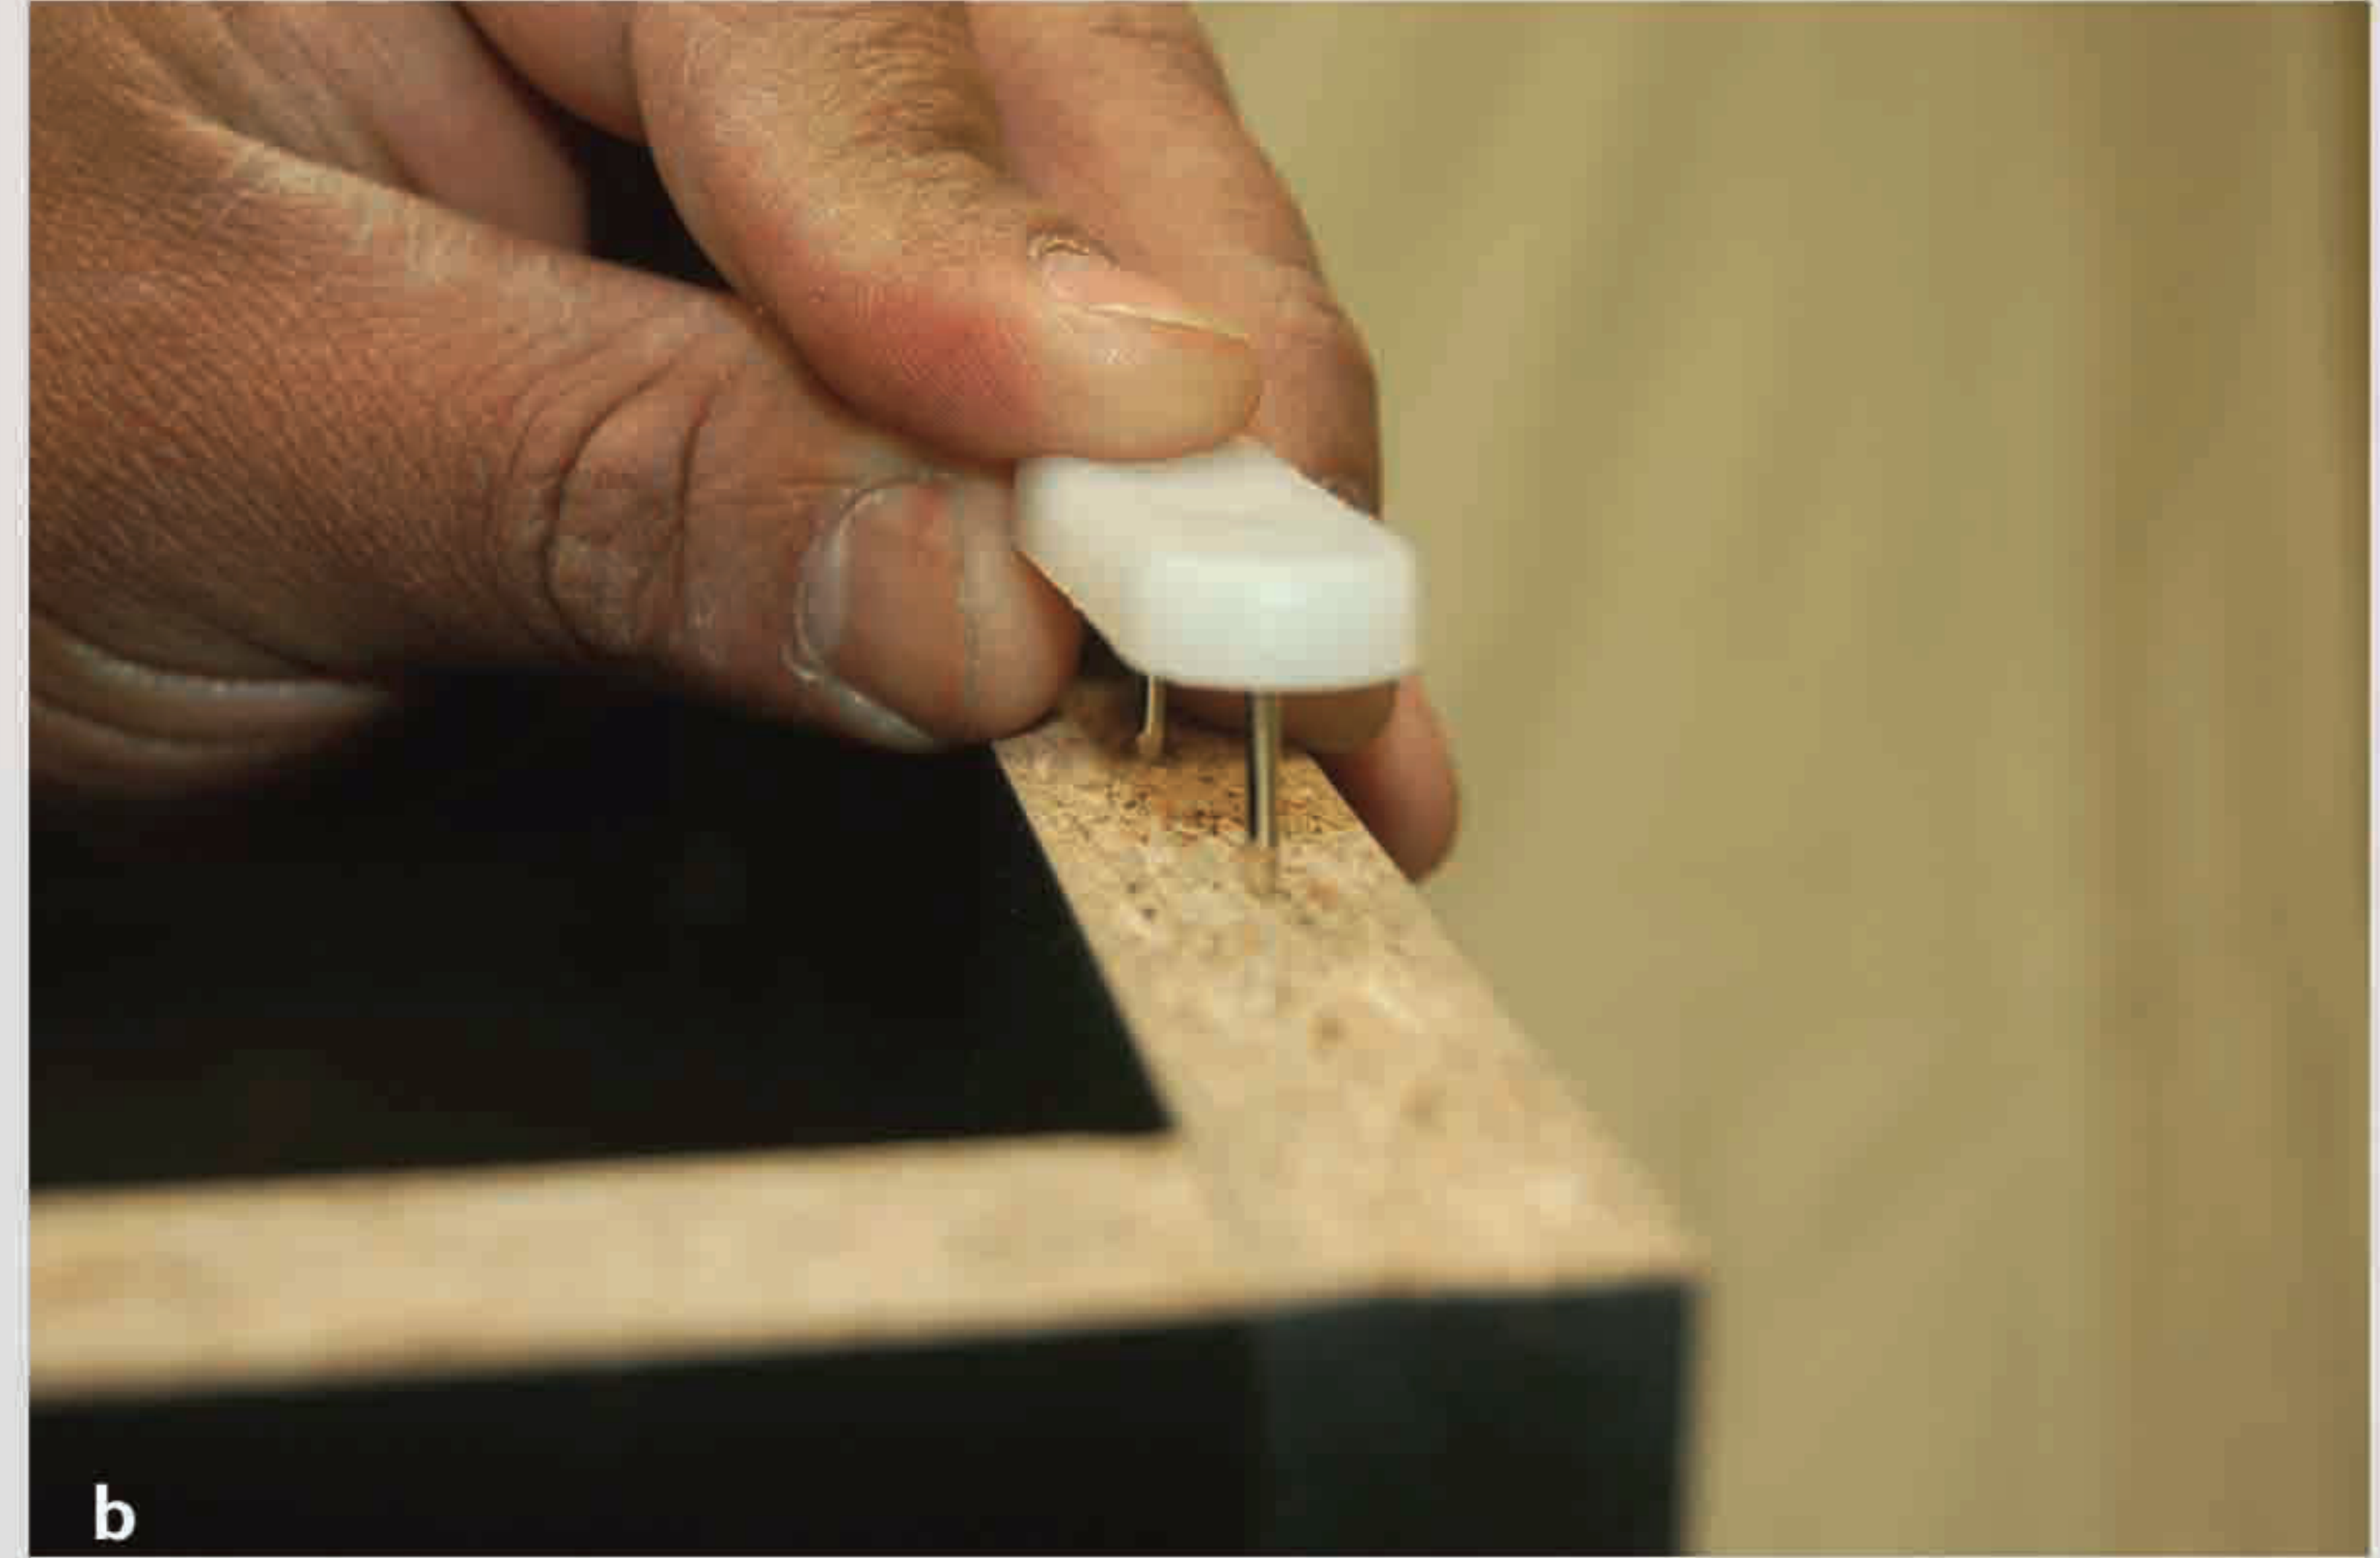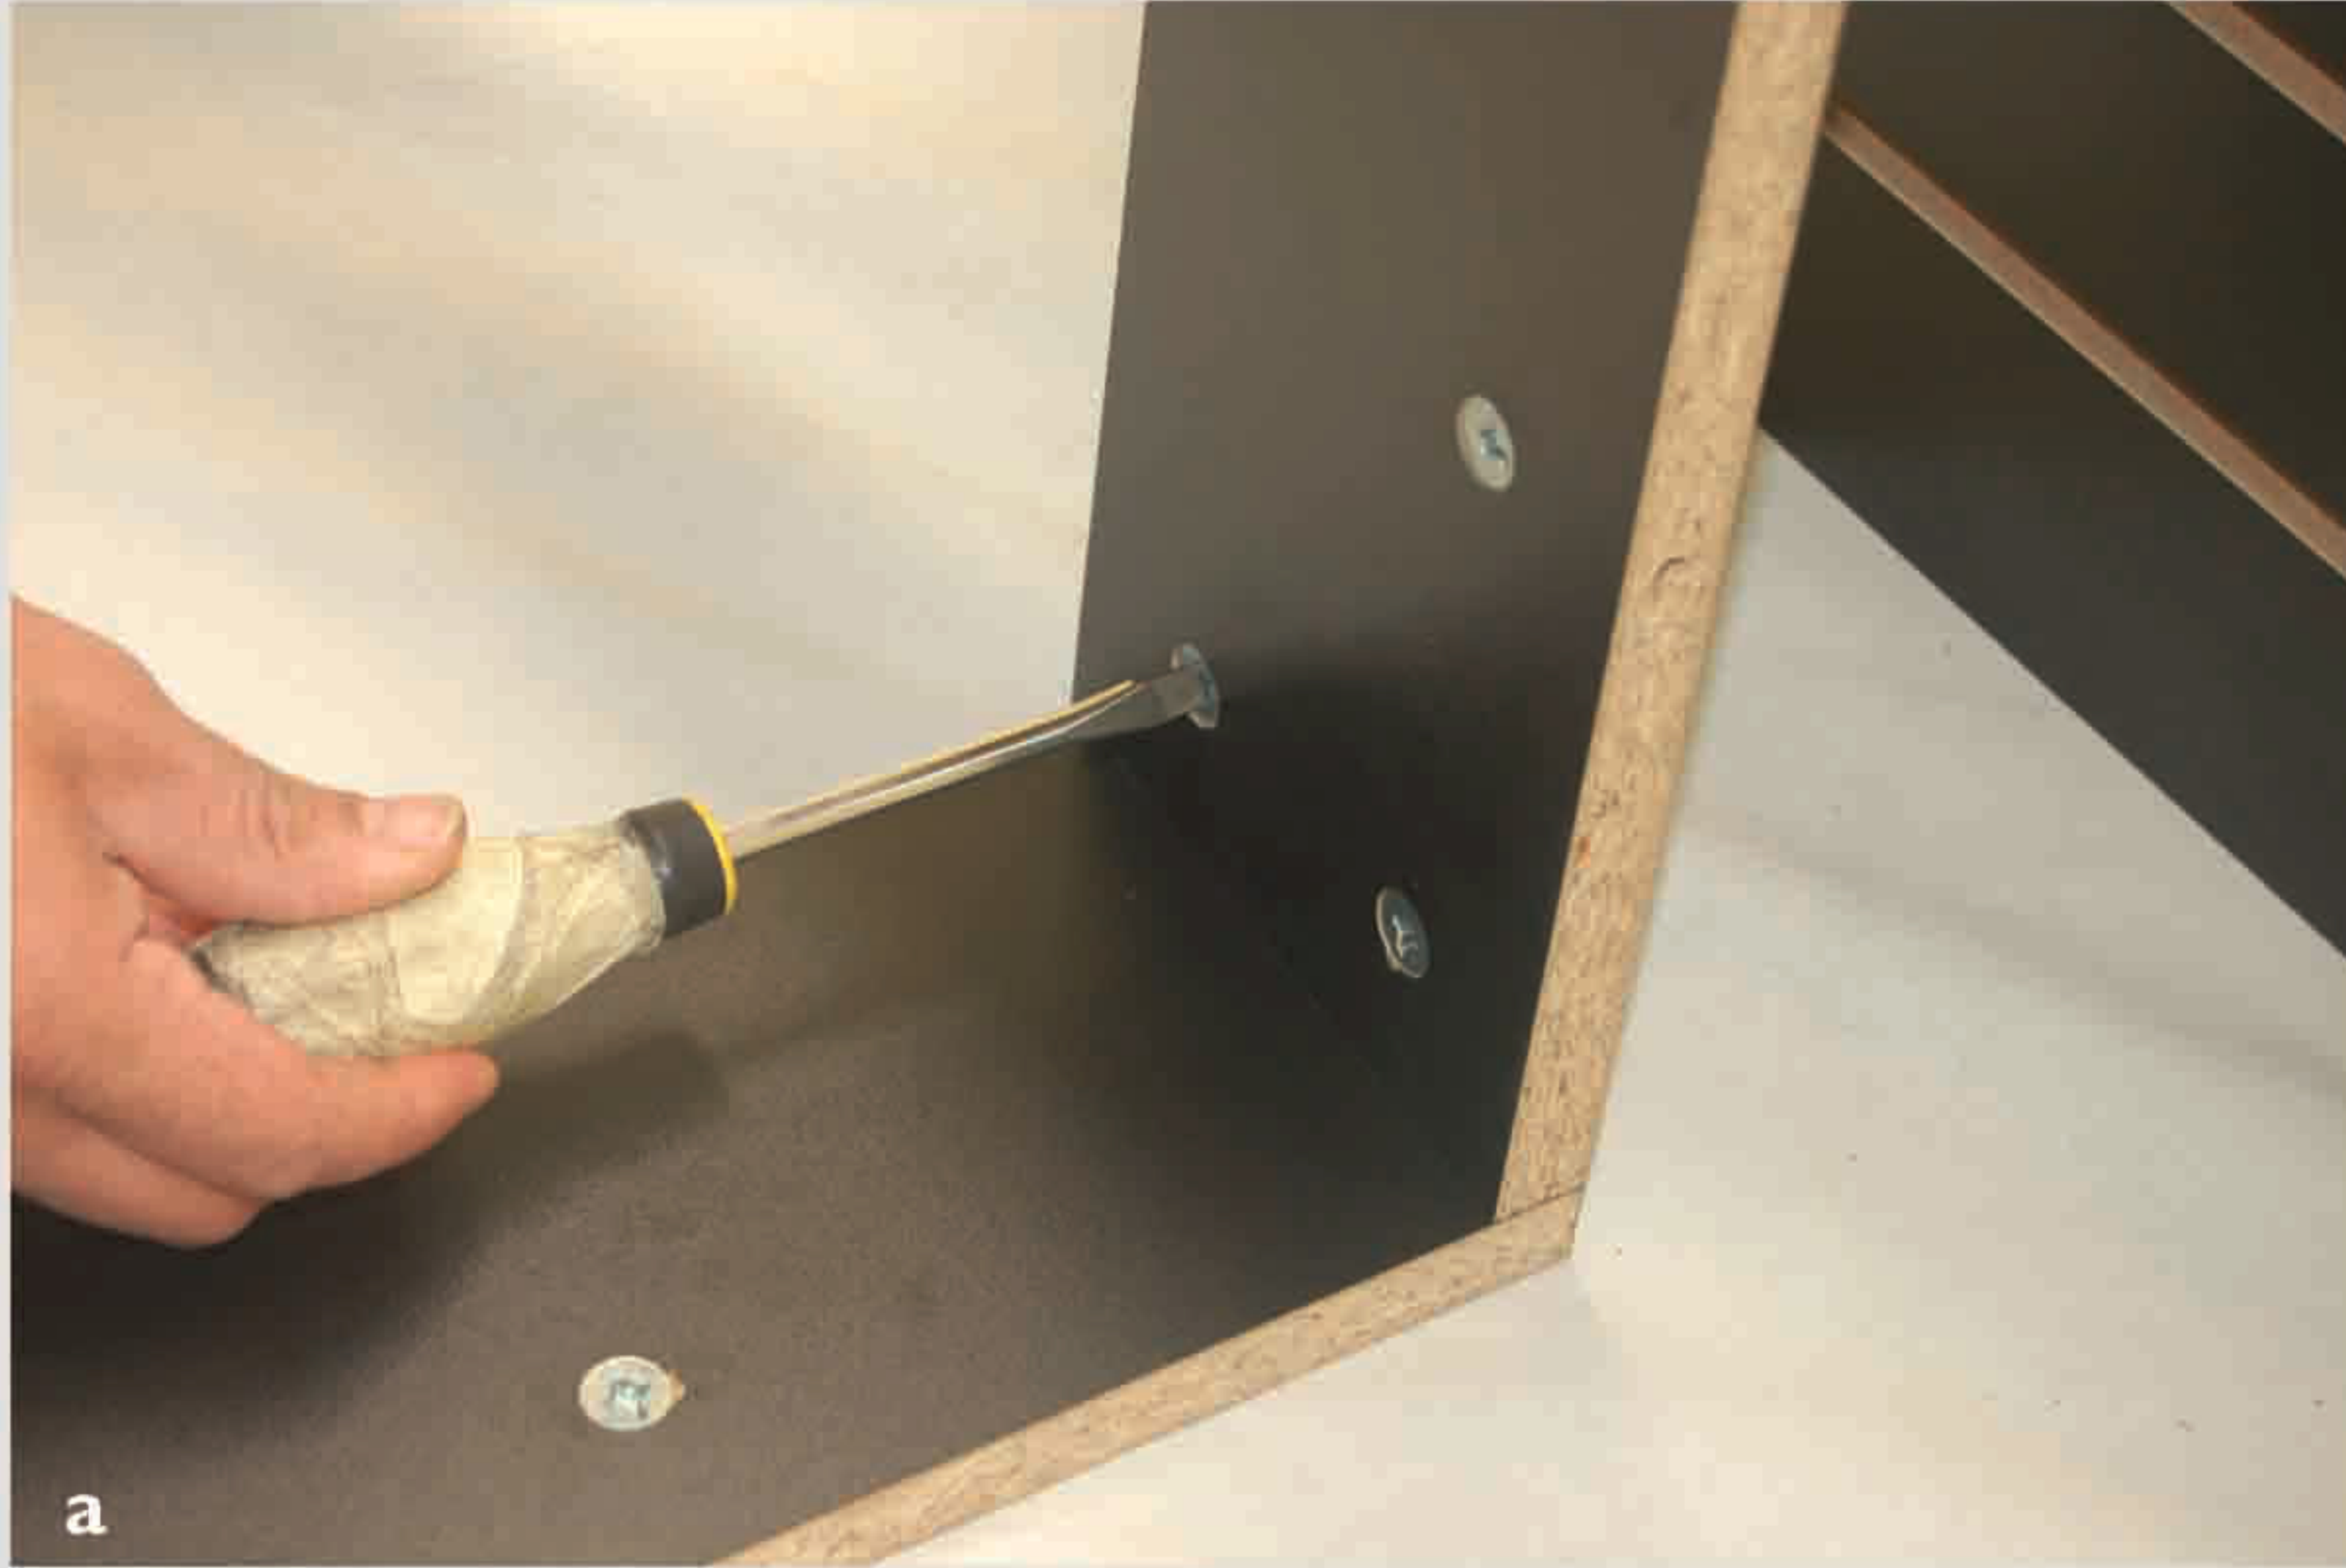

4.

ASSEMBLE TOE KICK WITH TOWER

#58 CAM LOCK (x8)
BOLT (x8)
TOP PANEL (x1)

1. Connect toe kick with tower using bolt.
2. Insert and tighten #58 cam lock.
3. Sit top panel on the top.

