


SLATWALL 2FT H UNIT
ASSEMBLY INSTRUCTIONS



DAWSON JONES
STORE FIXTURES




BOLT
(x28)

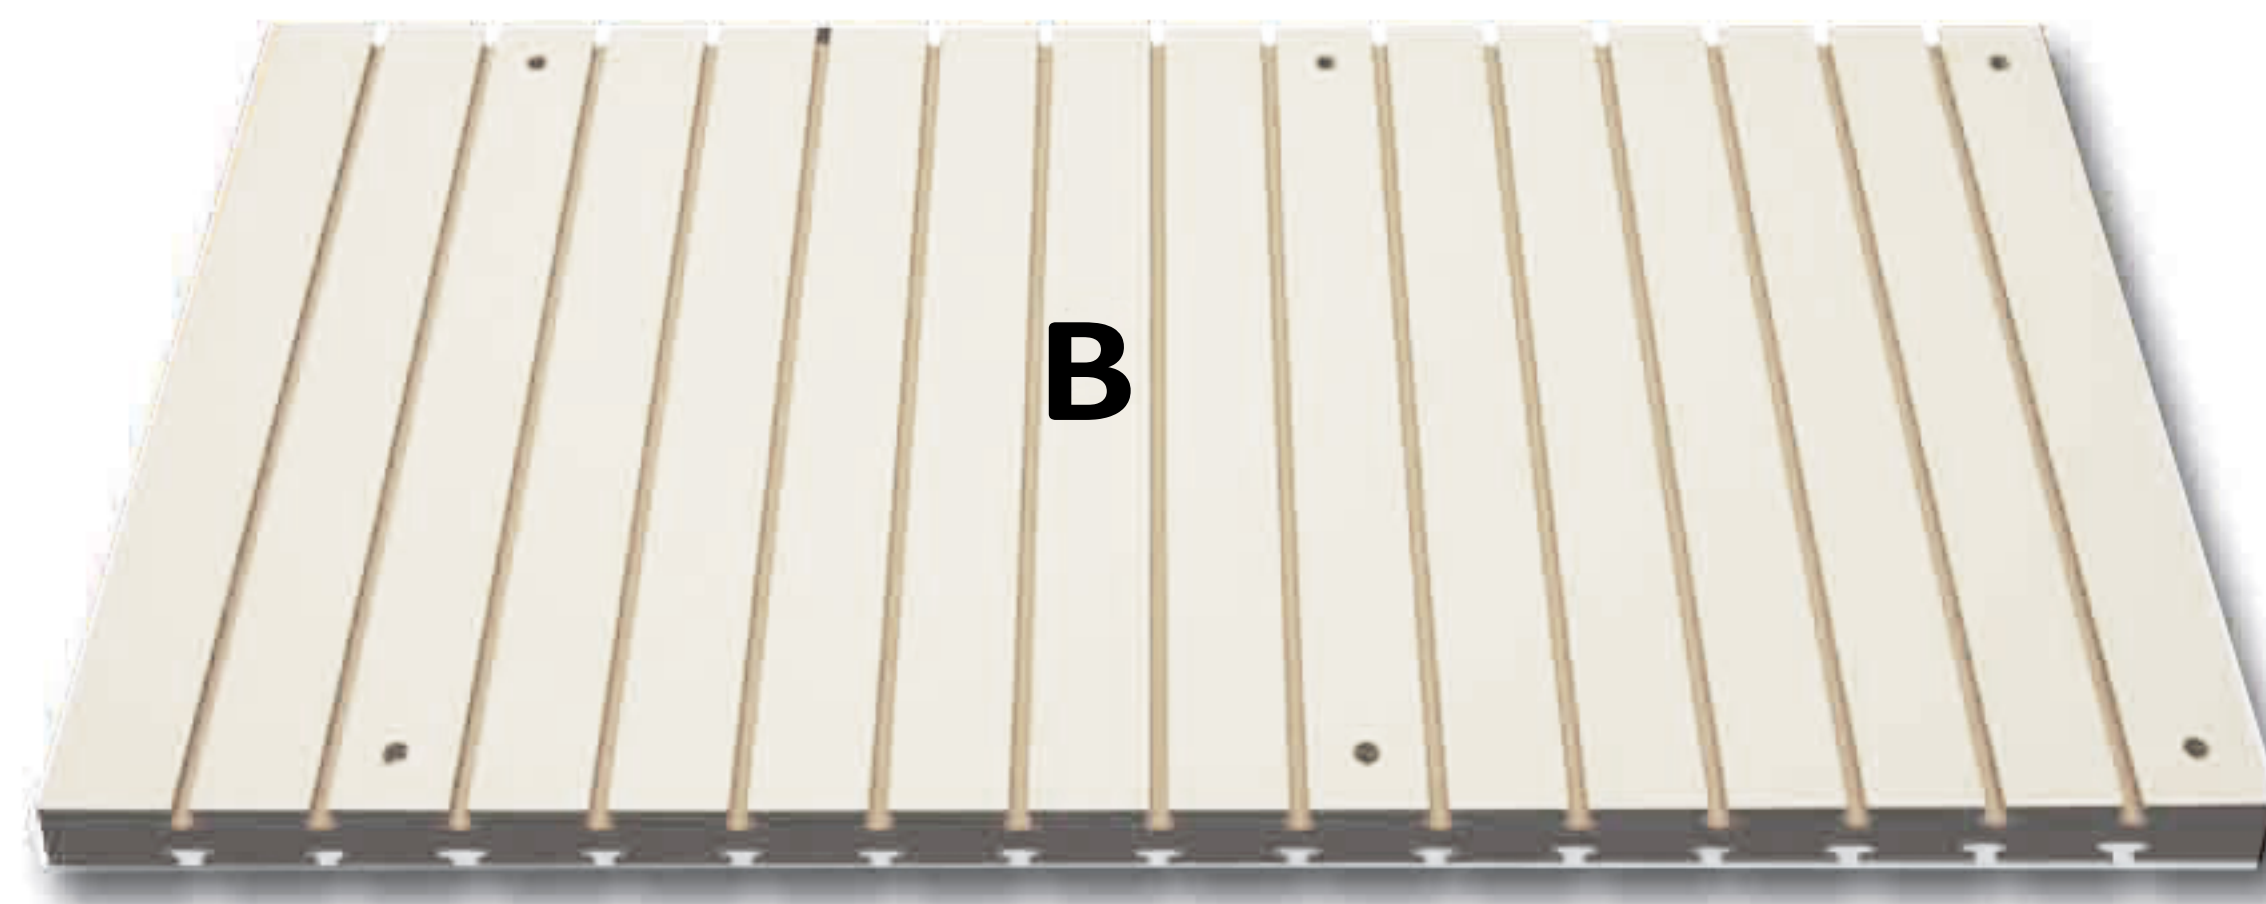

CENTER PANEL (x1)




WOOD SCREW
(x4)

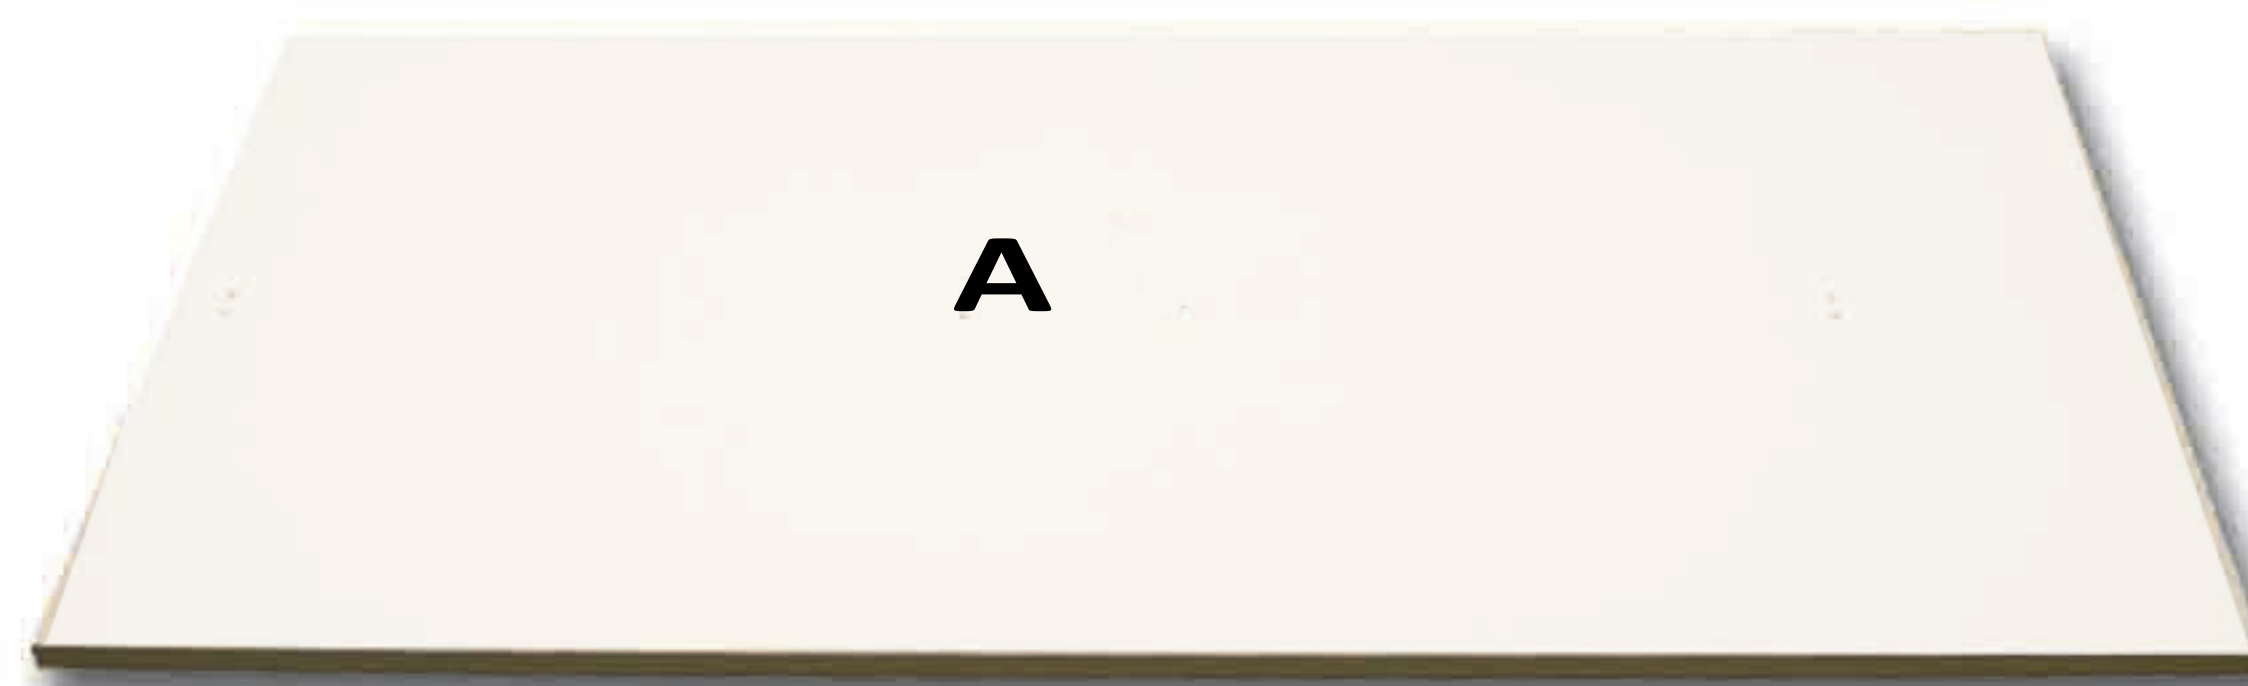

SIDE PANEL (x2)



GLIDE
(x4)

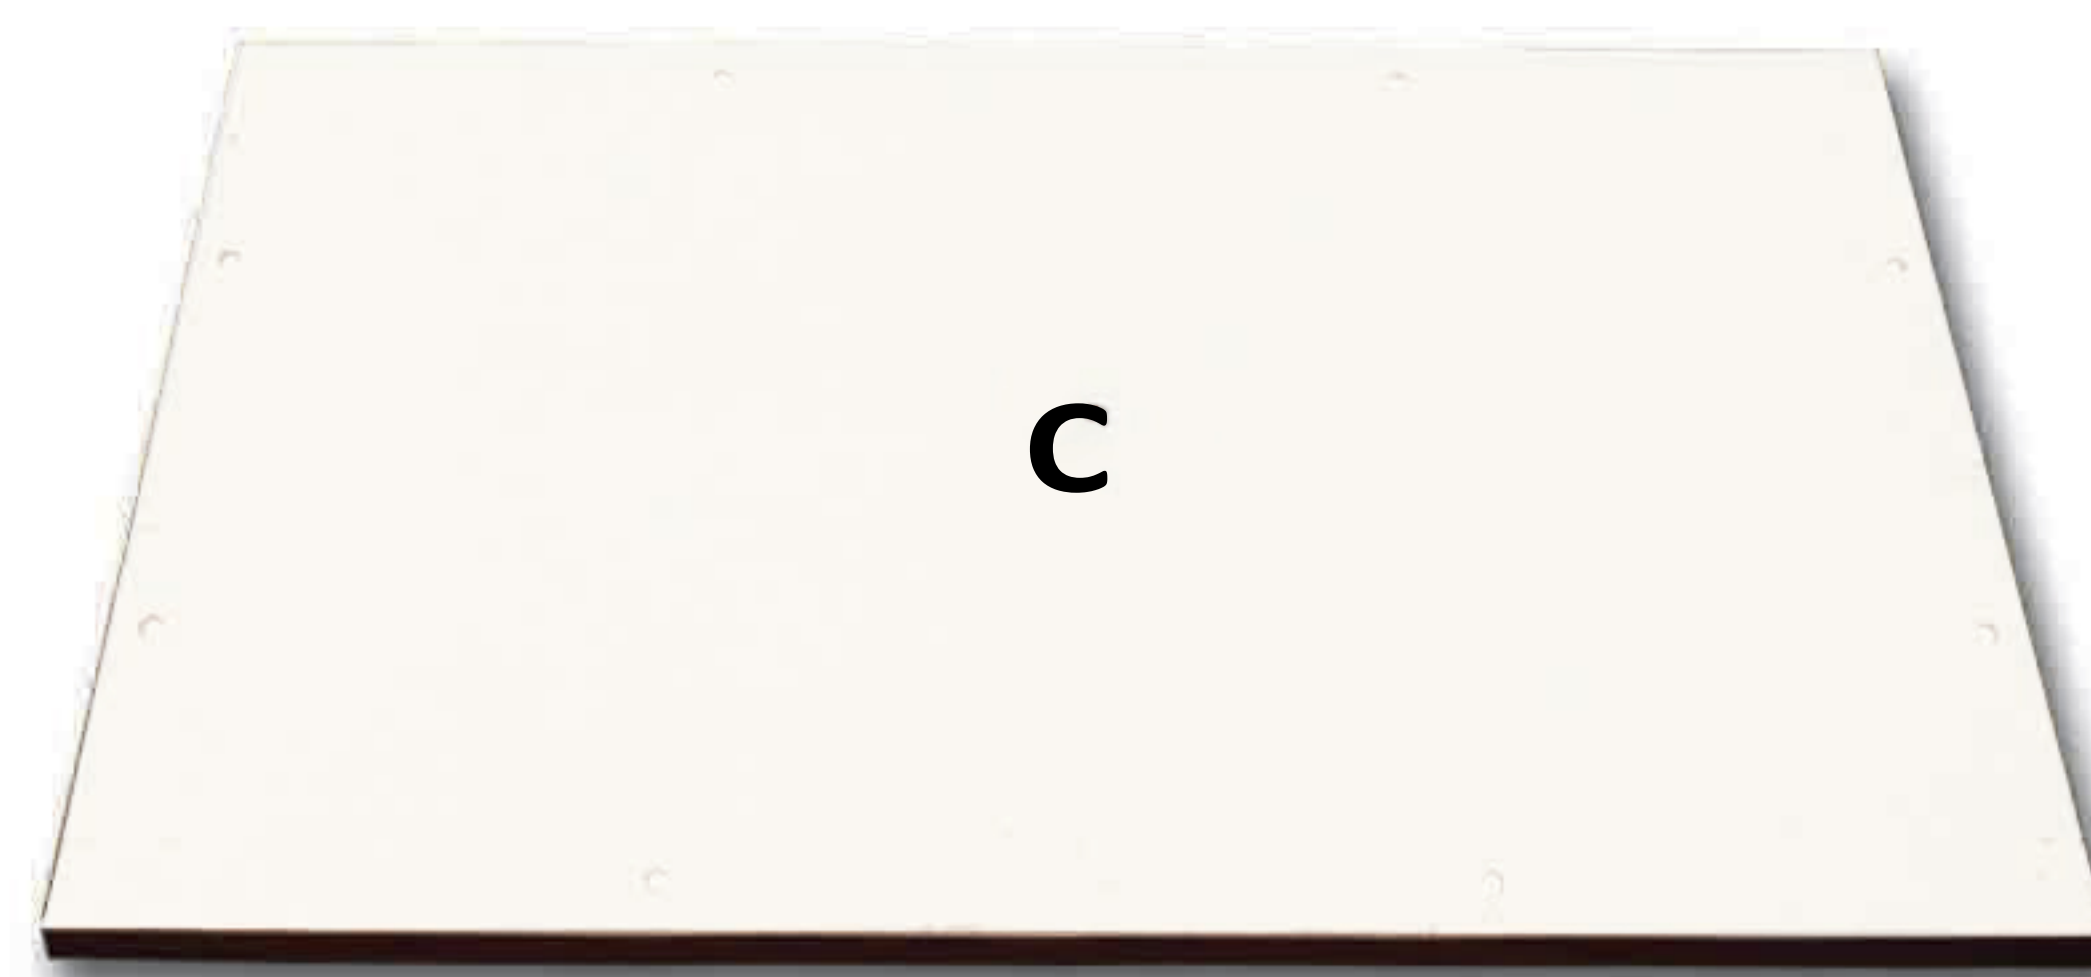

BOTTOM PANEL(x1)



#34 SCREW CAP
(x12)



TOE KCIK
(x2)



#58 CAM LOCK
(x28)



SIDE TOE KCIK
(x2)



2960 Amwiler Rd.
Atlanta, Ga 30360
dawsonjones.com
(800) 418-1954
(770) 458-7234

TOOLS NEEDED



NOTE: It is recommended that two persons assemble this unit.

1.

TOWER ASSEMBLE

CENTER PANEL (x1)

SIDE PANEL (x2)

#58 CAM LOCK (x12)

BOLT (x12)

1. Connect side panel to center panel using bolt.
2. Insert and tighten #58 cam locks.
3. Repeat 1 & 2 connect other side panel.



2.

BASE ASSEMBLE

BASE (x1)

WOOD SCREW (x4)

1. Connect base panel to tower using wood screws.





3.

TOE KICK ASSEMBLE

TOE KICK (x2)
SIDE TOE KICK (x2)
#58 CAM LOCK (x8)
BOLT (x8)
GLIDE (x4)

1. Connect toe kick to side toe kick using bolt.
2. Insert and tighten #58 cam lock.
3. Repeat 1 & 2 to connect 4 toe kick panels.
4. Attach glides to the toe kick.

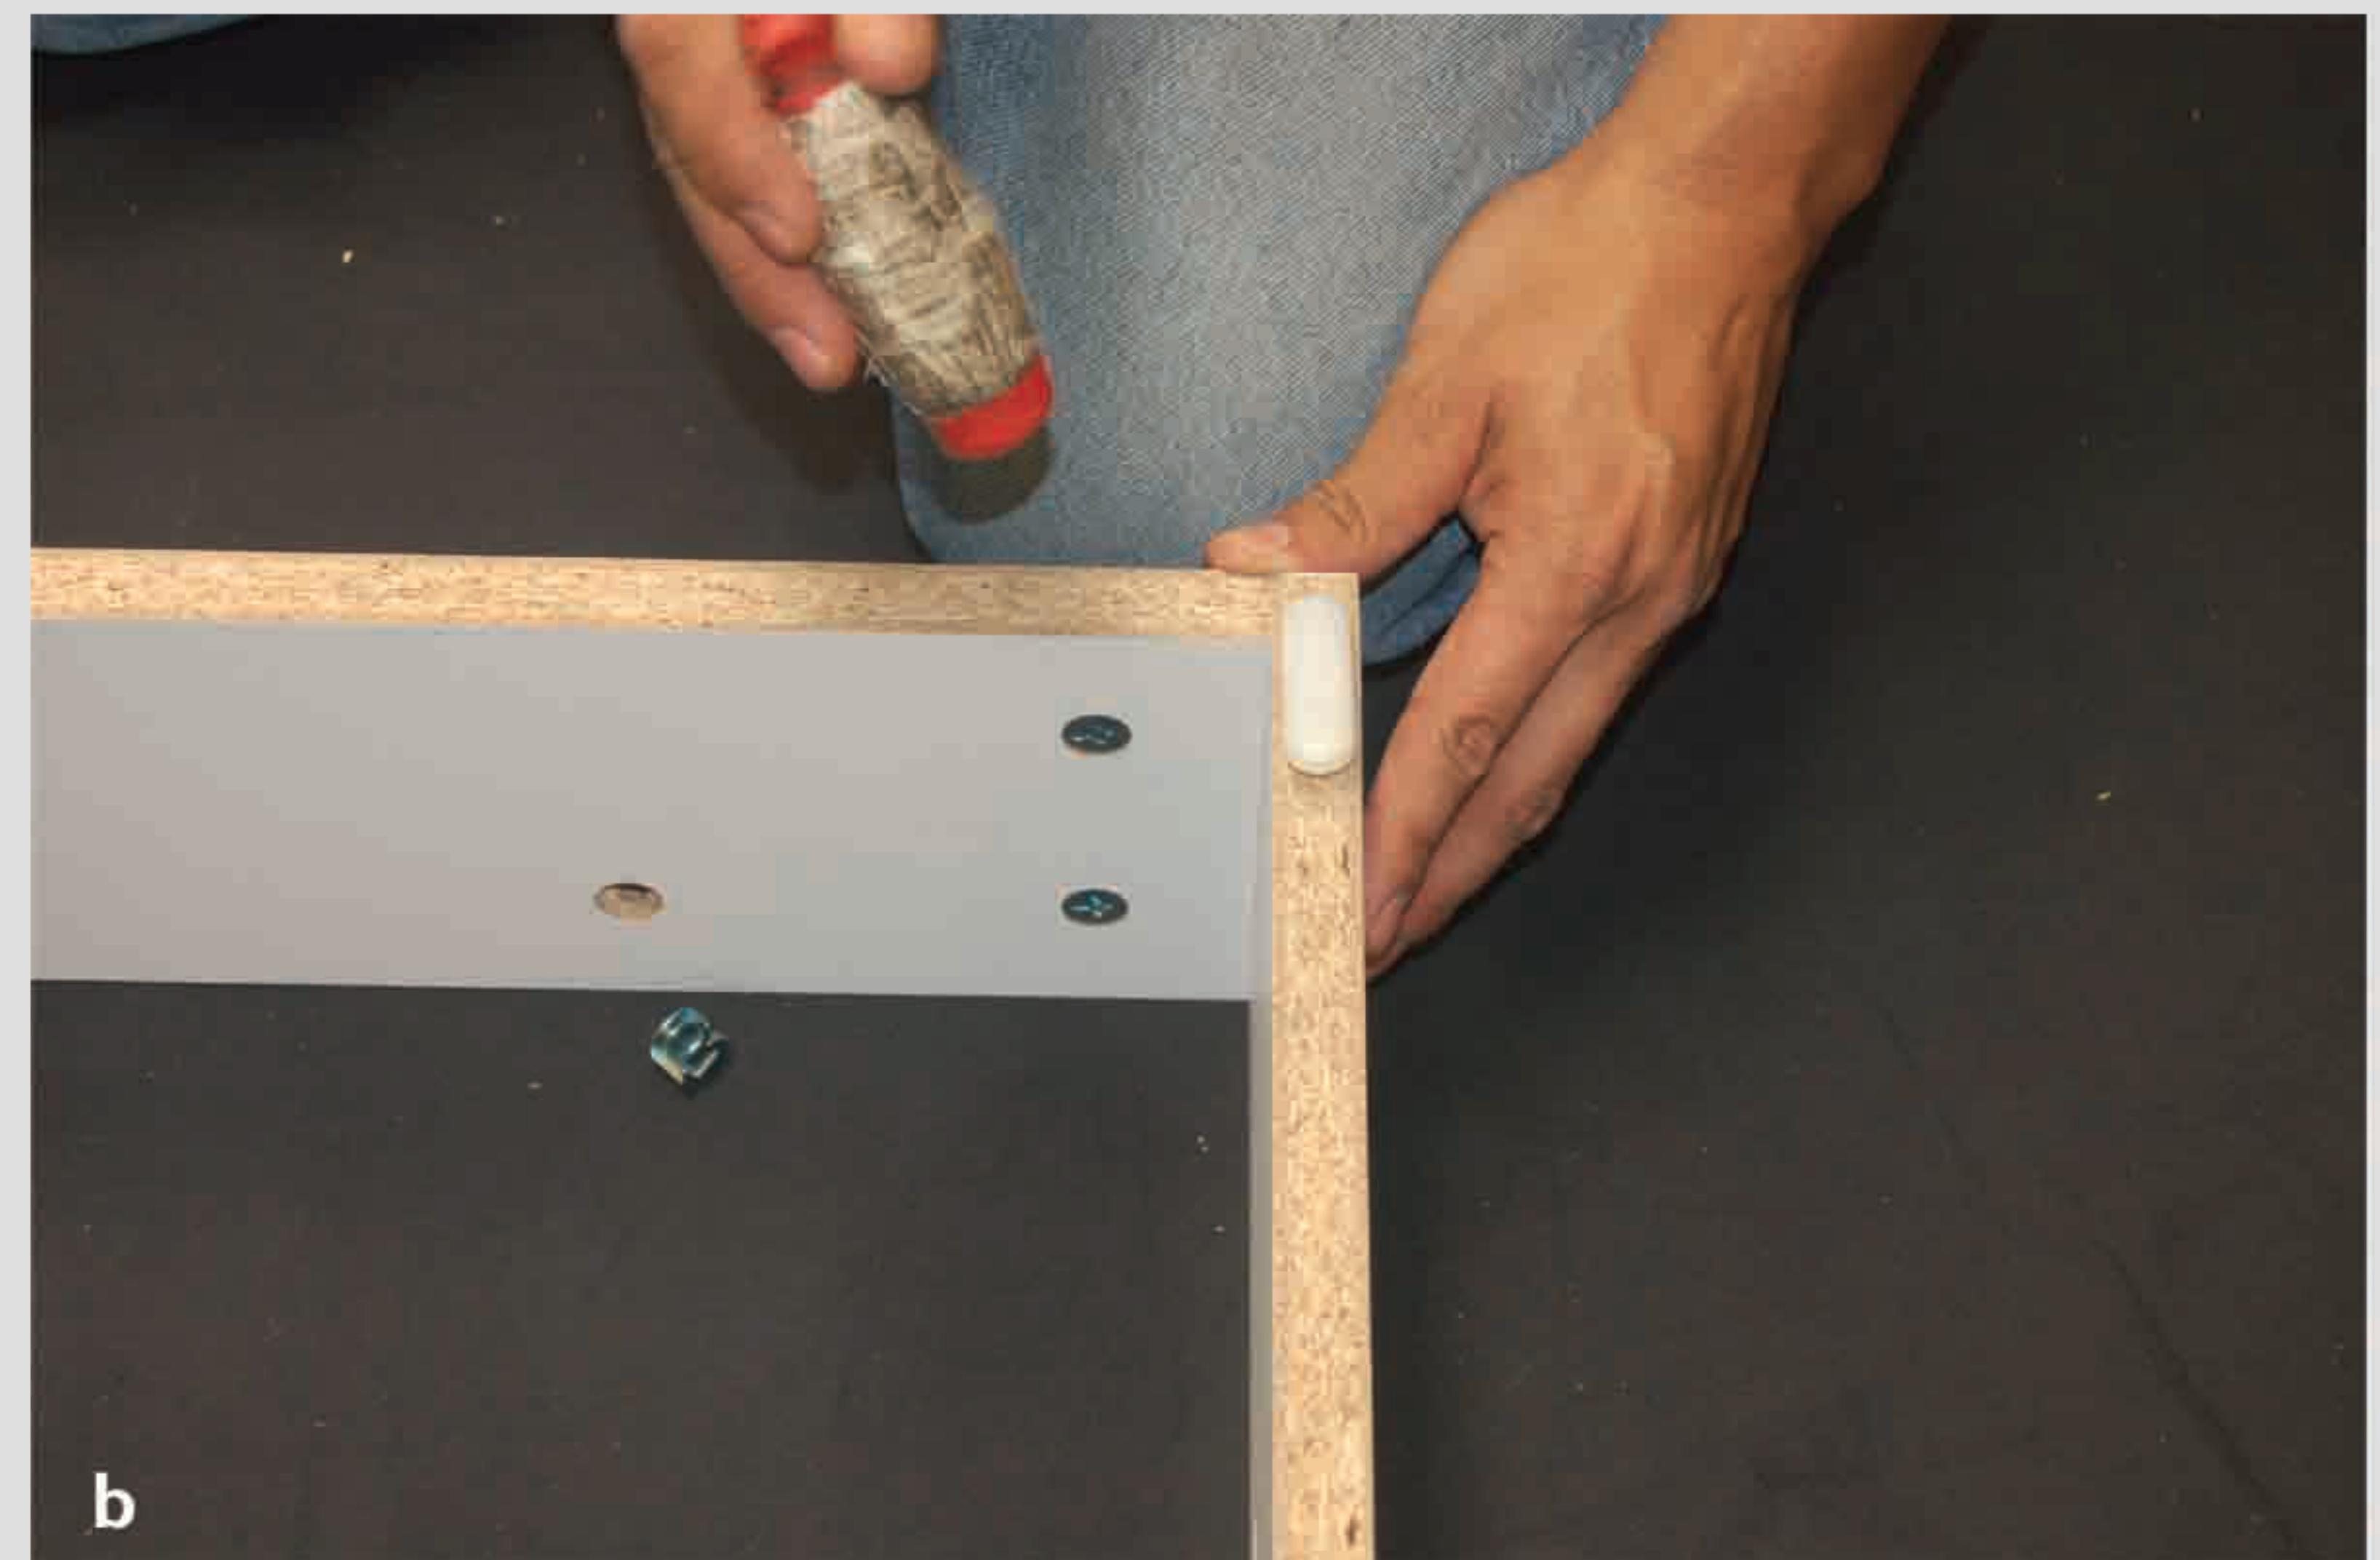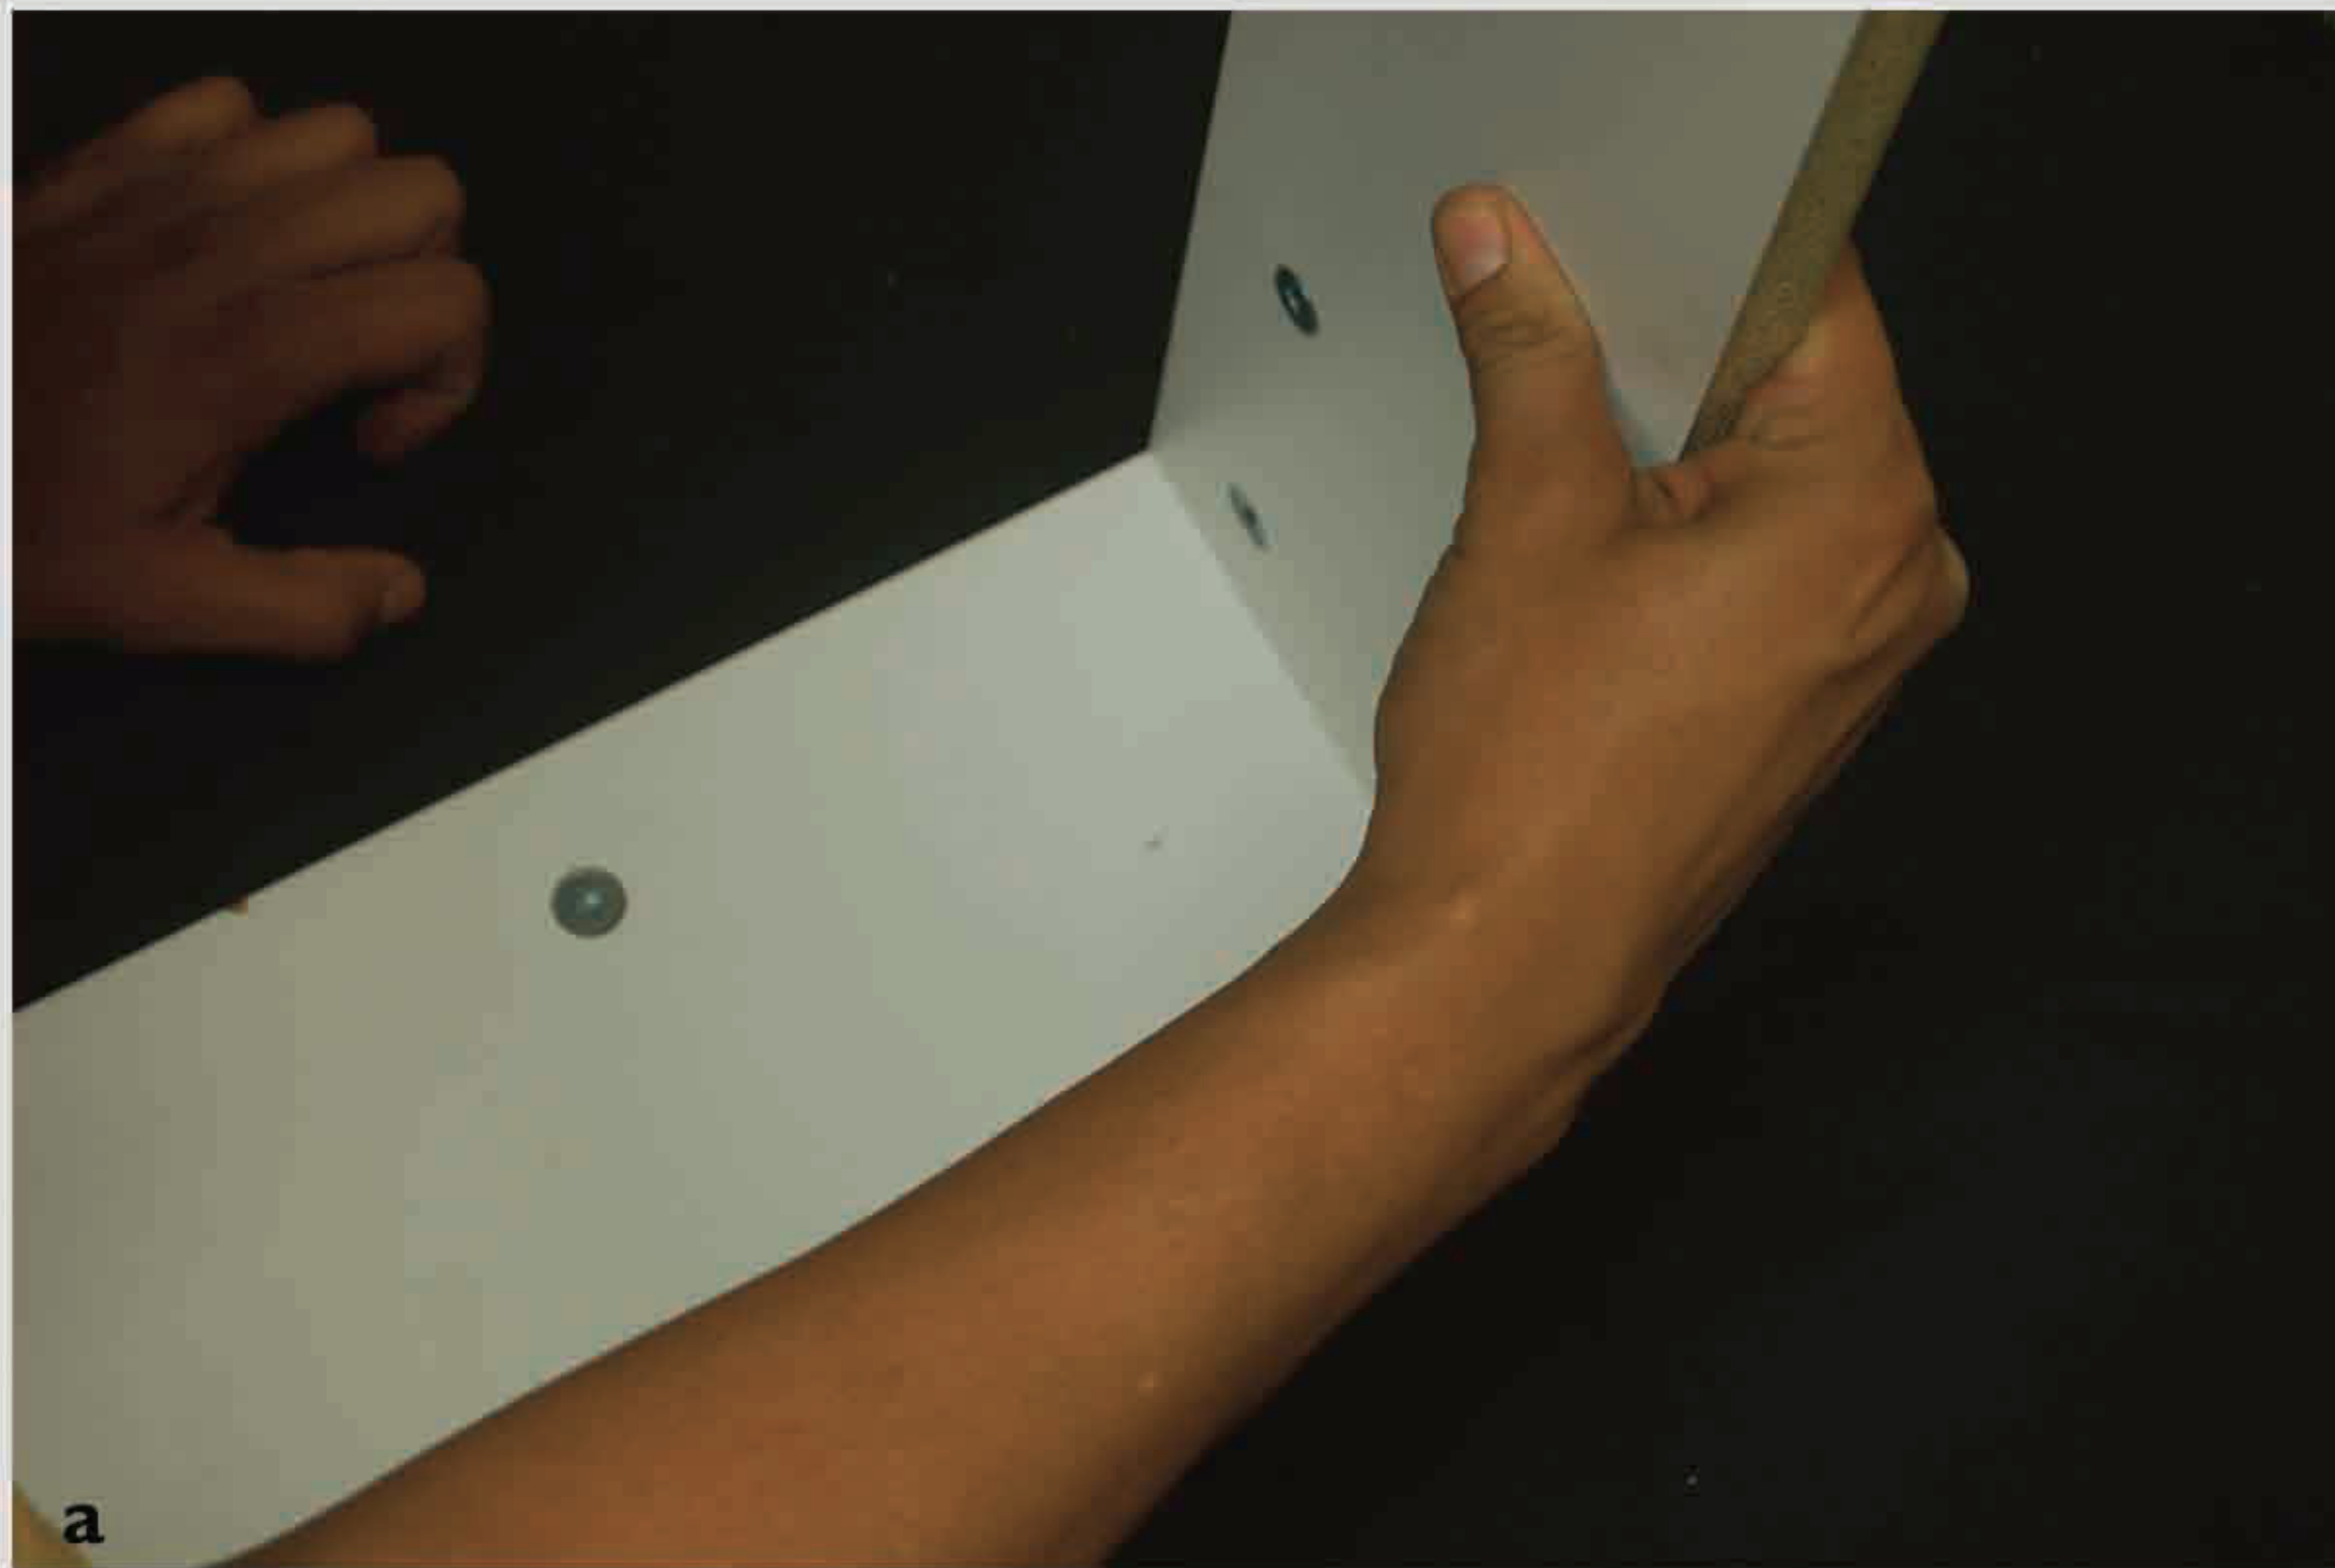

4.

ASSEMBLE TOE KICK WITH TOWER

#58 CAM LOCK (x8)
BOLT (x8)
#34 SCREW CAP (x12)

1. Connect toe kick with tower using bolt.
2. Insert and tighten #58 cam lock.
3. Attach #34 screw caps.

